



User Guide



English

HP Color LaserJet 8550, 8550N, 8550DN, 8550GN, 8550MFP Printer

User Guide

Use of this electronic document indicates that you accept the Terms of Use.

© 2000 Hewlett-Packard Company

Copyright Information

© Copyright 2001 Hewlett-Packard Company

All Rights Reserved.
Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

A user of an HP Color LaserJet 8550 printer is granted a license to: a) print hard copies of this HP Color LaserJet 8550 printer user guide for PERSONAL, INTERNAL or COMPANY use subject to the restriction not to sell, re-sell or otherwise distribute the hard copies: and b) place an electronic copy of this HP Color LaserJet 8550 printer user guide on a network server provided access to the electronic copy is limited to PERSONAL. INTERNAL users of the HP Color LaserJet 8550 printer.

Part number: C7096-online Second Edition: March, 2001

Warranty

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with respect to this information.
HEWLETT-PACKARD SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Hewlett-Packard shall not be liable for any direct, indirect, incidental, consequential, or other damage alleged in connection with the furnishing or use of this information.

Trademark Credits

Adobe[™] and PostScript[™] are trademarks of Adobe Systems Incorporated which may be registered in certain jurisdictions.

Arial[®] and Times New Roman[®] are U.S. registered trademarks of the Monotype Corporation.

CompuServe™ is a U.S. trademark of CompuServe, Inc.

dBASE® is a U.S. registered trademark of Borland International, Inc.

ENERGY STAR[®] is a U.S. registered service mark of the United States Environmental Protection Agency.

HP-UX 9.* and 10.0 for HP 9000 Series 700 and 800 computers are X/Open Company UNIX 93 branded products.

Lotus[®] 1-2-3 [®] and Lotus[®]
Symphony[®] are U.S. registered trademarks of Lotus
Development Corporation.

Microsoft[®], Windows[®], MS Windows[®], Windows NT[®], and MS-DOS[®] are U.S. registered trademarks of Microsoft Corporation.

PANTONE®* is Pantone, Inc.s check-standard trademark for color.

 $TrueType^{TM}$ is a U.S. trademark of Apple Computer, Inc.

UNIX® is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

All other products mentioned herein may be trademarks of their respective companies.

HP Customer Care

Thank you for your purchase. Along with your product, you receive a variety of support services from Hewlett-Packard and our support partners. These services are designed to give you the results you need, quickly and professionally.

Online Services:

For 24 hour access to information over your modem, we suggest these services:

World Wide Web

Printer drivers, updated HP printer software, plus product and support information may be obtained from the following URLs:

in the U.S. http://www.hp.com in Europe http://www2.hp.com

Printer drivers may be obtained from the following sites:

in Japan ftp://www.jpn.hp.com/drivers/

in Korea http://www.hp.co.kr
in Taiwan http://www.hp.com.tw
or the local driver website http://www.dds.com.tw

America Online

America Online/Bertelsmann is available in the U.S., France, Germany, and U.K. Printer drivers, updated HP printer software, and support documentation to help answer your questions about HP products are available. Use Keyword HP to start your tour or call 1 800-827-6364 preferred customer # 1118 to subscribe. In Europe, call the appropriate number below:

Austria 0222 58 58 485
France ++353 1 704 90 00
Germany 0180 531 31 64
Switzerland 0848 80 10 11
United Kingdom 0800 279 1234

CompuServe

Printer drivers, updated HP printer software, and interactive sharing of technical information with other members is available on CompuServe's "HP User's forums" (GO HP), or call 1 800-524-3388 and ask for representative #51 to subscribe. (CompuServe is also available in the U.K., France, Belgium, Switzerland, Germany, and Austria.)

Obtaining software utilities and electronic information:

For U.S. and Canada:

Phone:

(661) 257-5565

Fax:

(661) 257-6995

Mail:

Hewlett-Packard P.O. Box 907 Santa Clarita, CA 91380-9007 U.S.A.

For Asia-Pacific Countries or Regions:

Contact Fulfill Plus at (65) 740-4477 (Hong Kong, Indonesia, Philippines, Malaysia, or Singapore). For Korea, call (82) (2) 3270-0805 or (82) (2) 3270-0893.

For Australia, New Zealand, and India:

For Australia and New Zealand, call (61) (2) 565-6099. For India, call (91) (11) 682-6035.

For European English:

For U.K., call (44) (142) 986-5511. For Ireland and outside U.K., call (44) (142) 986-5511.

HP direct ordering for accessories or supplies:

Call (800) 538-8787 (U.S.) or (800) 387-3154 (Canada).

HP Support Assistant compact disc:

This support tool offers a comprehensive online information system designed to provide technical and product information on HP products. To subscribe to this quarterly service in the U.S. or Canada, call (800) 457-1762. In Hong Kong, Indonesia, Philippines, Malaysia, or Singapore, call Fulfill Plus at (65) 740-4477.

HP Service Information:

To locate HP-Authorized Dealers, call (800) 243-9816 (U.S.) or (800) 387-3867 (Canada).

HP Service Agreements:

Call (800) 835-4747 (U.S.) or (800) 268-1221 (Canada). Extended Service (800) 446-0522.

HP FIRST:

HP FIRST Fax will deliver detailed troubleshooting information on common software and troubleshooting tips for your HP product. Call from any touch tone phone and request up to three documents per call. These documents will be sent to the fax of your choice.

North and Latin America

Outside the U.S. and Canada (208) 344-4809 U.S. and Canada (800) 333-1917

Asia-Pacific

Australia 61 (0)3 9272 2627 China 86 (0)10 6505 5280 Hong Kong 85 (0)2 2506 2422 India 91 (0)11 682 6031 Indonesia 21 (0)352 2044 Japan 81 (0)3 3335 8622 Korea 82 (0)02 769 0543 Malaysia 03 (0)298 2478 New Zealand 64 (0)09 356 6642 Philippines 65 (0)275 7251 Singapore 65 (0)275 7251 Thailand 66 (0)02 661 3511

6

Customer support options worldwide

Customer Support and Product Repair Assistance for the U.S. and Canada

Call (208) 323-2551 Monday through Friday from 6 am to 6 pm free of charge during the warranty period. However, your standard long-distance phone charges still apply. Have your system nearby and your serial number ready when calling.

If you know your printer needs repair, call (800) 243-9816 to locate your nearest HP Authorized service provider, or call (208) 323-2551 for HP centralized service dispatch.

Post-warranty telephone assistance is available to answer your product questions. Call (900) 555-1500 (\$2.50* per minute, U.S. only) or call (800) 999-1148 (\$25* per call, Visa or MasterCard, U.S. and Canada) Monday through Friday from 7 am to 6 pm and Saturday from 9 am to 3 pm (Mountain Time). Charges begin only when you connect with a support technician. *Prices subject to change.

European Customer Support Center Language and In-Country Options Available

Open Monday through Friday 8:30-18:00 CET

HP provides a free telephone support service during the warranty period. By calling a telephone number listed below, you will be connected to a responsive team waiting to help you. If you require support after your warranty has expired, you can receive support for a fee through the same telephone number. The fee is charged on a per incident basis. When calling HP, have the following information ready: product name and serial number, date of purchase, and description of the problem.

English Ireland: (353) (1) 662-5525

U.K.: (44) (171) 512-5202

International: (44) (171) 512-5202

Dutch Belgium: (32) (2) 626-8806

Netherlands: (31) (20) 606-8751

French France: (33) (01) 43-62-3434

Belgium: (32) (2) 626-8807

Switzerland: (41) (84) 880-1111 Germany: (49) (180) 532-6222

Austria: (43) (1) 0660-6386

NorwegianNorway: (47) 2211-6299DanishDenmark: (45) 3929-4099FinnishFinland: (358) (9) 0203-47288SwedishSweden: (46) (8) 619-2170ItalianItaly: (39) (2) 264-10350SpanishSpain: (34) (90) 232-1123PortuguesePortugal: (351) (1) 441-7199

In-country support numbers

German

If you require support after your warranty has expired, additional repair services, or if your country or region is not listed below, see the <u>HP Customer Care Centers</u> section.

Argentina 787-8080

Australia (61) (3) 2728000
Brazil 022-829-6612
Canada (208) 3232551
Chile 800-360999

China (86) (10) 65053888-5959

Czech Republic (42) (2) 4717321 Greece (30) (1) 6896411 Hong Kong (852) 800-96-7729

Hungary (36) (1) 382-1111 (91) (11) 6826035 India (91) (11) 6826069 Indonesia (62) (21) 3503408 (82) (2) 32700700 Korea Korea outside Seoul (82) (080) 9990700 (81) (3) 33358333 Japan Malaysia (60) (3) 2952566 Mexico (Mexico City) 01 800-22147 Mexico (outside MexicoCity) 01 800-90529 New Zealand (64) (9) 3566640 **Philippines** (63) (2) 8941451 Poland (48) (22) 375065 (351) (1) 3017330 Portugal Russia (7) (95) 9235001 Singapore (65) 2725300 (886) (02) 7170055 Taiwan +66 (0) 2 661-4011 Thailand (90) (1) 2245925 Turkey

HP Customer Care Centers

Asia Pacific

Australia +61 3 8877 8000 +86 10 6564 5959 China Hong Kong 800 96 7729 India + 91 11 682 6035 Indonesia + 62 21 350 3408 + 81 3 5346 1891 Japan +82 2 3270 0805 Korea Outside Seoul only 080 999 0700 Malaysia +60 3 295 2566 New Zealand +64 (9) 356 6640 Penana 1 300 88 0028 **Philippines** +63 2 867 3551 Singapore +65 272 5300 Taiwan +886 2 2717 0055 Thailand + 66 2 661 4000 Viet Nam +84 8 823 4530

North & Latin America

Argentina (54 11) 4778 8380 Brazil (011) 829 6612 Canada 905-206-4663 Chile 800 360 999 Mexico 800 427 6684 United States (208) 323-2551 Venezuela 800 47 888 207 8488 Caracas

Europe, Middle East, and Africa

Austria	+ 43 (0)7114 201080
Belgium	
Dutch	+ 32 (0)2 626 8806
French	+ 32 (0)2 626 8807
Denmark	+ 45 39 29 4099
English International	+ 44 (0)171 512 52 02
Finland	+ 358 (0)203 47 288
France	+ 33 (0)1 43 62 34 34
Germany	+ 49 (0)180 52 58 143

10

Ireland + 353 (0)1 662 5525 Israel Tel. + 972 (0)9 9524848 + 972 (0)9 9524849 Fax + 39 02 264 10350 Italy + 31 (0)20 606 8751 Netherlands + 47 22 11 6299 Norway Poland + 48 22 519 06 00 + 48 22 519 06 01

Portugal + 351 (0)1 318 00 65 Russian Federation + 7 095 916 98 21 + 7 095 916 98 35

South Africa +27 (0)11 8061030 Spain +34 902 321 123 Sweden +46 (0)8 619 2170 Switzerland +41 (0)848 80 11 11 Turkey +90 212 224 59 25 United Kingdom +44 (0)171 512 52 02

Contents

1 The HP Color LaserJet 8550 Printer	
Features Printer Information Configurations Locating the Printer's Parts Optional Paper Handling Accessories and Status Lights	_17 _20 _20 _22 _24
2 Using the Printer Control Panel	
Overview Printer Control Panel Keys and Indicator Lights When to Use the Printer Control Panel Menus Using the Printer Control Panel in Shared Environments Resetting the Printer Factory Defaults Printing Menu Maps Changing Settings in the Printer Control Panel Configuring Menu Selections Auto Continue Tray 1 Auto Configuring Media Type and Size Selecting an Output Bin Setting Media Type and Size Overrides Selecting the A4 Override Selecting Toner Low Response Setting the Power Save Mode Selecting Parallel Advanced Function Selecting the Default Printer Personality Setting the Printer Control Panel Selecting the Display Language	27 28 30 31 32 37 38 38 39 40 42 42 45 46 46 47 48 50
Printing Internal Pages Interpreting the Configuration Page	<u>51</u> <u>52</u>
Duplex Registration	54
Managing Memory	_56
Resource Saving	<u>.57</u>
Configuring the Printer for the Network	<u>.57</u>

13 ΕN

57

3 Common Printing Tasks

Selecting Media	<u>59</u>
Supported Media Weights and Sizes for Input Trays	<u>60</u>
Supported Media Weights and Sizes for the Optional Multi-bin Mailbo	<u>63</u>
Supported Media Weights and Sizes for the Optional Duplexer	<u>65</u>
Supported Media Weights and Sizes for the Optional 3000-sheet	
Stapler/Stacker and Optional 3000-sheet Stacker	<u>66</u>
Preprinted Forms and Letterhead	<u>68</u>
Recycled Media	<u>69</u>
<u>Envelopes</u>	<u>69</u>
<u>Transparencies</u>	70
Heavy Paper Stock	<u>70</u>
Labels	<u>71</u>
Colored Media	72
Media to Avoid	72
Controlling Your Print Job	73
Changing Page Orientation	73
Printing from Tray 1	74
Printing Tips for Tray 1	77
Orienting Media	78
Printing from Trays 2 (some printer models only) and 3	80
Printing Tips for Trays 2 and 3	83
Printing from Tray 4 (some printer models only)	84
Printing Tips for Tray 4 (some printer models only)	86
4 Advanced Printing Features	
<u>Overview</u>	<u>87</u>
<u>Using the HP TonerGauge</u>	<u>88</u>
Printing by Type and Size of Paper	<u>89</u>
Benefits of Printing by Type and Size of Paper	<u>89</u>
<u>Different First Page</u>	<u>91</u>
Printing Multiple Pages on One Sheet of Paper	<u>92</u>
Creating and Using Quick Sets	<u>93</u>
Quick Copying a Job	<u>95</u>
Printing Additional Copies of a Quick Copy Job	<u>95</u>
Deleting a Stored Quick Copy Job	<u>96</u>
Proofing and Holding a Job	<u>97</u>
Printing the Remaining Copies of a Held Job	<u>97</u>
Deleting a Held Job	<u>97</u>
Printing a Private Job	<u>99</u>
Specifying a Private Job	<u>99</u>
Releasing a Private Job	<u>99</u>
Deleting a Private Job	100

Storing a Print Job	<u>101</u>
Printing a Stored Job	101
Deleting a Stored Job	101
Variable Data Printing	102
Booklet Printing	103
Print on Backside of Heavy Media	104
HP JetSend Communications Technology	105
How the JetSend Communications Technology Works	105
Managing Fonts and Forms on Disk	106
HP LaserJet Resource Manager (Windows)	<u>106</u>
HP LaserJet Utility (Macintosh)	<u>107</u>
The Laserset Othity (Macintosity	<u>107</u>
5 Using Color	
Controlling Color Output with Printer Drivers	109
Using Color	<u>110</u>
Manual Mode	<u>111</u>
ICC/CMS	<u>112</u>
Black and White	<u>112</u>
Automatic PANTONE® Matching	<u>113</u>
CMYK Ink Set Emulation	<u>113</u>
Adjusting the Print Color and Quality Settings	<u>114</u>
Selecting Colors	<u>115</u>
PANTONE Colors	<u>115</u>
Color Swatch	<u>115</u>
Resolution Considerations for Graphics, Images, and Photographs	<u>116</u>
<u>Using Digital Cameras</u>	<u>116</u>
<u>Using Scanners</u>	<u>117</u>
Adjusting the Color Balance	<u>118</u>
6 Maintaining the Printer	
Making Room for Printer Maintenance	123
Replacing Printer Consumables	<u>123</u>
Locating Printer Consumables	124
Frequency for Replacing Printer Consumables	125
Recycling Consumables	<u>123</u>
Resetting the HP TonerGauge	127
ixesemily the HE Toller Sauge	121
7 Printer Control Panel Messages	
Printer Messages	_129
Using the Printer Online Help System	129

8 Solving Printer Problems

Performing Basic Troubleshooting Steps	<u>161</u>
Working with Toner	162
Media Jam Locations	<u>163</u>
Media Handling Problems	<u>165</u>
Printer Response Problems	<u>173</u>
Printer Control Panel and Configuration Problems	<u>179</u>
Application Problems	<u>181</u>
Incorrect Printer Output	<u>183</u>
Color Printing Problems	<u>185</u>
Print Quality Problems	<u>187</u>
Cleaning the Transfer Drum	<u>198</u>
Accessories, Options, and Related Products	204
A DIMM Installation	
A DIMM Installation	
Supported DIMMs	_207
Installing DIMMs	207
<u>B Specifications</u>	
Electrical Specifications	211
Operating Environmental Specifications	212
Environmental Product Stewardship Program	213
Protecting the Environment	213
Regulatory Statements	217
FCC Regulations	217
Canadian DOC Regulations	217
Declaration of Conformity	218
VCCI Statement (Japan)	224
Korean EMI Statement	224
Safety Information	225
Laser Safety	225
Product Information Sheet	225
Laser Statement for Finland	226
OW	
<u>C Warranty Information</u>	
Hewlett-Packard Limited Warranty Statement	229

16

The HP Color LaserJet 8550 Printer

Features

Congratulations on your purchase of the HP Color LaserJet 8550, 8550N, 8550DN, 8550GN, or 8550MFP printer. This printer is designed to produce high-quality, high-speed color printouts for business environments.

This printer provides the quality and reliability of Hewlett-Packard printers as well as these specific features:

Performance

- 24 pages per minute (ppm) black and white printing
- 6 ppm color printing
- Provides the ability to mopy (multiple original prints)

Approximate Print Speeds

- Letter-, A4-sized media: 24 ppm black and white;
 6 ppm color
- Legal-, Executive-, 11-by-17 inch sized media:
 12 ppm black and white; 3 ppm color
- **Transparencies:** 2.8 ppm black and white; 2.1 ppm color
- Labels: 12 ppm black and white; 3 ppm color

EN Features 17

Paper Handling **Note:** See "Printer Information" for printer configurations. Prints on up to 12-by-18.50 inch (304.80-by-469.90 mm) sized media Printing on heavy media up to 58 lb (216 g/m²) bond A 500-sheet input tray (tray 3) that supports letter-, legal-, A4-, 11-by-17 inch and A3-sized media A 500-sheet input tray (tray 2) that supports letter-, legal-, and A4-sized media; standard on some printer models 2,000-sheet input tray (tray 4); standard on some printer models Optional duplexer, which provides two-sided printing; standard on some printer models A 100-sheet multipurpose tray that supports letter-, legal-, executive-, A3-, A4-, B4-, 11-by-17 inch, B5-, and custom-sized media, as well as envelopes, labels, and card stock Face-down (top) output bin Printer driver selectable face-up (left) output bin with straight-through paper path Font and Memory 32 MB minimum DIMM (dual inline memory module) memory, expandable to 512 MB HP LaserJet 45 TrueType font set and 65 additional TrueType fonts for Microsoft® Windows 3.1, Windows 9x, Windows NT 4.0, Windows 2000, and Macintosh Supports forms and fonts on the disk using **HP Resource Manager Printer Personality** PCL 5 color extension support in the printer Support PostScript 3[™] support (includes PDF) Automatic printer personality switching User Interface and Standard ECP or bidirectional parallel cable interface EIO (IEEE-1284 compliant) 2 enhanced input/output (EIO) slots Automatic I/O (input/output) switching

HP Web JetAdmin software

HP LaserJet Utility (Macintosh only)

Accessories

Note: See "Printer Information" for printer configurations.

- Printer hard disk, which provides storage for fonts and macros as well as proof and hold, private jobs, quick copy jobs, and mopying capabilities
- Optional ROM (read-only memory) or synchronous DRAM (dynamic random-access memory) DIMM device memory
- Optional multi-bin mailbox, which provides multiple output destinations
- Optional 3000-sheet Stapler/Stacker
- Optional 3000-sheet Stacker
- Optional HP JetDirect internal print server for network connection

For more information on supported media, see "<u>Selecting Media</u>" in chapter <u>3</u>.

The approximate print speeds offered by this printer might vary from those listed above because the following factors affect processing time:

- Complex graphics or large graphics
- I/O configuration
- Type of computer
- Computer configuration
- Amount of printer memory
- Network operating system
- Network configuration
- Print media

EN Features 19

Printer Information

Configurations

This printer is available in five configurations, as described below:



HP Color LaserJet 8550

The HP Color LaserJet 8550 comes standard with a 100-sheet tray 1, a 500-sheet tray 3, a printer stand, and 32 MB RAM.



HP Color LaserJet 8550N

The HP Color LaserJet 8550N comes standard with a 100-sheet tray 1, a 500-sheet tray 2, a 500-sheet tray 3, a printer stand, 32 MB RAM, an HP JetDirect print server (10/100 Base-TX), and an internal hard disk.



HP Color LaserJet 8550DN

The HP Color LaserJet 8550DN comes standard with a 100-sheet tray 1, a 500-sheet tray 2, a 500-sheet tray 3, a (tray 4) 2000-sheet input tray, a duplexer, 64 MB RAM, an HP JetDirect print server (10/100 Base-TX), an internal hard disk, and five stabilizing legs.



HP Color LaserJet 8550GN

The HP Color LaserJet 8550GN comes standard with a 100-sheet tray 1, a 500-sheet tray 2, a 500-sheet tray 3, a (tray 4) 2000-sheet input tray, a duplexer, 128 MB RAM, an HP JetDirect print server (10/100 Base-TX), an internal hard disk, five stabilizing legs, and a higher performance processor.

HP Color LaserJet 8550MFP




The HP Color LaserJet 8550MFP comes standard with a 100-sheet tray 1, a 500-sheet tray 2, a 500-sheet tray 3, a duplexer, 64 MB RAM, an HP JetDirect print server (10/100 Base-TX), an internal hard disk, a printer/copy module stand, and a copy module.

EN Printer Information 21

Locating the Printer's Parts


The following figures show the locations of the printer's parts. (HP Color LaserJet 8550 shown below.)

Figure 1

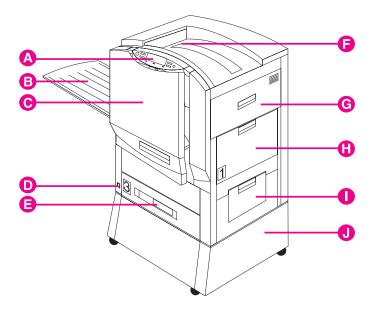

- A Printer Control Panel
- **B** Left Output Bin (face up)
- C Front Door
- **D** Power Button
- E Input Tray 3
- F Top Output Bin (face down)
- **G** Upper Right Door
- H Input Tray 1
- I Lower Right Door
- J Printer Stand

Figure 2

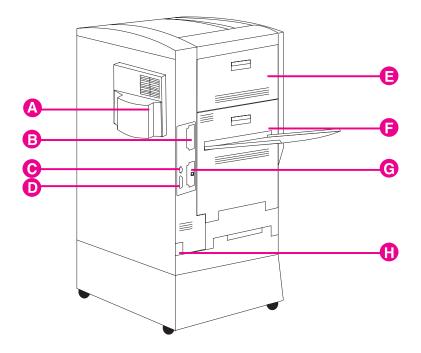

- A Air Filter Door
- B EIO Slot 2
- C Tray 4 Connector (C-Link Connector)
- **D** Parallel Connector
- E Upper Left Door
- F Lower Left Door
- **G** EIO Slot 1 (shown with optional HP JetDirect internal print server)
- **H** Power Connector


Note

For information on the locations of printer consumables, see "Locating Printer Consumables" in chapter 6.

Optional Paper Handling Accessories and Status Lights

The following figure shows the locations of optional or packaged accessories and their status lights (if applicable).

Figure 3

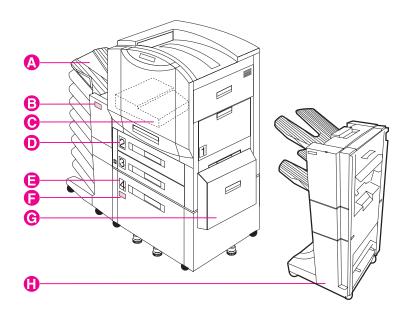

- A Multi-bin Mailbox
- В Multi-bin Mailbox Status Light
- Duplexer (some printer models only)
- Tray 2 (some printer models only) D
- Tray 4 (some printer models only)
- Tray 4 Status Light
- **G** Media Transfer Door
- 3000-sheet Stapler/Stacker (optional) or 3000-sheet Stacker (optional)

Use the following table to interpret the status lights on tray 4 and the multi-bin mailbox.

Light	Tray 4	Multi-Bin Mailbox
Solid Green	The accessory is on and ready.	The accessory is on and ready.
Solid Amber	The accessory is experiencing a hardware malfunction.	The accessory is experiencing a hardware malfunction.
Flashing Amber	The accessory has a media jam or a page needs to be removed from tray 4, even if the page is not jammed. The lower right door might be	The accessory has a media jam or a page needs to be removed from the multi-bin mailbox, even if the page is not jammed.
	open.	The accessory is not correctly attached to the printer.
Off	The printer might be in Power Save mode. Press Go.	The printer might be in Power Save mode. Press Go.
	The accessory is not receiving power. Check both the power supply and the power cables.	The accessory is not receiving power. Check both the power supply and the power cables.

Using the Printer Control Panel

Overview

The most convenient way to control the printer is through your application or the printer driver. The commands in your application override the printer control panel settings. For more information on changing the printer settings from within an application or printer driver, see the associated online help files.

Use the printer control panel to configure the default settings for the printer or to obtain printer status information. Also, use the printer control panel to access printer features not supported by the application.


Note	Unless otherwise specified, <i>control panel</i> refers to the control panel on the printer. Keys on the printer control panel are indicated by the KEY font.
Note	For more information on controlling the printer in a network environment, see the HP JetDirect software installation guide and the HP Web JetAdmin online help.

EN Overview 27

Printer Control Panel Keys and Indicator Lights

The following figure shows the locations of printer control panel features.

Figure 4

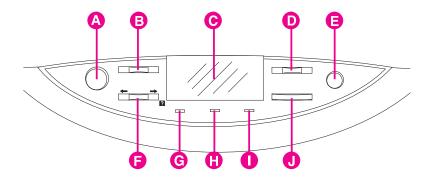

A Go

Brings the printer online or offline, and exits menus.

Menu

Accesses the printer control panel menus to set the printer defaults. This key permits both forward and backward movement through the list of available menus.

С Display

Presents data about the printer (such as printer status, required actions, or data and print errors) in one or two lines of characters.

D -Value+

Steps through the value choices for a particular menu item using -/+. This key permits both forward and backward movement through the values.

E Cancel Job

Stops the currently printing job from printing. If no job is printing and the display indicates that a job is processing, CANCEL JOB cancels the currently processing job and the next job begins printing. While the job is being canceled, CANCELING JOB is displayed.

F Item

Steps through the items in a particular menu. This key permits both forward and backward movement through the available items. The ITEM key also steps through the control panel help messages.

G Ready Indicator (green)

- On—The printer is online and able to accept and process data.
- Off—The printer is offline and unable to process data.
- Flashing—The printer is going from online to offline, or from offline to online.

H Data Indicator (green)

- On—Data is in the printer buffer, or the printer is processing data.
- Off—The printer buffer is empty.
- Flashing—The printer is receiving or processing data.

I Attention Indicator (amber)

- On—An error has occurred in the printer.
- Off—The printer does not require attention.
- Flashing—The printer requires attention.

J Select

Selects the item or value currently shown on the printer control panel display. An asterisk (*) is displayed when an item has been selected.

For information on the status lights for the multi-bin mailbox and tray 4, see "Optional Paper Handling Accessories and Status Lights" in chapter 1.

EN Overview 29

When to Use the Printer Control Panel Menus

The printer control panel menus allow you to select items such as the number of copies and test pages. Use the printer control panel to perform the following tasks:

- Set the media type for each input tray and the size for tray 1
- Job management:
 - Continue a proof and hold job
 - Quick copy a job
 - Job storage
 - Private printing
- Step through the control panel help messages
- Switch between online and offline status
- Print configuration pages
- Set the printer defaults when the application does not support the option
- Change the printer's EIO configuration
- Print a file directory page to identify the fonts and macros available on the printer hard disk
- Adjust duplex registration

Using the Printer Control Panel in Shared **Environments**

The printer control panel functions in a network or other shared-printer environment in the same way as it does when it is connected to a standalone computer. Follow these guidelines before you change printer control panel settings:

- See the system administrator before making printer control panel changes. Any printer control panel changes could affect other print jobs.
- Coordinate setting the default printer font and downloading fonts with other users. Coordinating these operations conserves memory and reduces the chances of unexpected printer output.

Resetting the Printer

Use the procedures below to reset the printer to the factory defaults listed in the table following this section.

To reset the printer to factory defaults

- 1 Press MENU until INFORMATION MENU appears on the printer control panel display.
- 2 Press ITEM until PRINT CONFIG PAGE appears on the display.
- 3 Press SELECT to print the page.
- 4 Press MENU until RESETS MENU appears on the display.
- **5** Press ITEM until FACTORY DEFAULT RESET appears on the display.
- **6** Press Select. The printer will reset all factory defaults.

Note

Resetting the printer to factory defaults clears all print jobs from the print buffer. After resetting the defaults, reprint any lost print jobs.

- 7 Reset the EIO type and configure the printer, if necessary.
- 8 Press Go to bring the printer online.
- **9** Use the printer configuration page to reconfigure the printer.

Factory Defaults

The following table lists factory defaults for printer settings.

Menu	Item	Factory Default
INFORMATION MENU	PRINT MENU MAP	
	PRINT CONFIG PAGE	
	PRINT PCL FONT LIST	
	PRINT PS FONT LIST	
	PRINT LASERJET DEMONSTRATION	
	PRINT FILE DIRECTORY ^A	
	PRINT EIO PAGE ^b	
	PRINT CONTINUOUS CONFIG PAGES	
	PRINT EVENT LOG	
QUICK COPY JOBS MENU ^C		COPIES=nn
PRIVATE/STORED JOBS MENU		COPIES=nn

Menu	Item	Factory Default
PAPER HANDLING MENU	TRAY 1 TYPE =	AUTO
	TRAY 1 SIZE =	AUTO
	TRAY 2 TYPE = d	PLAIN
	TRAY 3 TYPE =	PLAIN
	TRAY 4 TYPE = e	PLAIN
	PAPER DEST =	TOP OUTPUT BIN
	DUPLEX = f	OFF
	BINDING 9	LONG EDGE
	MANUAL FEED	OFF
	OVERRIDE A4 WITH LETTER	NO
	AUTO PAPER OVERRIDE	OFF
CONFIGURATION MENU	POWERSAVE =	1 HOUR
	PERSONALITY	AUTO
	CLEARABLE WARNINGS	ОИ
	TONER LOW	CONTINUE
	NEW TONER CARTRIDGE=	NO
	NEW TONER=h	BLACK YELLOW MAGENTA CYAN
	QUICK COPY JOBS	32
	PRINT PS ERRORS	OFF
	INITIALIZE DISK ⁱ	

Menu	Item	Factory Default
PRINTING MENU	COPIES=	1
	PAPER	LETTER ^j
	CONFIGURE CUSTOM PAPER= ^k	NO
	UNIT OF MEASURE=	INCHES
	X DIMENSION=	12.00 RANGE 3.87 - 12.00
	Y DIMENSION=	18.50 RANGE 7.48 - 18.50
	ORIENTATION	PORTRAIT
	FORM LENGTH	60 LINES
	PCL FONT SOURCE	INTERNAL
	PCL FONT NUMBER	Ø (Courier)
	PCL PITCH	10.00
	PCL POINT SIZE	12.00
	PCL SYMBOL SET	PC-8
	COURIER	REGULAR
	WIDE A4	NO
	APPEND CR TO LF	NO

Menu	Item	Factory Default
REGISTRATION DUPLEX MENU	TRAY 1 PRINT TEST PAGE	
	TRAY 1 X =	0
	TRAY 1 Y =	0
	TRAY 2 ^l PRINT TEST PAGE	
	TRAY 2 X =	0
	TRAY 2 Y =	0
	TRAY 3 PRINT TEST PAGE	
	TRAY 3 X =	0
	TRAY 3 Y =	0
	TRAY 4 ^m PRINT TEST PAGE	
	TRAY 4 X =	0
	TRAY 4 Y =	0
I/O MENU	I/O TIMEOUT	ଓଡ (seconds)
	PARALLEL ADV FUNCTIONS =	ON
RESETS MENU	FACTORY DEFAULT RESET	
	RESET ACTIVE I/O	
	RESET ALL I/O	
	RESET TRANSFER LIFE COUNT	
	RESET FUSER LIFE COUNT	
<other menus="">ⁿ</other>	supplied by installed devices	

Menu	Item	Factory Default
COLOR ADJUST MENU	PRINT TEST PAGE	
	BLACK SMOOTH VALUE=	0
	CYAN SMOOTH VALUE=	0
	MAGENTA SMOOTH VALUE=	0
	YELLOW SMOOTH VALUE=	0
	BLACK DETAIL VALUE=	0
	CYAN DETAIL VALUE=	0
	MAGENTA DETAIL VALUE=	0
	YELLOW DETAIL VALUE=	0

- a. Appears only if the printer has a disk installed.
- b. Appears only if an EIO card is installed and an EIO page exists.
- c. QUICK COPYJOBS MENU and PRIVATE/JOBS MENU only appear if disk is installed and at least one job is in the queue.
- d. Appears only if tray 2 is properly installed.
- e. Appears only if tray 4 is properly installed.
- f. Appears only if the optional duplexer is installed.
- g. Appears only if the optional duplexer is installed and DUPLEX is set to ON.
- h. Appears only if NEW TONER = YES.
- i. Initialize functions only appear if appropriate disk is installed.
- j. This setting will default to A4 in some countries.
- k. UNIT OF MEASURE, X DIMENSION, and Y DIMENSION only appear if CONFIGURE CUSTOM is set to YES.
- I. Tray 2 items appear only if tray 2 is installed.
- m. Tray 4 items appear only if tray 4 is installed.
- n. Appears only if appropriate device (EIO) menu exists.

Printing Menu Maps

Print menu maps from the printer control panel, and then use the menu maps to view printer settings and to help navigate the printer control panel menus.

To print menu maps

- 1 Press Menu until INFORMATION MENU appears on the printer control panel display.
- 2 Press ITEM until PRINT MENU MAP appears on the display.
- 3 Press SELECT to print. The printer will automatically bring itself online.

Changing Settings in the Printer Control Panel

Use the printer control panel to configure the default printer selections and to obtain printer status information. Also, use the printer control panel to access printer features not supported by your application. For more information on navigating the printer control panel, see "Printing Menu Maps" on the previous page.

Configuring Menu Selections

Use the following instructions to configure all printer control panel settings, including the default printer settings.

To configure menu selections in the printer control panel

- 1 Press MENU until the menu you want appears on the printer control panel display.
- Press ITEM until the item you want appears on the display. 2
- 3 Press -VALUE+ until the value you want appears on the display.
- 4 Press Selection. An asterisk (*) appears to the right of the selection.
- 5 Repeat steps 1 through 4 until all of your changes are complete.
- Press Go to bring the printer online. 6

Note

Changes to the printer control panel will not take effect until all current data in the print buffer prints or until the next print job.

Auto Continue

The Auto Continue feature allows the printer to continue printing when certain warnings or conditions occur (such as TONER LOW). The printer message will be displayed on the printer control panel, but the printer will continue printing. Auto Continue is always on, and most printer control panel messages that do not disable the printer will not stop subsequent jobs from printing. However, the job where the error occurred might not print correctly.

If in the Configuration Menu CLEARABLE WARNINGS is set to ON, many printer control panel messages can be cleared by pressing Go. If CLEARABLE WARNINGS is set to JOB, the clearable messages will be cleared from the display automatically when the job where the error occurred finishes printing.

Tray 1 Auto

From the control panel, you can also set the media size and type for tray 1 to AUTO. The printer tries to match the media size and/or type specified for the current print job in the print driver to the settings in the control panel and prints from tray 1 if it can. For example, if you set the media size and type for tray 1 to AUTO in the control panel, load letter-size transparencies into tray 1, and send a job to the printer specifying plain Letter in the print driver, the printer prints from tray 1 even if other trays are configured for plain Letter. You can use the AUTO setting to override the printer's tray selection process, forcing the printer to print from tray 1 regardless of the media size and/or type specified in the print driver or loaded in tray 1.

Note

Although tray 1 does not fully sense the media size, the printer will not print on media that it senses is the wrong width.

Configuring Media Type and Size

Configure the media type (such as plain paper, letterhead, or transparencies) for each of the input trays. If the media type and size have been correctly configured for the input trays, the printer will print based on the type and size of media and will automatically use the correct input tray. Configuring the media type is beneficial for several reasons:

- Setting the media type prevents printing on the wrong, possibly expensive, media.
- The printer will automatically adjust its print speed to accommodate special media (such as card stock, labels, and transparencies). These adjustments will give the best quality output, saving time and resources.

M	\sim	H	c
м	U	u	c

If the media type is not set properly, the printer might not print on the correct media or at the correct speed for the media type, which can result in poor print quality.

To configure the input trays

Follow the steps below to configure the media type.

- 1 Press Menu until PAPER HANDLING MENU appears on the printer control panel display.
- 2 Press | TEM until TRAY [number] TYPE = appears on the display.
- **3** Press -VALUE+ until the correct media type appears on the display.
- **4** Press SELECT to save the selection. An asterisk (*) appears to the right of the selection.

To configure the media size in tray 1, repeat steps 1-4 ("size" will replace references to "type").

Note

Trays 2, 3, and the optional tray 4 will automatically sense the media size.

- **5** Repeat steps 2 through 4 to configure the media type in another input tray.
 - Or -

Press Go to bring the printer online.

Selecting an Output Bin

Select the top output bin (face down) or the left output bin (face up) in the printer control panel. The top output bin stacks the pages in sequential order, so that the first page is on top and the last page is on bottom. The left output bin provides a straight paper path which is useful to prevent curling when printing on card stock, labels, or other special media.

If you have an optional multi-bin mailbox, an optional 3000-sheet Stacker, or an optional 3000-sheet Stapler/Stacker, then select the appropriate output bin as your default. To configure other available modes, see your network administrator.

Note

For more information on the optional multi-bin mailbox, the optional 3000-sheet Stacker, and the optional 3000-sheet Stapler/Stacker modes, see the guides that came with them.

Select the default destination for print jobs in the printer control panel. The printer will send print jobs to the default destination if a destination is not selected in the printer driver, or if your printing environment does not use printer drivers. For more information on using the HP Web JetAdmin software, see the online help.

Note

Changes made to the multi-bin mailbox mode settings in the printer driver will **not** override the multi-bin mailbox mode set in the HP Web JetAdmin software or through PJL commands.

To select an output bin

- 1 Press MENU until PAPER HANDLING MENU appears on the printer control panel display.
- 2 Press ITEM until PAPER DEST = appears on the display.
- 3 Press -VALUE+ until the correct destination appears on the display.
- **4** Press SELECT to save the selection. An asterisk (*) appears to the right of the selection.
- **5** Press Go to bring the printer online.

Setting Media Type and Size Overrides

Set the media override option to select the media on which a job will print if the selected media is not available.

To set the media override

- 1 Press MENU until PAPER HANDLING MENU appears on the printer control panel display.
- 2 Press ITEM until AUTO PAPER OVERRIDE appears on the display.
- **3** Press -VALUE+ until the ON or OFF appears on the display.
 - ON—If the requested media is not found, TRAY X LOAD (TUPE) (Size) will appear on the display. There will be a delay before the printer automatically prints on plain paper on the default media size (set in the PRINTING MENU on the printer control panel). The delay time can be configured through the HP Web JetAdmin software. For more information on configuring HP Web JetAdmin software, see the associated online help file.
 - OFF—TRAY X LOAD <Type> <Size> will appear on the display.
 The printer will not print until it detects the correct media type and size or Go is pressed.

Note

If the requested media size is larger than the default paper size (for example, 11-by-17 inch size is requested, but the default is letter size), then the image will be cropped to fit on the smaller page size.

- 4 Press SELECT to save the selection. An asterisk (*) appears to the right of the selection.
- 5 Press Go to bring the printer online.

Selecting the A4 Override

Enabling OVERRIDE A4 WITH LETTER will print A4-sized documents on letter-sized media, or letter-sized documents on A4-sized media. However if an input tray is configured for the size you want to override (letter or A4), even if the tray is empty, then the printer will continue to try and print on the correct size of media regardless of the override setting.

To select the A4 override

- Press MENU until PAPER HANDLING MENU appears on the printer control panel display.
- 2 Press ITEM until OVERRIDE A4 WITH LETTER appears on the display.
- Press -VALUE+ to display ON or OFF. 3
- Press Select to save the selection. An asterisk (*) appears to the 4 right of the selection.
- 5 Press Go to bring the printer online.

Selecting Toner Low Response

Selecting the toner low response allows you to determine how the printer will behave when the printer detects a toner level is low.

Note

The printer uses the toner low response setting as the setting for TRANSFER KIT LOW REPLACE KIT, FUSER LIFE LOW REPLACE KIT, TONER LOW, and DRUM LIFE LOW REPLACE DRUM KIT messages. For example, if the toner low response is set to STOP, then when the TRANSFER KIT LOW REPLACE KIT message appears on the printer control panel the printer will stop printing until the transfer kit is replaced or Go is pressed.

To select the toner low response

- 1 Press MENU until CONFIGURATION MENU appears on the printer control panel display.
- 2 Press ITEM until TONER LOW appears on the display.
- Press -VALUE+ until the option you want appears on the display. The available options include the following:
 - STOP will take the printer offline. Pressing Go will bring the printer online and allow printing to continue until the toner cartridge is empty. When the toner cartridge is empty, the message TONER OUT REPLACE <Color> will be displayed.
 - CONTINUE will display the TONER LOW REPLACE (Color) warning until the toner cartridge is empty.
- 4 Press Select to save the selection. An asterisk (*) appears to the right of the selection.
- 5 Press Go to bring the printer online.

Note

Although this option allows you to configure the printer behavior when the consumable lives are low, print quality will eventually degrade after a consumable's life has reached low, regardless of how you have configured the printer response. These print quality problems can be fixed by replacing the consumable.

Setting the Power Save Mode

The Power Save mode conserves electricity by reducing the amount of power the printer uses when it has been idle for a length of time specified in the printer control panel. The default setting is 60 minutes (60 MIN). However, the Power Save mode can be adjusted to start between 10 seconds and 8 hours after the last print job finishes. The printer fans will run for 30 minutes after entering Power Save mode to cool the printer.

Note

The 10 seconds setting is for use by service personnel and is not recommended for daily use.

To set the Power Save mode

- Press MENU until CONFIGURATION MENU appears on the printer control panel display.
- 2 Press ITEM until POWERSAUE appears on the display.
- Press -VALUE+ until the interval you want (between 30 minutes and 8 hours) appears on the display.
- Press Select to save the selection. An asterisk (*) appears to the right of the selection.
- 5 Press Go to bring the printer online.

Selecting Parallel Advanced Function

If the printer is not correctly interpreting data transmitted across the ECP (enhanced capability parallel) port, turn the parallel advanced functions off to send the printer into compatibility mode. Compatibility mode turns the bidirectional communication off so that an HP LaserJet fax or other peripheral between the host computer and the printer will work correctly.

Note

You must have the parallel advanced functions turned off for a peripheral connected between the host computer and the printer to work correctly.

To select the parallel advanced function

- 1 Press MENU until I/O MENU appears on the printer control panel display.
- **2** Press ITEM until PARALLEL ADV FUNCTIONS = appears on the display.
- 3 Press -VALUE+ to display ON or OFF.
- **4** Press Select to save the selection. An asterisk (*) appears to the right of the selection.
- **5** Press Go to bring the printer online.

Selecting the Default Printer Personality

Select the default printer personality for multi-platform environments, or select a personality if your printer driver does not send the PJL header with the print job. AUTO is the default setting.

To select the printer personality

- 1 Press Menu until CONFIGURATION MENU appears on the printer control panel display.
- 2 Press ITEM until PERSONALITY appears on the display.
- 3 Press -VALUE+ until the option you want appears on the display. The available options include the following:
 - AUTO enables switching by file type or PJL description. This is the default setting and the best setting to maintain all printer capabilities.
 - PCL selects printer control language (PCL) as the printer personality.
 - POSTSCRIPT selects the PostScript language as the printer personality.
- **4** Press SELECT to save the selection. An asterisk (*) appears to the right of the selection.
- **5** Press Go to bring the printer online.

Setting the I/O Timeout

The I/O timeout sets the amount of time the printer waits after receiving print data before switching I/O ports. The default time is 30 seconds.

To set the I/O timeout

- 1 Press MENU until I/O MENU appears on the printer control panel display.
- 2 Press ITEM until I/O TIMEOUT appears on the display.
- 3 Press -VALUE+ until the interval you want (between 5 and 300 seconds) appears on the display.
- **4** Press SELECT to save the selection. An asterisk (*) appears to the right of the selection.
- **5** Press Go to bring the printer online.

Note

If the I/O timeout is too short, print jobs might be incomplete. If the I/O timeout is too long, print jobs might be unnecessarily delayed.

Locking the Printer Control Panel

You can prevent users from changing the printer control panel settings by establishing a password, thus enabling the printer control panel lock. When locked, unauthorized users who try to change settings in the printer control panel will receive an ACCESS DENIED message.

If you are using Microsoft Windows, use either the HP Web JetAdmin software or a PJL Command. The easier of the two methods is through the HP Web JetAdmin software. For more information on using the HP Web JetAdmin software to perform this function, see the HP Web JetAdmin online help.

If you are using Mac OS, use the HP LaserJet utility. From the HP LaserJet utility, on the Security tab select **Lock Control Panel**.

Note

If you have forgotten the password for the printer control panel, print a configuration page, an EIO page, and a menu map page, then reset the printer with a cold reset. To perform a cold reset, turn the printer off then hold down the green Go button and turn the printer on. When the front panel displays COLD RESET, release the green Go button. All printer settings (including internal print server card settings) will return to the factory defaults, all passwords will be cleared, and the printer control panel will be unlocked. Use the pages listed above to restore the printer settings. For more information on printing these pages, see "Printing Internal Pages" later in this chapter.

Selecting the Display Language

Using the printer control panel, you can set the printer to display printer messages and print test pages in a variety of supported languages.

To select the display language

Hold down SELECT while turning the printer off and then on. CONFIG LANGUAGE (in English) appears on the printer control panel display for approximately one second. Once the printer has restarted, LANGUAGE=ENGLISH will appear.

Note

Only -VALUE+, SELECT, and Go are active while the display language is being configured. All other keys are ignored.

If you press Go without selecting a language, the printer will bring itself online and all subsequent messages will be displayed in English. However, since no display language was selected, the LANGUAGE=ENGLISH message will reappear (after the power-on self test) when the printer is next turned on. This message will be displayed every time the printer is turned on until you select a language through the configure language mode.

- 2 Press -VALUE+ until the language you want appears on the display.
- Press Selection. An asterisk (*) appears to the right of the selection. The language selected will be the default language until another selection is made by restarting the printer in the configure language mode.
- 4 Press Go to bring the printer online.

Printing Internal Pages

Print a configuration page to verify that the printer is set up correctly or to verify information about the printer's configuration.

To print an internal page

- 1 Press MENU until INFORMATION MENU appears on the printer control panel display.
- 2 Press ITEM until the option you want appears on the display. The available options include the following:
 - PRINT MENU MAP
 - PRINT CONFIG PAGE
 - PRINT PCL FONT LIST
 - PRINT PS FONT LIST
 - PRINT LASERJET DEMONSTRATION
 - PRINT FILE DIRECTORY PAGE (appears only if the disk is installed)
 - PRINT CONTINUOUS CONFIG PAGES
 - PRINT EVENT LOG
 - PRINT EIO PAGE (appears only if the EIO card is installed)
- 3 Press SELECT to print the page. The printer will automatically bring itself online.
- 4 If you want to print another page, repeat steps 1 though 3.

Interpreting the Configuration Page

The following figure is an example of a configuration page.

Figure 5



- A Printer Information—Lists the printer product number, serial number, PCL firmware date code, PostScript version, total pages printed during the life of the printer, number of color pages printed during the life of the printer, HP JetSend ID, processor installed, and number of duplex pages printed during the life of the printer.
- **B** Installed Options—Shows whether options have been installed, such as the printer hard disk, DIMMs, duplexer, multi-bin mailbox, and optional input trays.
- **C** Consumables:% of Life Remaining—Shows the percentage of life remaining for consumable kits in the printer.
- D Memory—Shows the total memory installed in the printer (including a printer hard disk) and the settings that affect how the memory is used.
- **E** Paper Tray Configuration—Lists the types and sizes of media configured for each input tray.
- **F Duplex Registration**—Lists the offset values set for each input tray.
- **G Security**—Shows whether the security features have been activated, such as the printer control panel lock, printer control panel password, and printer hard disk lock. There also is a service information code for service personnel.
- **Event Log**—Lists the last five printer events, including printer jams, service errors, and other printer actions.

Color Adjust—Lists the number of pages since the last color adjustment and the color calibration information.


Note

Print the Menu Map from the printer control panel to view the current color adjustment values.

Duplex Registration

The duplex registration feature allows precise alignment of images on the front and back of a duplexed page. Image placement varies slightly for each input tray. The alignment procedure must be performed for each tray.

Figure 6

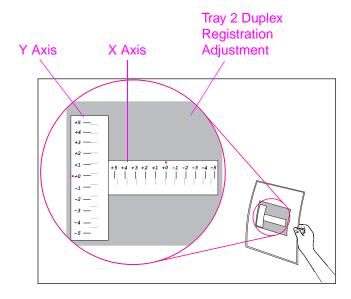

- Press MENU until DUPLEX REGISTRATION MENU appears on the printer control panel display.
- 2 Press ITEM until PRINT TEST PAGE appears for the tray you want.
- Press **SELECT** to print the page. 3
- Hold the printed page up to a light source and choose the number on each axis where the lines on the front and back of the page align most accurately.
- 5 Repeat step 1.
- Press ITEM until TRAY in X= appears and use -VALUE+ to enter the number you selected from the test page in step 4.
- Repeat step 6 for the y axis.
- Press ITEM to scroll up through the duplex registration menu until PRINT TEST PAGE appears for the tray you want.

- **9** Press **SELECT** to print the page.
- **10** Repeat step 4 to verify that the lines on the front and back of the page are now properly aligned.

Note

If the lines on the front and back of the page do not properly align, then repeat steps 4-9 until they are properly aligned.

Managing Memory

The printer supports an optional printer hard disk as well as ROM (read-only memory) and synchronous DRAM (dynamic random-access memory) DIMMs (dual inline memory modules). DRAM DIMMs must be installed in synchronized pairs (two DIMMs) with the same amount of memory installed in slots such as 1 and 2 (see task 5 on page 209). For more information on DIMMs, see appendix A, "DIMM Installation."

The printer comes with a minimum of 32 MB of RAM and can be expanded with additional DIMMs. The printer has four available DIMM slots for additional 8, 16, 32, or 64 MB DIMMs.

An optional printer hard disk is available for storing downloaded fonts and forms in the printer. Unlike standard printer memory, information stored on the printer hard disk is permanently downloaded and can remain in the printer even when the printer is turned off. A printer hard disk also enables proof and hold and mopying features (which can significantly decrease the processing time for multiple copies, or large or complex jobs). For information on ordering a printer hard disk, see "Accessories, Options, and Related Products" in chapter 8.

Note

A printer hard disk is required to mopy or proof and hold.

Resource Saving

Resource Saving allows PCL and PostScript fonts and macros downloaded to the printer's RAM when the printer switches between PCL and PostScript personalities. The printer determines the amount of RAM allocated to save each of the printer personality environments. Resource Saving is always enabled.

Note

All data downloaded to the printer's RAM will be lost when the printer is turned off.

Configuring the Printer for the Network

For information on configuring the printer for the network, see your getting started guide or the *HP JetDirect Print Server Software Installation Guide*.

Common Printing Tasks

Selecting Media

Many types of paper and other print media can be used with the printer, within certain specifications. Using media that does not meet the specifications outlined in this chapter can increase the incidence of media jams, contribute to repair and maintenance costs, and cause premature wear, print quality problems, and problems requiring service. This service might not be covered by the HP warranty or service agreements.

Before purchasing media or specialized forms, test a small quantity in the printer. Make sure your media supplier obtains and understands the media and print media specifications in the HP LaserJet Printer Family Paper Specifications Guide. (For ordering information, see "Accessories, Options, and Related Products" in chapter 8.)

Note

It is possible that media could meet all of the specifications in this chapter and still not print satisfactorily. This might be caused by abnormal characteristics of the printing environment or other variables over which HP has no control, such as extremes in temperature and humidity.

- Use only print media that meets the specifications outlined in this chapter.
- Do not attempt to print unsupported sizes or weights of media or other unsupported media. For more information on supported media, see "<u>Supported Media Weights and Sizes</u> <u>for Input Trays</u>" on the next page.
- Always handle transparencies and glossy media by their edges to avoid fingerprints in the image area.

- Do not use media that has already passed through the printer or through a copy machine, even if there is no printing on the page.
- Recycled media can be used with this printer. Recycled media must meet the specifications shown in this chapter.

Supported Media Weights and Sizes for Input Travs

The following table lists the types and sizes of media supported by each input tray. For best results, use HP LaserJet paper or conventional white xerographic paper. The media should be good quality and free of cuts, nicks, tears, spots, loose particles, dust, wrinkles, voids, perforations, and curled or bent edges. For a complete list of media specifications, see the HP LaserJet Printer Family Paper Specifications Guide.

For more information on orienting the media in each of the input trays, see the appropriate section later in this chapter.

Tray Location	Media Type	Media Size (Common Name and Dimensions)	Media Weight	Maximum Capacity
Tray 1	Paper: Plain Preprinted Letterhead Prepunched Bond Recycled Color Card Stock Heavy (greater than 28 lb/105 g/m2 bond) Glossy	Executive (7.25 by 10.50 in, 184.15 by 266.70 mm) Letter (8.50 by 11 in, 215.90 by 279.40 mm) Legal (8.50 by 14 in, 215.90 by 355.60 mm) 11 by 17 in (279.40 by 431.80 mm) A5 (148 by 210 mm, 5.83 by 8.27 in) ISO B5 (176 by 250 mm, 6.93 by 9.85 in) JIS B5 (182 by 257 mm, 7.17 by 10.13 in) A4 (210 by 297 mm, 8.27 by 11.70 in) JIS B4 (257 by 364 mm, 10.13 by 14.34 in) A3 (297 by 420 mm, 11.70 by 16.55 in) 12 by 18.50 in (304.80 by 469.90 mm) 312 by 440 mm (12.29 by 17.33 in) Custom minimum 99 by 190 mm (3.90 by 7.49 in), maximum 304 by 469 mm 11.98 by 18.48 in)	16 to 58 lb (60 to 216 g/m²) bond	100 sheets of 20 lb (75 g/m²) bond Limit to media-fill mark on the media width guides

Tray Location	Media Type	Media Size (Common Name and Dimensions)	Media Weight	Maximum Capacity
	Envelopes	Monarch (3.90 by 7.50 in, 99.06 by 90.50 mm) Commercial #10 (Com10) (4.10 by 9.50 in, 104.14 by 241.30 mm)	Maximum 24 lb (90 g/m ²) bond	Approximately 10 Limit to media-fill mark on the media width guides
		DL (110 by 220 mm, 4.33 by 8.67 in) Double Post Card (JPOSTD) (148 by 200 mm, 5.83 by 7.88 in) C5 (162 by 229 mm, 6.38 by 9.02 in) B5 (176 by 250 mm, 6.93 by 9.85 in)		
	Labels	Letter (8.50 by 11 in, 215.90 by 279.40 mm) A4 (210 by 297 mm, 8.27 by 11.70 in)	_	Limit to media-fill mark on the media width guides
	Transparencies	Letter (8.50 by 11 in, 215.90 by 279.40 mm) A4 (210 by 297 mm, 8.27 by 11.70 in)	4 to 5 mils (0.10 to 0.13 mm) thick ^a	Limit to media-fill mark on the media width guides
Trays 2 and 3	Paper: Plain Preprinted Letterhead Prepunched Bond Recycled Color Glossy	Letter (8.50 by 11 in, 215.90 by 279.40 mm) Legal (8.50 by 14 in, 215.90 by 355.60 mm) A4 (210 by 297 mm, 8.27 by 11.70 in) Tray 3 only 11 by 17 in (279.40 by 431.80 mm) A3 (297 by 420 mm, 11.70 by 16.55 in)	16 to 28 lb (60 to 105 g/m ²) bond	500 sheets of 20 lb (75 g/m²) bond Limit to media-fill mark on the media width guides
	Transparencies	Letter (8.50 by 11 in, 215.90 by 279.40 mm) A4 (210 by 297 mm, 8.27 by 11.70 in)	4 to 5 mils (0.10 to 0.13 mm) thick ^a	Limit to media-fill mark on the media width guides

Tray Location	Media Type	Media Size (Common Name and Dimensions)	Media Weight	Maximum Capacity
Tray 4	Paper: Plain Preprinted Letterhead Prepunched Bond Recycled Color Glossy	Letter (8.50 by 11 in, 215.90 by 279.40 mm) Legal (8.50 by 14 in, 215.90 by 355.60 mm) 11 by 17 in (279.40 by 431.80 mm) A4 (210 by 297 mm, 8.27 by 11.70 in) JIS B4 (257 by 364 mm, 10.13 by 14.34 in) A3 (297 by 420 mm, 11.70 by 16.55 in)	16 to 28 lb (60 to 105 g/m ²) bond	2,000 sheets of 20 lb (75 g/m²) bond Limit to media-fill mark on the media width guides

a. HP recommends using 5 mil (0.13 mm) thick transparencies with this printer.

Supported Media Weights and Sizes for the Optional Multi-bin Mailbox

The following table lists the types and sizes of media supported by multi-bin mailbox output bins.

Bin	Media Type	Media Size (Common Name and Dimensions)	Media Weight	Maximum Capacity
Mailboxes	Paper: Plain Preprinted Letterhead Prepunched Bond Recycled Color	Letter (8.50 by 11 in, 215.90 by 279.40 mm) Legal (8.50 by 14 in, 215.90 by 355.60 mm) 11 by 17 inch (279.40 by 431.80 mm) A4 (210 by 297 mm, 8.27 by 11.70 in) A3 (297 by 420 mm, 11.70 by 16.55 in) JIS B4 (257 by 364 mm, 10.13 by 14.34 in)	16 to 28 lb (60 to 105 g/m²) bond	250 sheets of 20 lb (75 g/m ²) bond

Bin	Media Type	Media Size (Common Name and Dimensions)	Media Weight	Maximum Capacity
Left (face-up) Output Bin	Paper: Plain Preprinted Letterhead Prepunched Bond Recycled Color Card Stock Heavy (greater than 28 lb/105 g/m2 bond) Glossy	Letter (8.50 by 11 in, 215.90 by 279.40 mm) Legal (8.50 by 14 in, 215.90 by 355.60 mm) 11 by 17 in (279.40 by 431.80 mm) Executive (7.25 by 10.50 in, 184.15 by 266.70 mm) A4 (210 by 297 mm, 8.27 by 11.70 in) A5 (148 by 210 mm, 5.83 by 8.27 in) A3 (297 by 420 mm, 11.70 by 16.55 in) JIS B5 (182 by 257 mm, 7.17 by 10.13 in) JIS B4 (257 by 364 mm, 10.13 by 14.34 in) ISO B5 (176 by 250 mm, 6.93 by 9.85 in) 12 by 18.50 in (304.80 by 469.90 mm) 312 by 440 mm (12.29 by 17.33 in) Custom minimum 99 by 190 mm (3.90 by 7.49 in), maximum 304 by 469 mm 11.98 by 18.48 in)	16 to 58 lb (60 to 216 g/m²) bond	125 sheets of 20 lb (75 g/m²) bond
	Labels	Letter (8.50 by 11 in, 215.90 by 279.40 mm) A4 (210 by 297 mm, 8.27 by 11.70 in)	_	
	Transparencies	Letter (8.50 by 11 in, 215.90 by 279.40 mm) A4 (210 by 297 mm, 8.27 by 11.70 in)	4 to 5 mils (0.10 to 0.13 mm) thick ^a	_

Bin	Media Type	Media Size (Common Name and Dimensions)	Media Weight	Maximum Capacity
	Envelopes	Commercial #10 (Com10) (4.10 by 9.50 in, 104.14 by 241.30 mm) Monarch (3.90 by 7.50 in, 99.06 by 190.50 mm) C5 (162 by 229 mm, 6.38 by 9.02 in) DL (110 by 220 mm, 4.33 by 8.67 in) B5 (176 by 250 mm, 6.93 by 9.85 in) Double Post Card (JPOSTD) (148 by 200 mm, 5.83 by 7.88 in)	Maximum 24 lb (90 g/m²) bond	30 Monarch-sized envelopes

a. HP recommends using 5 mil (0.13 mm) thick transparencies with this printer.

Supported Media Weights and Sizes for the Optional Duplexer

The following table lists the types and sizes of media supported by the optional duplexer.

	Media Type	Media Size (Common Name and Dimensions)	Media Weight	Maximum Capacity
Duplexer	Paper: Plain Preprinted Letterhead Prepunched Bond Recycled Glossy	Letter (8.50 by 11 in, 215.90 by 279.40 mm) Legal (8.50 by 14 in, 215.90 by 355.60 mm) 11 by 17 inch (279.40 by 431.80 mm) A4 (210 by 297 mm, 8.27 by 11.70 in) A3 (297 by 420 mm, 11.70 by 16.55 in) JIS B4 (257 by 364 mm, 10.13 by 14.34 in) B5 (176 by 250 mm, 6.93 by 9.85 in)	16 to 28 lb (60 to 105 g/m ²) bond	

Supported Media Weights and Sizes for the Optional 3000-sheet Stapler/Stacker and **Optional 3000-sheet Stacker**

The following table lists the types and sizes of media supported by the optional 3000-sheet Stapler/Stacker and 3000-sheet Stacker tray, bin, or stapler.

Tray, Bin, or Stapler	Media Type	Media Size (Common Name and Dimensions)	Media Weight	Maximum Capacity
Left (face-up) Output Bin	Paper: Plain Preprinted Letterhead Prepunched Bond Recycled Color Card Stock Heavy (greater than 28 lb/105 g/m2 bond) Glossy	Letter, ISO A4 (landscape orientation only) Legal, Ledger (11 x 17 in.), A3, JIS B4, JIS Double Postcard, JPostD, JIS B5, A5, Executive, JIS Exec, 8K, 16K (portrait orientation only) Custom: Minimum - 190 mm length x 98 mm width Maximum - 460 mm length x 305 mm width Universal Envelopes: COM 10, C5, DL, Monarch, B5 (portrait orientation only)	16 to 53 lb bond (60 to 199 g/m²)	Up to 125 sheets Letter (20 lb bond) A4 (80 g/m²)

Tray, Bin, or Stapler	Media Type	Media Size (Common Name and Dimensions)	Media Weight	Maximum Capacity
Stacker Bin (Optional Bin 1)	Paper: Plain Preprinted Letterhead Prepunched Bond Recycled Color	Letter, ISO A4 (landscape orientation only) Legal, Ledger (11 x 17 in.), A3, JIS B4, JIS B5, A5, Executive, JIS Exec, 8K, 16K (portrait orientation only) Custom: Minimum - 190 mm length x 148 mm width Maximum - 460 mm length x 297 mm width Note Envelopes, transparencies, and labels are ONLY supported in the Face-up Bin.	16 to 28 lb bond (60 to 110 g/m ²)	Up to 3,000 sheets Letter (20 lb bond) A4 (80 g/m²) Note The Stacker Bin's capacity varies depending on the paper's size and weight. For example, using 11 x 17 in. (20 lb bond), the capacity can be approximately 1,500 sheets.
Stapler	Paper: Plain Preprinted Letterhead Prepunched Bond Recycled Color	Letter, ISO A4 (landscape orientation only) Legal, Ledger (11 x 17 in.), A3, JIS B4, JIS B5, A5, Executive, JIS Executive, 8K, 16K (portrait orientation only) Note Envelopes, transparencies, and labels are ONLY supported in the Face-up Bin.	16 to 28 lb bond (60 to 110 g/m ²)	Maximum 5 mm stack height. For example, 50 sheets of 20 lb bond. Note The stapling capacity varies depending on the paper's thickness.

Preprinted Forms and Letterhead

Observe the following guidelines to avoid problems with preprinted forms and letterhead.

- Forms and letterhead must have been printed with heat-resistant inks that will not melt, vaporize, or release hazardous emissions when subjected to the printer's fusing temperatures (approximately 374° F, or 190° C).
- The inks must be non-flammable and must not adversely affect any printer rollers.
- Forms and letterhead should be sealed in a moisture-proof wrapping to prevent moisture damage during storage.
- Inks must be completely dry on forms and letterhead before they are used in the printer. Ink that is not completely dry can come off the page during the fusing process.

Recycled Media

Choose recycled media that meets the same specifications as standard paper (see "<u>Supported Media Weights and Sizes for Input Trays</u>" earlier in this chapter). HP recommends that recycled media contain no more than five percent ground wood.

Envelopes

Envelopes can only be printed from tray 1. The weight of the envelope paper should not exceed 24 lb (90 g/m²) bond; otherwise, jamming might occur. For more information on printing envelopes, see "Printing Envelopes from Tray 1" later in this chapter.

- Envelopes should lie flat, with less than 0.25 inches (6.35 mm) curl.
- Output envelopes to the left (face-up) output bin rather than to the top (face-down) output bin to reduce curl.
- The optional multi-bin mailbox does not support envelopes except in its left (face-up) output bin.
- Do not use envelopes with windows or clasps.
- Make sure envelopes are not wrinkled, nicked, or otherwise damaged.
- Envelopes with a peel-off adhesive strip or with more than one flap must use adhesives compatible with the printer's fusing temperatures (approximately 374° F, or 190° C). Extra flaps or strips can result in wrinkling or creasing, and can cause jamming.
- All folds must be well scored and sharply creased.
- Envelopes must be tightly constructed and should not contain air.
 Envelopes that contain air may wrinkle as they pass through the printer.

Transparencies

CAUTION

Use only transparencies supported for use in this printer, such as HP Color LaserJet transparencies (for ordering information, see "Accessories, Options, and Related Products" in chapter 8). Using transparencies that do not meet the specifications for this printer can cause poor print quality, media jams, and damage to the printer.

Although this printer supports transparencies between 4 and 5 mils (0.10 to 0.13 mm) thick, HP recommends using 5-mil (0.13-mm) thick transparencies.

To prevent damage to the printer, transparencies must be able to withstand the printer's fusing temperature (approximately 374° F, or 190° C).

Handle transparencies by the edges. Oils from your fingers can be deposited on the transparencies, causing print quality problems.

Heavy Paper Stock

Heavy paper stock is any paper heavier than 28 lb up to 58 lb (105 to 216 g/m²) bond. Always print heavy paper stock from tray 1. In the printer driver, select **Heavy Paper** as the paper type on the Paper tab to ensure the correct finish on the media. Also, use the left (face-up) output bin to prevent media jams. For more information on changing the printer driver settings, see the online help.

Do not use extremely heavy paper stock (greater than 58 lb, or 216 g/m² bond). Misfeeds, mis-stacking, media jams, poor toner fusing, poor print quality, and excessive mechanical wear can result.

Labels

Labels consist of three parts: the top or face sheet that the printer prints on, the adhesive, and the carrier sheet (also referred to as the backing or liner). When printing on labels with this printer, observe the following:

- Top sheets, which are the printing surface, are usually composed of xerographic paper. Label top sheets must provide good toner adhesion.
- Carrier sheets must be compatible with the printer's fusing temperature (approximately 374° F, or 190° C) and the pressure of the fusing process. The carrier sheet also must be coated for easy release of the top sheet.

CAUTION

Do not remove labels from the carrier sheet and then print on the remaining labels; printer damage can result.

- Adhesives must be able to withstand the printer's fusing temperature (approximately 374° F, or 190° C). The adhesives must not produce emissions that exceed exposure levels or threshold limits established by the U.S. Occupational Safety and Health Administration and other safety agencies. Adhesives must not come in direct contact with any part of the printer. No adhesive should be pressed out of the edges or between die-cuts (the cuts between individual labels).
- Labels should be arranged so that the carrier sheet is not exposed. Using label stock with spaces between the horizontal rows of labels might result in labels peeling off during printing, causing jams and possible printer damage. Labels might be specifically manufactured to leave a margin around the outside edges that correspond to the outer margins of the printable area. Do not remove the excess top sheet material from the carrier sheet.

Note

Labels could meet all of the guidelines in this chapter and still not print satisfactorily because of the printing environment or other variables over which HP has no control.

Colored Media

Colored media should be of the same high quality as white xerographic paper. Pigments used must be able to withstand the printer's fusing temperature (approximately 374° F, or 190° C). Do not use media with colored coating that was added after the media was produced.

The printer cannot detect the color of media you are using. Varying the shade or color of the media can change the shades of the printed colors.

Media to Avoid

Follow these guidelines to avoid poor print quality or damage to the printer:

- Do not use media that contains embossing.
- Do not use media with cutouts or perforations.
- Do not use multi-part forms.
- Do not use media with irregularities, such as tabs or staples.
- Do not use preprinted media that contains thermography or inks that melt, vaporize, or release hazardous emissions when subjected to the fusing temperature (approximately 374° F, or 190° C).
- Do not use any media that produces hazardous emissions, melts, offsets, or discolors when heated to the printer's fusing temperatures (approximately 374° F, or 190° C).
- Do not use media that has already been through a photocopier or printer, even if there is no printing on the page.
- Do not use media with a watermark if solid fill areas are to be printed.
- Do not use transparencies designed for ink jet printers.


Controlling Your Print Job

Control your print jobs from the printer or your computer. Changes to the printer setup made from the printer control panel become default settings for all print jobs. Changes to the printer setup made through the printer driver on the computer will override settings in the printer control panel and affect only the print jobs initiated from that computer. Changes made from an application will remain in effect for the current print job or until changed, depending on the application. Most changes made to the printer should be made from the computer so that the changes do not affect other users' print jobs.

Changing Page Orientation

The following figure shows different page orientations:

Figure 7

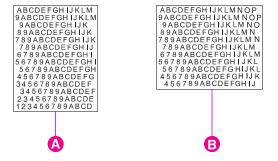


- A Portrait
- **B** Landscape


Control the page orientation from your application, the printer driver, or the printer control panel (PCL print jobs only):


- To print across the width (short edge) of the media, select portrait page orientation from your application or the printer driver.
- To print across the length (long edge) of the media, select landscape page orientation from your application or the printer driver.

For more information on changing the page orientation, see the online help for your application or the printer driver.

Printing from Tray 1

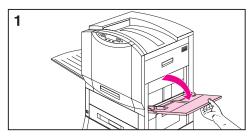

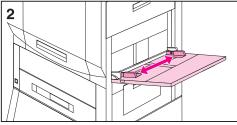

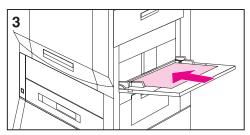

Load up to 100 sheets of 20 lb (75 g/m²) bond paper in tray 1.

CAUTION

To avoid media jams, never add or remove media from tray 1 while the printer is printing from tray 1.


To load media into tray 1

- 1 Open tray 1.
- 2 Slide the media width guides to the size that matches the media.
- 3 Load up to 100 sheets of 20 lb (75 g/m²) bond paper into the input tray face up, with the long edge of the letter- or A4-sized media toward the printer. For more information on loading other sizes into tray 1, see "Orienting Media" later in this chapter.

Note

Do not fill the input tray above the media-fill mark on the media guides.

- 4 Slide the media into the printer as far as it will go (until the leading edge rests lightly against the printer) and adjust the media width guides until the media fits squarely and firmly between the media width guides without bending the media.
- 5 Use the control panel to select the size and type of media in tray 1 (see <u>Configuring Media Type and Size</u> in chapter 2).

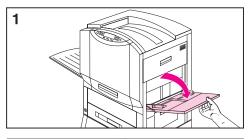





Printing Envelopes from Tray 1

Load up to ten envelopes in tray 1.

CAUTION

Never use envelopes with clasps, snaps, windows, coated linings, or self-stick adhesives. These items can damage the printer. Never try to print on both sides of an envelope. Media jams and printer damage can result.

To load envelopes in tray 1

- 1 Open tray 1.
- Place up to ten envelopes in tray 1 between the media width guides, face up, with the back flap against the input tray and the return address area (short edge of the envelope) towards the printer.
- 3 Slide the media width guides until they touch both sides of the envelopes without bending the envelopes.
- 4 Set the envelope size in the printer control panel. For more information on configuring the printer control panel, see "Configuring Media Type and Size" in chapter 2.

To print envelopes from tray 1

- 1 Select envelope in your application or in the printer driver if your application does not support printing on envelopes. For more information on printing on envelopes, see the online help.
- **2** Set the envelope size and type in your application or the printer driver.
- 3 If your application does not have an option to automatically format an envelope, select Landscape for the page orientation.
- 4 Use the following table to set the margins for a return and mailing address on a Commercial #10- (Com10) or DL-sized envelope.

Type of Address	Left Margin	Top Margin
Return	0.50 in (12.70 mm)	0.50 in (12.70 mm)
Mailing	4 in (101.60 mm)	2 in (50.80 mm)

For other sizes of envelopes, adjust the margins as necessary. Avoid printing over the area where the envelope's three back flaps (seams) meet.

5 Print the file from your application.

Printing Tips for Tray 1

- For letter- or A4-sized media, load the media with the **long edge** of the media toward the printer.
- For legal-, executive-, 11-by-17 inch, or A3-sized media, load the media with the **short edge** of the media toward the printer.
- Heavy paper stock is any paper heavier than 28 lb up to 58 lb (105 to 216 g/m²) bond. Always print heavy paper stock from tray 1. In the printer driver, select **Heavy Paper** as the paper type on the Paper tab to ensure the correct finish on the media. Also, use the left (face-up) output bin to prevent media jams.
- To print on custom-sized media, set the media size in your application or the printer driver. The printer will accept custom sizes between 3.90 by 7.49 in (99 by 190 mm) and 12 by 18.50 in (304.80 by 469.90 mm). If the media size set in your application or the printer driver does not match the size of the media being fed into the printer, then the printer might not feed the media or the media might jam.
- Do not use media heavier than 58 lb (216 g/m²) bond.
- Handle transparencies by the edges to avoid leaving fingerprints on the transparency.


CAUTION

Use only transparencies and glossy media that meet the specifications for this printer. Using an incorrect type of media can damage the printer. For more information on glossy media, see "Supported Media Weights and Sizes for Input Trays" earlier in this chapter.

Orienting Media

Orienting Media in Tray 1


Figure 8

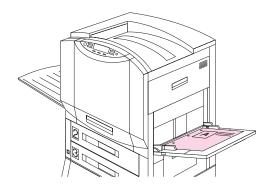

Place media into the input tray with the side to be printed on face up for single-sided printing (see figure 8). For letter- or A4-sized media, place the top of the page toward the rear of the printer and the long edge toward the printer. For media sizes larger than letter and A4, place the top (short) edge of the page toward the printer.

Load letterhead and preprinted forms face up.

Figure 9

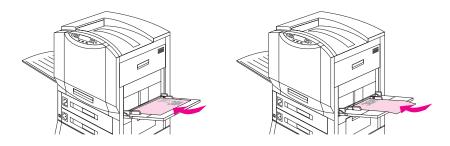


The duplexer prints the second side of the paper first, so paper such as letterhead and preprinted paper needs to be oriented as shown.

- Load letter and A4 paper with the front side down and the top, short edge toward the rear of the printer for double-sided printing.
- Load other sizes of paper with the front side down and the top, short edge toward the printer for double-sided printing.

Orienting Media for All Other Trays


Figure 10

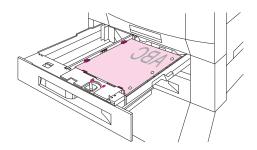

Place the media into the input tray with the side to be printed on face down (see figure 10) for single-sided printing.

Load letterhead with the top toward the rear of the input tray.

Figure 11

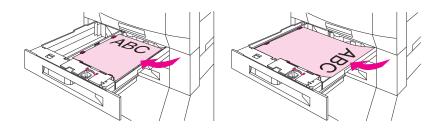

- Load letter and A4 paper with the front side up and the top, short edge toward the rear of the tray for double-sided printing.
- Load other sizes with the front side up and the top, short edge toward the right of the tray for double-sided printing.


Media Orientation for Printing Prepunched Paper


When printing with prepunched paper, always load the paper with the holes toward the printer for tray 1 (see figure 8). Load the prepunched paper with the holes toward the right of the printer for trays 2, 3, and 4 (see figure 10). When printing on both sides of prepunched paper, you must select prepunched paper as the paper type in the Paper Handling menu from the control panel and select prepunched paper from your printer driver.


Note


When printing on both sides of prepunched paper with stapling enabled, the staple will be in the lower right corner of your print job.

Printing from Trays 2 (some printer models only) and 3

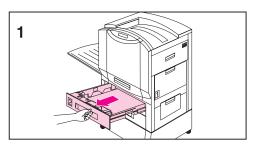

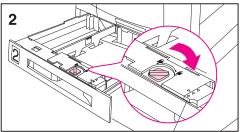

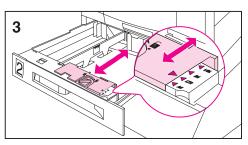

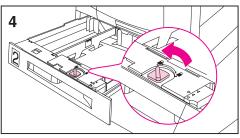

Load up to 500 sheets of 20 lb (75 g/m^2) bond paper in trays 2 and 3.

To load media into trays 2 and 3

CAUTION


To avoid media jams, never open an input tray while the printer is printing from that input tray.


Firmly grip the handle in the center of the input tray, squeeze the release lever, and pull the input tray out until it stops.


Note


To use the media size currently configured in the input tray, go to step 8. To use a media size different from the current setting, go to step 2 to reconfigure the input tray.

- 2 Turn the media guide lock to the unlocked position.
- 3 Slide the media width guides to the size that matches the media.
- 4 Turn the media guide lock to the locked position.

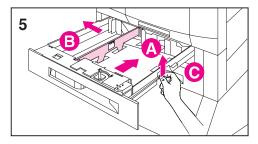

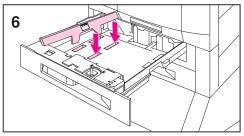

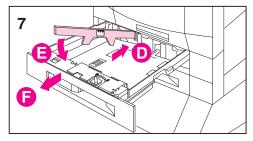

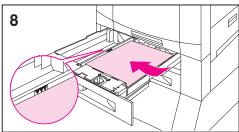

5 Adjust the left media guide by pushing it in (A) and lifting up and out (B).


Note


Lift here (C) to remove paper from the tray.

- 6 Position the left media guide over the correct media size marked on the input tray.
- 7 Press the left media guide into the rear slot (D), and then lower it down (E) into the front slot (F). Verify the guide is not skewed.
- 8 Load up to 500 sheets of 20 lb (75 g/m²) bond paper in the input tray. For information on loading different types of media, see "Orienting Media for All Other Trays" later in this chapter.

CAUTION

Do not fill the input tray above the media-fill mark. Excessive media in the input trays can cause media jams.

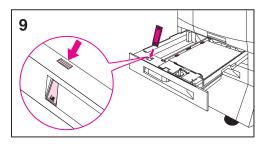

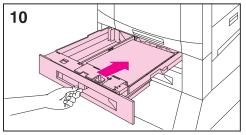

- **9** Ensure that the media size tab on the front of the input tray is set to the correct media size.
- 10 Slide the input tray back into the printer.
- 11 Set the media type in the printer control panel. For more information on configuring the printer control panel, see "Configuring Media Type and Size" in chapter 2.

Always configure the media type in the printer control panel to prevent users from printing on the wrong media type (such as transparencies instead of plain paper).

Note

If media curls or skews excessively during printing, open the input tray and turn the stack of media over. To avoid media jams, never open the input tray while the printer is printing.


To print from trays 2 and 3


- Select the media type and size from your application or the printer driver. To set the media type and size in the printer control panel, see "Configuring Media Type and Size" in chapter 2.
- 2 Print the file from your application.


Printing Tips for Trays 2 and 3


- Handle transparencies by the edges to avoid leaving fingerprints on the transparencies.
- Use transparencies that meet the media specifications for this printer. Using the incorrect type of transparencies can damage the printer. For more information on transparencies, see "Supported Media Weights and Sizes for Input Trays" earlier in this chapter.
- Use letterhead that meets the media specifications for this printer.
 For more information on letterhead specifications, see
 "Preprinted Forms and Letterhead" earlier in this chapter.

Printing from Tray 4 (some printer models only)

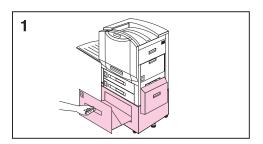

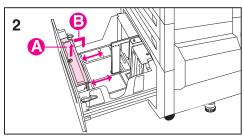

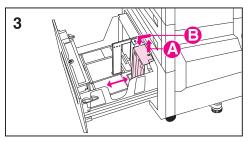

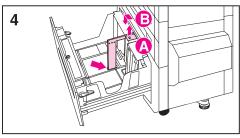

Load up to 2,000 sheets of 20 lb (75 g/m²) bond paper in tray 4.

To load media into tray 4

Firmly grip the handle in the center of the input tray, squeeze the release lever, and pull the input tray out until it stops.


Note


To use the media size currently configured in the input tray, go to step 5. To use a different size, go to step 2.


- 2 Adjust the front media guide by pulling up on the pin (A), placing the media guide into the slots on the top and bottom of the input tray that correspond to the media size you are loading (B), and pushing in the pin.
- 3 Repeat step 2 to adjust the back media guide.
- Repeat step 2 to adjust the left media guide.

Note

For 11-by-17 inch media, move the left media guide to the back of the input tray.

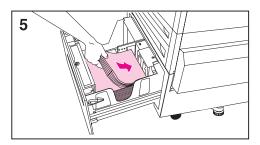

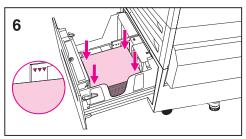

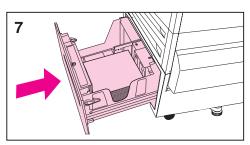

5 Load up to 2,000 sheets of 20 lb (75 g/m²) bond paper into the input tray. For information on loading different types of media, see "Orienting Media for All Other Trays" later in this chapter.

CAUTION

Do not place anything in the input tray to the left of the media guides because the input tray will not be able to lift the media to print and could damage the input tray. Also, do not fill the input tray above the media-fill mark on the left media guide. Excessive media can cause media jams.

- 6 Press down on all four corners of the media stack to ensure the media rests flat in the input tray.
- 7 Close tray 4.
- 8 Set the media type in the printer control panel. For more information on configuring the printer control panel, see "Configuring Media Type and Size" in chapter 2.

Note

Always configure the media type in the printer control panel to prevent printing on the wrong media type (such as transparencies instead of plain paper).

To print from tray 4

- 1 Select the media type and size from your application or the printer driver. To set the media type and size in the printer control panel, see "Configuring Media Type and Size" in chapter 2.
- **2** Print the file from your application.

Printing Tips for Tray 4 (some printer models only)

Use letterhead that meets the media specifications for this printer (see "Preprinted Forms and Letterhead" earlier in this chapter).

4 Advanced Printing Features

Overview

This chapter introduces some **advanced printing tasks** to help you take full advantage of the printer's features. These tasks are "advanced" because they require you to change settings from a software application, the printer driver, or the printer's control panel.

EN Overview 87

Using the HP TonerGauge

The HP TonerGauge feature allows the user to estimate how much toner is left in the cartridges. The HP TonerGauge indicator appears on the configuration page, on the status tab of the driver, and in HP Web JetAdmin (for the network administrator). The toner level indicated by the gauge may be used to estimate whether enough toner remains in the cartridges to complete a print job.

Note

The user must reset the HP TonerGauge each time a new cartridge is installed to ensure that the HP TonerGauge reports accurate information. See "Resetting the HP TonerGauge" on page 127.

Printing by Type and Size of Paper

You can configure the printer to select paper by **type** (such as plain or letterhead) and **size** (such as letter or A4), as opposed to **source** (a paper tray).

Benefits of Printing by Type and Size of Paper

If you frequently use several different kinds of paper, once trays are set up correctly, you do not have to check which paper is loaded in each tray before you print. This is especially helpful when the printer is shared and more than one person loads or removes paper.

Printing by type and size of paper is a way to be sure that print jobs always print on the desired paper. (Some printers have a feature that "locks out" trays to prevent printing on the wrong paper. Printing by type and size of paper eliminates the need to lock out trays.)

To print by type and size of paper, do the following:

- 1 Be sure to adjust and load the trays correctly. (See the sections on loading paper, starting on page <u>77</u>.)
- 2 From the Paper Handling Menu in the printer's control panel, select the paper **type** for each tray. If you are unsure what type you are loading (such as bond or recycled), check the label on the package of paper. For supported types, see page <u>60</u>.
- **3** Select the paper size settings from the control panel.
 - Tray 1: If custom paper is loaded, set the size of custom paper from the Printing Menu to match the paper loaded in tray 1.
 - Other trays: Paper size settings are adjusted when paper is properly loaded into the printer. (See the sections on loading paper, starting on page 77.)

From the software or printer driver, select the desired type and 4 size of paper.

Note

The type and size settings can also be configured from HP Web JetAdmin for networked printers. See the printer software help.

Settings in the printer driver and software application override control panel settings. (Software application settings override printer driver settings.)

Different First Page

1 For Windows, select "Use different paper for first page" in your printer driver. Choose a tray or type under First Page for the first page and then select a tray or type from Other Pages for the remaining pages. Place the paper with the side-to-be-printed up, the top of the page facing the rear of the printer, and the long edge leading into the printer.

For Macintosh, select "First from" and "Remaining from" in the print dialog box.

Note

Where and how you make selections depends on your software application or associated printer driver. (Some options may only be available through the printer driver.)

2 Load the paper for the remaining pages of the document into another tray. You may select the first and remaining pages by type of paper. For more information, see <u>Printing by Type and Size of Paper</u> on page 89.


Note

The paper size must be the same for the first and remaining pages.

Printing Multiple Pages on One Sheet of Paper

You can print more than one page on a single sheet of paper. This feature is available in some printer drivers and provides a cost-effective way to print draft pages.

To print more than one page on a sheet of paper, look for the Pages Per Sheet option in the Finishing Tab of the printer driver. (This is sometimes called 2-up, 4-up, or n-up printing.)

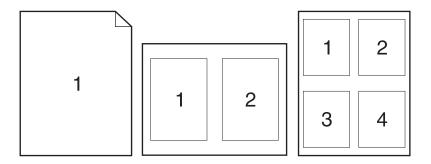

Creating and Using Quick Sets

Quick Sets allow you to save the current driver settings (for example, page orientation, n-up printing or paper source) for reuse. For convenience, Quick Sets can be selected and saved from most printer driver tabs. You can also restore printer driver default settings by selecting Defaults from the Quick Sets drop-down list.

Note

Quick Sets are available only for Windows.

Quick Sets

Printer Driver	Procedure			
(Windows 3.1/9x/ NT 4.0/Windows 2000)	Cr	Creating Quick Sets		
	20 the	Note: If you are using NT 4.0 or Windows 2000 and are running the printer driver from the server, you need administrator rights to save new Quick Sets.		
	1	Access the printer driver.		
	2	Select the desired print settings.		
	3	In the Quick Sets box, type a name for the selected settings (for example "Quarterly Report" or "My Project Status").		
	4	Click Save.		
	5	When you save Quick Sets, all current driver settings are saved. The printer driver will now remember these settings.		
	6	Click OK.		

Quick Sets (continued)

Printer Driver	Procedure	
	Using Quick Sets	
	1	Access the printer driver.
	2	Select the desired item from the Quick Sets drop-down list.
	3	Click OK. The printer is now set to print according to the settings in the Quick Sets you selected.

Quick Copying a Job

The quick copy feature prints the requested number of copies of a job and stores a copy of the job on the printer's hard disk. Additional copies of the job can be printed later.

CAUTION

The quick copy feature allows every user to print the last 32 jobs. This feature can be turned off in the driver.

This feature is the default for every job. This feature can be turned off from the driver. For more information about specifying the number of quick copy jobs that can be stored, see the QUICK COPY JOBS control panel item described on page 32.

Printing Additional Copies of a Quick Copy Job

To print additional copies of a job stored on the printer's hard disk from the control panel:

- 1 Press Menu repeatedly until QUICK COPY JOBS MENU appears.
- 2 Press | TEM until the desired job name appears.
- **3** Press Select to select the job. COPIES=1 appears.
- 4 Press VALUE + until the desired number of copies appears.
- **5** Press **SELECT** to print the job.

Deleting a Stored Quick Copy Job

When a user sends a quick copy job, the printer overwrites any previous jobs with the same name. If there is not a quick copy job already stored under the job name and the printer needs additional space, the printer may delete other stored quick copy jobs starting with the oldest job. The default number of quick copy jobs that can be stored is 32. The number of quick copy jobs that can be stored is set from the control panel.

Note

If you turn the printer off and then back on, all quick copy, proof and hold, and private jobs are deleted.

A stored quick copy job can also be deleted from the control panel.

- 1 Press MENU repeatedly until QUICK COPY JOBS MENU appears.
- **2** Press ITEM until the desired job name appears.
- **3** Press Select to select the job. COPIES=1 appears.
- 4 Press VALUE until DELETE appears.
- **5** Press **SELECT** to delete the job.

Proofing and Holding a Job

The proof and hold feature provides a quick and easy way to print and proof one copy of a job and then print the additional copies.

To permanently store the job and prevent the printer from deleting it when space is needed for something else, select the Stored Job option in the driver.

Printing the Remaining Copies of a Held Job

The user can print the remaining copies of a job held on the printer's hard disk from the control panel.

- 1 Press Menu repeatedly until QUICK COPY JOBS MENU appears.
- 2 Press ITEM until the desired job name appears.
- **3** Press Select to select the job. COPIES=1 appears.
- 4 Press VALUE + until the desired number of copies appears.
- **5** Press SELECT to print the job.

Deleting a Held Job

When a user sends a proof and hold job, the printer automatically deletes that user's previous stored proof and hold job. If there is not a proof and hold job already stored for that job name and the printer needs additional space, the printer may delete other stored proof and hold jobs starting with the oldest one.

Note

If you turn the printer off and then back on, all quick copy, proof and hold, and private jobs are deleted.

A stored proof and hold job can also be deleted from the control panel.

- 1 Press Menu repeatedly until QUICK COPY JOBS MENU appears.
- 2 Press ITEM until the desired job name appears.
- **3** Press Select to select the job. COPIES=1 appears.
- 4 Press VALUE until DELETE appears.
- **5** Press **SELECT** to delete the job.

Printing a Private Job

The private printing feature lets a user specify that a job is not printed until that user releases it using a 4-digit Personal Identification Number (PIN) through the printer's control panel. The user specifies the PIN in the driver and it is sent to the printer as part of the print job.

Specifying a Private Job

To specify that a job is private from the driver, select the Private Job option and type a 4-digit PIN.

Releasing a Private Job

The user can print a private job from the control panel.

- 1 Press MENU repeatedly until PRIVATE/STORED JOBS MENU appears.
- 2 Press ITEM until the desired job name appears.
- 3 Press SELECT. PIN: 0000 appears.
- Press VALUE + to change the first number of the PIN, and then press SELECT. An * appears in place of the number. Repeat these steps to change the remaining three numbers of the PIN. COPIES=1 appears.
- 5 Press VALUE + until the desired number of copies appears.
- **6** Press **SELECT** to print the job.

Deleting a Private Job

A private job is automatically deleted from the printer's hard disk after the user releases it for printing, unless the user selects the Stored Job option in the driver.

Note

If you turn the printer off and then back on, all quick copy, proof and hold, and private jobs are deleted.

A private job can also be deleted from the printer's control panel before it is ever printed.

- 1 Press Menu repeatedly until PRIVATE/STORED JOBS MENU appears.
- 2 Press ITEM until the desired job name appears.
- 3 Press Select to select the job. PIN: 0000 appears.
- 4 Press VALUE + to change the first number of the PIN, and then press SELECT. An * appears in place of the number. Repeat these steps to change the remaining three numbers of the PIN.
 COPIES=1 appears.
- **5** Press VALUE until DELETE appears.
- **6** Press SELECT to delete the job.

Storing a Print Job

The user can download a print job to the printer's hard disk without printing it. The user can then print the job at any time through the printer's control panel. For example, a user may want to download a personnel form, calendar, time sheet, or accounting form that other users can access and print.

To store a print job permanently on the hard disk, select the Stored Job option in the driver when printing the job.

Printing a Stored Job

The user can print a job stored on the printer's hard disk from the control panel.

- 1 Press MENU repeatedly until PRIVATE/STORED JOBS MENU appears.
- 2 Press | TEM until the desired job name appears.
- **3** Press Select to select the job name. COPIES=1 appears.
- 4 Press VALUE + until the desired number of copies appears.
- **5** Press SELECT to print the job.

Deleting a Stored Job

Jobs stored on the printer's hard disk can be deleted from the control panel.

- 1 Press MENU repeatedly until PRIVATE/STORED JOBS MENU appears.
- 2 Press ITEM until the desired job name appears.
- **3** Press Select to select the job. COPIES=1 appears.
- 4 Press VALUE until DELETE appears.
- 5 Press SELECT to delete the job.

Variable Data Printing

Some applications produce documents containing two types of information: static information like background patterns, and variable information that changes from page to page. In a print job, variable data printing separates the static and dynamic information and sends the static information to the printer only once. Pages print faster because repetitive information does not have to be processed separately for each page.

Note

This feature is automatic. No user interaction is required.

Booklet Printing

Booklet printing allows the pages of a print job to be arranged so that the document can be folded and stapled or bound into a book. Booklet printing is supported in PostScript and PCL5c in Windows 3.x, 9x, NT 4.0, Windows 2000, and using the Booklet Maker for Macintosh.

Note

Duplex printing must be selected in order to use the Booklet Printing feature.

Offline Booklet Printing delivers the job to the top (face-down) output bin. The user can remove the job from the printer and bind or staple it. (Right and left binding options are provided for Asian languages.) The user may also insert one full blank page (2 booklet pages) at any location in the booklet.

Inline Booklet Printing uses a finishing device like a multi-bin mailbox to staple or bind the booklet. (Booklet Printing requires the document be sent to the left (face-up) output bin instead of the top (face-down) output bin.) The user selects the destination of the print job, and the software places the pages in the proper order for binding.

Custom Order allows the user to specify the page sequence.

Print on Backside of Heavy Media

Print on Backside of Heavy Media allows you to print on both sides of media that is not supported in the automatic duplexer accessory.

- 1 Make sure that the appropriate media type is selected in the driver.
- 2 Select the face-up output bin for the destination.
- **3** Print the odd pages of the desired document from the software application.
- 4 Turn the media over (blank-side up) and place it in tray 1.
- 5 Select Print on Backside of Heavy Media from the Print Quality tab of the driver.
- 6 Select the face-up output bin for the destination.
- 7 Click OK, then print the even pages of the document.

HP JetSend Communications Technology



HP JetSend is a new technology from Hewlett-Packard that allows devices to communicate with each other simply and directly. HP JetSend is built into your printer, allowing it to receive information from any JetSend-enabled sending device anywhere on your network, whether

it is in the same office or at a remote location. Examples of JetSend sending devices include PCs or laptops running JetSend software or scanners with JetSend built in. JetSend uses simple IP addressing between networked devices.

You can visit the JetSend web site to learn which other devices are available to communicate easily and directly with your JetSend-enabled printer.

How the JetSend Communications Technology Works

Networked Devices

To use the JetSend capability between networked devices, print a configuration page to find your JetSend IP address, and give your address to anyone who wants to send information to your printer via JetSend.

From a JetSend sending device, a person only needs to enter the printer's IP address and press "send."

Managing Fonts and Forms on Disk

HP LaserJet Resource Manager (Windows)

The HP LaserJet Resource Manager should be installed only on the network administrator's computer. The HP LaserJet Resource Manager allows you to control hard disk features not found in the drivers. Bidirectional communication is required.

Note

HP LaserJet Resource Manager is not available for the Macintosh.

Use the HP LaserJet Resource Manager to do the following:

- Initialize disk.
- Download, delete, and manage fonts to disk across networks.
 - PostScript Type 1, PostScript Type 42 (True Type fonts converted to PostScript format), TrueType, and PCL bitmap fonts.

Note

To download Type 1 fonts, Adobe Type Manager must be loaded and turned on.

HP LaserJet Utility (Macintosh)

HP LaserJet Utility allows control of features that are not available in the driver. The illustrated screens make selecting printer features from the Macintosh computer easier than ever. Use the HP LaserJet Utility to do the following:

- Customize the printer's control panel messages.
- Name the printer, assign it to a zone on the network, download files and fonts, and change most of the printer settings.
- Set a password for the printer.
- From the computer, lock out functions on the printer's control panel to prevent unauthorized access. (See the printer software help.)
- Configure and set the printer for IP printing.

Using Color

Controlling Color Output with Printer Drivers

By varying the amount and pattern of the four toner colors applied to a page, the printer can produce more than 16 million colors. Use the printer drivers (the software installed with the printer) to control the color output for text, graphics, and photographs. The printer drivers enable computer applications to communicate with the printer and to use all of its features.

Access to the printer drivers depends on the computer system. For example, in a system using Microsoft Windows, use the application's Print Setup command to access your printer driver. For specific instructions on accessing the printer driver, see the online help files for your operating system.

Note

Applications override most printer settings, such as media size, copies, and media source. When possible, use application settings for adjustments.

Using Color

The color features of the driver are available on the properties page. Access the driver properties as it pertains to the specific operating system or application in use, then select the Color tab.

ColorSmart II

HP ColorSmart II technology optimizes the color and halftoning for each element in a document (such as text, graphics, and photographs).

- HP ColorSmart II uses the Screen Match setting to reproduce all elements in a document. HP ColorSmart II uses a smooth halftone for photographs and raster graphics, and uses a detail halftone for text and vector graphics. This setting provides consistent color treatment for everything on a page.
- When Transparency is selected in the Paper tab of the printer driver, HP ColorSmart II chooses specialized colors to provide the best projection quality.
- HP ColorSmart II is also the most reliable setting for PANTONE^{®*} color reproduction. For more information on using PANTONE colors, see "PANTONE Colors" later in this chapter.

Manual Mode

For custom color printing jobs, you can turn off HP ColorSmart II defaults and set color adjustments manually. The Manual mode allows you to adjust the color settings for text, graphics, and photographs separately by manipulating the available settings. The following settings apply to all types of media:

- Halftone—Changes the method used to produce lighter shades of solid colors.
 - **Smooth**—Works well for solid areas, gradients, and photographs by smoothing out fine color gradations and providing accurate color reproduction.
 - **Detail**—Works well for text, multiple-colored text, line art, and detail-oriented graphics by providing sharper edges.
- Color Adjustment—Changes the color settings for elements on the page.
 - Screen Match—Color is optimized for reproducing of sRGB monitor colors. (The term sRGB is generally used to define RGB, red/green/blue, color output for monitors.) This setting maximizes the similarities between the appearance of the printed document and the document as it appears on the monitor. Screen Match is the printer default input color source.
 - **Vivid**—Saturation of colors is enhanced to produce high-impact color appearance.
 - OHT—(Overhead Transparency) For optimized color quality for projection.

All settings in the printer driver will remain in effect until they are changed. The online help describes in more detail the printer color settings and options, and their effect on your output.

ICC/CMS

Some applications and operating systems support specific color management systems (CMS):

- ICC (International Color Consortium) is an international standard for color profiles that describe the color characteristics of devices, such as printers.
- ColorSync 2.x is Macintosh's color management system for System 7 and 8.
- ICM is Microsoft's color management system for Windows.

For information on downloading and selecting color profiles, see the online help.

If you are generating customized color profiles, use the same printer driver settings for both generating the profiles and printing.

Black and White

Selecting **Black and White** in the Color tab allows your color documents to be printed as black and white documents with shades of gray. This setting allows you to view preliminary copies of slides and hard copy output quickly and still interpret your color information. Printing in black and white also works well for color information that you wish to photocopy or fax.

Automatic PANTONE® Matching

The printer has a PANTONE Spot Name color matching utility. PANTONE has certified the printer and has mapped the PANTONE Spot Color names to the printer's CMYK values. This color matching utility uses the certified mapping to provide the best PANTONE color matching for the printer.

For the color matching utility to function, applications must pass the PANTONE names to the printer. Some applications substitute CMYK values to the printer if they cannot provide PANTONE names. If your application does not pass the PANTONE names to the printer, then the utility will be bypassed and color matching will depend on proper ink emulation. Selection of the proper ink emulation depends on the source of the palette (SWOP (Standard Web Offset Printing), EuroStandard, DIC, or None). The palette used for obtaining PANTONE CMYK values and the driver emulation mode setting should match.

CMYK Ink Set Emulation

You can select a CMYK ink emulation (SWOP, EuroStandard, DIC, or None - no emulation, device CMYK) from the dropdown menu to provide output similar to an offset press ink set. If color management is active in an application or OS, the ink emulation selected must be the same as when the printer was profiled.

Adjusting the Print Color and Quality Settings

For most color printing needs, HP ColorSmart II default settings will handle your color adjustments. For some print jobs, you might want to turn off HP ColorSmart II defaults and set color controls manually.

The following table shows default color settings in the printer driver and recommended printer driver settings for various types of printed output:

	Page Objects				
Printer Driver Setting/Desired Treatment	Text	Vector Graphics and Line Art	Raster Data (Text, Graphics, and Line Art)	Photographs	All Page Objects on Transparencies
HP ColorSmart II Default Setting	Screen Match Detail	Screen Match Detail	Screen Match Smooth	Screen Match Smooth	Color optimized for transparencies
Recommended Resolution of Input Data	N/A	N/A	600 dpi ^a	200 dpi or 300 dpi preferred (after scaling in your application)	N/A

a. The recommended input data resolution for raster data is 600 dpi.

For more information on choosing the color settings to produce the most accurate color reproduction, see "<u>Selecting Colors</u>" on the next page or see the online help.

Selecting Colors

The computer and printer use different color processing methods. Other factors, such as print media and lighting, also influence and limit your ability to match colors from the screen to your output.

In addition to the printer driver color controls described in this chapter and the media you choose for printing, the following tools can help you to control the color output.

PANTONE Colors

PANTONE colors are certified CMYK (cyan, magenta, yellow, and black) and sRGB color values in the PANTONE color matching system. This option affects your output only if your application supports PANTONE colors. See the application's instructions for using these colors. The color and halftone settings and the media you use will affect the appearance of printed PANTONE colors.

For the best PANTONE color reproduction, set the printer driver to **ColorSmart II** or make the selections shown in the table in "<u>Adjusting the Print Color and Quality Settings</u>" on the previous page. Or, if you are using the **Manual** setting, select **Screen Match** for the most accurate color reproduction. The device profiles for PANTONE Maps are created using the **Screen Match** setting; select this setting for best results. For more information on printer driver settings, see the online help or the readme file.

Color Swatch

With HP ColorSmart II selected, the Color Swatch program will send several pages of example colors and their accompanying RGB and CMYK values to the printer. These pages are useful for selecting or matching colors in applications that allow you to specify RGB or CMYK color values.

If you are using the RGB values, select **ColorSmart II** on the Color tab in the printer driver.

For information on using the Color Swatch utility, see the associated readme file.

Resolution Considerations for Graphics, Images, and Photographs

Graphics, images and photographs can come from many different sources such as digital cameras, scanners, and photograph CD-ROMs. Typical file extensions for images and photographs are .bmp, .fpx, .gif, .jpg, .png, and .tif. For these images, resolution decisions should be made based on the content of the image. When possible, import images at the size you plan to use (actual size).

- Graphics and line art should be imported at the maximum resolution. For best reproduction of raster graphics and line art, the printer driver halftone settings should be configured to enhance the critical feature. If the fill smoothness is critical, select Smooth. If the edge detail is critical, select Detail.
- Images should be at least 200 dpi, and preferably 300 dpi. The
 printer driver settings should be set to ColorSmart II. Or, if you
 are using the Manual setting, select Smooth Halftone and
 Screen Match color mode.

Note

Image resolutions of higher than 300 dpi will produce significantly larger files, but the print quality of the image will not necessarily improve.

Using Digital Cameras

When printing images captured by a digital camera, you might have to adjust the image quality. Adjust the images with the imaging software that came with the digital camera. Generally, for the most accurate color rendering, leave the digital image color mode in RGB. When you print the image, the printer will convert the RGB information to CMYK. For more information on adjusting the image quality of digital photographs, see the imaging software documentation.

For photographs, use **ColorSmart II** setting in the Color tab. Or, if you are using the **Manual** setting, select **Smooth Halftone** and **Screen Match** color mode. For more information on printer driver settings, see the online help.

Using Scanners

For the best image quality, make as many adjustments as possible in the scanner imaging software before scanning. These adjustments, many of which are listed below, can increase the resolution of the image, resulting in higher quality images:

- Select the appropriate image type (for example, color photograph, line art, or text).
- Select the optimum image resolution based on image type, at least 300 dpi for most images; however, select 600 dpi for line art, graphics, and text.
- Crop the image to scan only what you need. Scale the image for the optimum resolution when it is reproduced.
- Adjust the image sharpness, contrast, and brightness.
- Set the gamma correction to 2.2. For more information on scanner gamma correction, see the scanner's documentation.
- When possible, import images at the size you plan to use (actual size).

Adjusting the Color Balance

CAUTION

Adjusting the color balance will change the printer's calibration. Because this procedure adjusts parameters within the printer hardware, it will affect all print jobs. Check with your system administrator before making any changes to the color balance.

The printer automatically recalibrates the color settings. However, you can adjust the color manually from the default settings by changing the densities of the four toners (black, cyan, magenta, and yellow). Changing the Detail Halftone Adjust and Smooth Halftone Adjust allow you to independently adjust the color of objects on a page that use the smooth and detail halftones (such as text and graphics).

Any settings you change remain in effect until you change them again or restore the factory defaults.

Do not perform the color balance adjustment procedure until all of the following troubleshooting methods have been completed:

- Experiment with the printer driver and application settings to adjust the color output. For more information on application settings, see the previous sections on printer driver settings in this chapter or the online help.
- Clean the density sensor in the printer. For more information, see "Cleaning the Density Sensor" in chapter 8.
- Complete the troubleshooting solutions in chapter 8 for the color printing problem you are experiencing.


To adjust the color balance

- 1 Print the color adjust page.
 - a Press Menu until COLOR ADJUST MENU appears on the printer control panel display.
 - **b** Press ITEM until PRINT TEST PAGE appears on the display.
 - **c** Press SELECT to print the color adjust page.
 - d Press Go to exit the color adjust menu.

The color adjust page allows you to adjust the printer's two halftone screens for each of the four colors (cyan, magenta, yellow, and black) for a total of eight adjustments. Make these adjustments after examining the color adjust page.

The color adjust page consists of two sections: the Detail Halftone Adjust section and the Smooth Halftone Adjust section. Each section shows the adjustment ramps for black, cyan, magenta, and yellow and a neutral axis check ramp which can be used to verify the adjustment after the correction values have been entered for each of the primary colors. An example of the color adjust page is shown below.

Figure 12

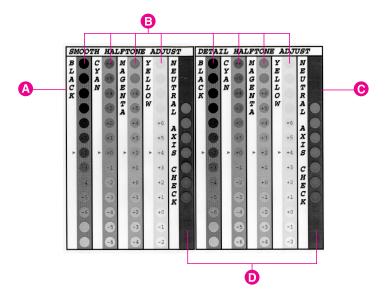

- A Smooth Halftone Adjust section
- **B** Color Ramps
- C Detail Halftone Adjust section
- D Neutral Axis
- 2 Note the numbers beside the red arrows for later reference. The color adjust page indicates the last set of saved color settings with a red arrow next to the saved setting. The default for each color is 0 (other possible settings include -6 through 6).

- 3 Determine the color adjustment numbers for each color in the high and low resolution screen adjusts.
 - **a** Examine the color adjust page from a distance of 3 ft. (approximately 1 m).
 - **b** Find the circle of each color that most closely matches the background color. It might be necessary to squint slightly to match the colors.
 - **c** Record the number in the circle.
- 4 Enter the color adjustment numbers in the printer control panel.
 - a Press MENU until COLOR ADJUST MENU appears on the printer control panel display.
 - **b** Press ITEM until the option you want appears on the display. The options are listed below:
 - BLACK SMOOTH VALUE =
 - CYAN SMOOTH VALUE =
 - MAGENTA SMOOTH VALUE =
 - YELLOW SMOOTH VALUE =
 - BLACK DETAIL VALUE =
 - CYAN DETAIL VALUE =
 - MAGENTA DETAIL VALUE =
 - YELLOW DETAIL VALUE =
 - **c** Press -VALUE+ until the number recorded in step 3c appears on the display.
 - **d** Press SELECT to enter the number into the printer memory. An asterisk (*) appears to the right of the selection.
 - **e** Repeat steps 4a through 4d to adjust the color screens, as necessary.

5 Reprint the color adjust page.

- a Press ITEM until PRINT TEST PAGE appears on the display.
- **b** Press SELECT to print the color adjust page.
- **c** Re-examine the test page and verify that the color adjustment is correct.
 - Verify that the circles with the arrows beside them match their background for each of the color ramps (cyan, magenta, yellow, and black). If another circle matches the background more closely, return to step 4 to reset the values on the printer control panel to the number shown in that circle.
 - Verify that the circles in the neutral axis areas of the test page are neutral gray (gray without a color tint when illuminated by D55 or diffuse sunlight), and then verify that one of the circles in the ramp is a color very close to the background. If the circles are not neutral gray, additional corrections to cyan, magenta, or yellow might be necessary. If there is an overall tint of color in the circles, make the adjustments suggested by the following table. However, the most accurate correction is determined by the circles in the individual black, cyan, magenta, and yellow ramps.

Overall Color of Circles	Correction if all Circles are Darker than Background	Correction if all Circles are Lighter than Background
Cyan tint	Reduce cyan	Increase magenta and yellow
Magenta tint	Reduce magenta	Increase cyan and yellow
Yellow tint	Reduce yellow	Increase magenta and cyan
Green tint	Reduce yellow and cyan	Increase magenta
Red tint	Reduce yellow and magenta	Increase cyan
Purple or blue tint	Reduce cyan and magenta	Increase yellow

For example, if the circles in the neutral axes show a green tint and the circle appears lighter than the background, the magenta ramp should be examined closely to determine if magenta should be increased.

Ν	ote	

If the color settings are less accurate when you finish the color adjustment than when you started, reset all color values to $\[mathbb{@}\]$ (zero) in the printer control panel and try the adjustment again.

Maintaining the Printer


Making Room for Printer Maintenance

CAUTION

To prevent damage to the printer, remove the imaging drum and all toner cartridges before moving or shipping the printer.

Sufficient space is required on all sides of the printer for removing consumables when performing printer maintenance. For more information on maintenance procedures, see the installation guide with each consumable. The following figure shows the space required around the printer for maintenance.

Figure 13

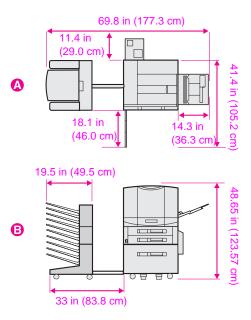


- A Top View (with the optional multi-bin mailbox and tray 4)
- **B** Side View (with the optional multi-bin mailbox and tray 4)

Replacing Printer Consumables

Locating Printer Consumables

The following figure shows the location of each printer consumable. A consumable is any part of the printer that can be replaced after its useful life has been exceeded.

Figure 14

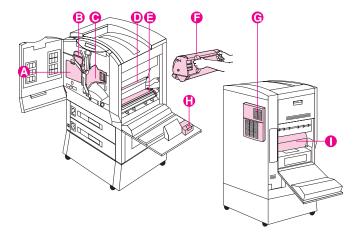

- A Color Toner Cartridges
- **B** Black Toner Cartridge
- C Imaging Drum
- D Cleaning Roller
- E Transfer Belt
- F Transfer Drum
- **G** Air Filters
- **H** Charcoal Filter
- I Fuser
- J Transfer Charger

For information on replacing the consumables, see the instructions included with each consumable.

Note

The color toner carousel will not rotate unless the clear door is closed, the imaging drum and black toner cartridge are installed (including removing the orange seal from the black toner cartridge and swinging the upper lever to the left), and the upper right door is closed.

Frequency for Replacing Printer Consumables

The following table lists the approximate schedule for replacing consumables and the printer messages that appear when each of the consumables should be replaced. Part numbers for each consumable can be found in "Accessories, Options, and Related Products" in chapter <u>8</u>. For best print quality output, use HP consumables that have been designed to work together in this printer.

Note

Do not shake the toner cartridge in attempts to extend the cartridge life. For more information on replacing the toner cartridge, see the installation guide included with the toner cartridge.

Consumable	Printer Message	Page Count	Approximate Time Period ^a
Black Toner Cartridge	TONER LOW REPLACE BLACK	17,000 pages ^b	2.5 months
Color Toner Cartridges Cyan Magenta Yellow	TONER LOW REPLACE <color></color>	8,500 pages ^b	1.1 to 1.6 months
Drum Kit Imaging Drum Air Filters (2) Hand Wipe	DRUM LIFE LOW REPLACE DRUM KIT	50,000 black-and-white only pages, or 12,500 color pages ^c	8.3 months black-and-white only pages, or 2.1 months color pages
Transfer Kit Transfer Drum Transfer Belt Transfer Charger Cleaning Roller Charcoal Filter Hand Wipe	TRANSFER KIT LOW REPLACE KIT	150,000 black-and-white only pages, or 75,000 color pages	25 months black-and-white only pages, or 12.5 months color pages
Fuser Kit (110 Volt) Fuser Paper Rollers (6) Hand Wipe	FUSER LIFE LOW REPLACE KIT	100,000 black-and-white only pages, or 50,000 color pages	16.7 months black-and-white only pages, or 8.3 months color pages
Fuser Kit (220 Volt) Fuser Paper Rollers (6) Hand Wipe	FUSER LIFE LOW REPLACE KIT	100,000 black-and-white only pages, or 50,000 color pages	16.7 months black-and-white only pages, or 8.3 months color pages

- a. Approximate life based on printing 6,000 pages per month.
- b. Approximate average letter-size page count based on 5% coverage of individual toner colors. This value can be used to estimate other levels of coverage from 2% to 35%. For example, 5,000 pages at 5% coverage is approximately 2,500 pages at 10% coverage. Estimates made in this manner are only approximate, and usage conditions and print patterns can cause the results to vary.
- c. Drum life is stated in terms of Letter/A-4-size images. The number of images printed for each sheet of media varies, depending on the mix of color, duplexing, and large-format printing. An image is a layer of toner. A Letter-size, color (CMYK) sheet printed on one side contains four Letter/A4 images. A duplexed sheet (printed on both sides) counts as two images. In color duplex mode, there are eight Letter-size images per Letter/A4 sheet. An 11 x 17 (or A3) page sheet contains twice as many Letter-size images as a Letter-size sheet.

For an explanation of printer control panel messages, see chapter 7, "Printer Control Panel Messages."

Recycling Consumables

HP encourages responsible disposal of HP Color LaserJet printer consumables through its printing supplies recycling program. For details on this program, see "Environmental Product Stewardship Program" in appendix B. All consumables listed above can be disposed of through the printing supplies recycling program.

Resetting the HP TonerGauge

After a new toner cartridge is installed, the user must reset the HP TonerGauge from the control panel. When the top cover is closed after the printer has detected a toner low condition, the NEW TONER CARTRIDGE=NO message is displayed on the control panel for approximately 30 seconds. To reset the HP TonerGauge:

Note

If the NEW TONER CARTRIDGE=NO message is no longer displayed on the control panel and you have replaced one or more of the toner cartridges, then press MENU repeatedly until CONFIGURATION MENU appears. When you replace an empty or low toner cartridge, press ITEM repeatedly until NEW TONER CARTRIDGE=NO appears.


- 1 Press VALUE + until YES appears.
- 2 Press SELECT to save the selection.
- 3 NEW TONER=BLACK will appear. Press VALUE + until the correct color appears.
- 4 Press SELECT to save the selection.
- **5** Repeat steps 2 through 4 if other cartridges have been replaced.
- 6 Press Go to exit the menu.

Printer Control Panel Messages

Printer Messages

The following table lists the printer messages. If a printer message has a numeric prefix, it is listed in order of the number beside the printer message. Printer messages without numeric prefixes are listed in alphabetical order following the numeric messages.

Using the Printer Online Help System

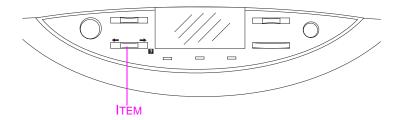

This printer features an online Help system that provides instructions for resolving most printer errors. Certain control panel error messages alternate with instructions on accessing the online help system.

Whenever a papears in an error message or a message alternates with FOR HELP PRESS THE KEY, press the ITEM key to navigate through a sequence of instructions. If there is more than one message alternating on the control panel, press Menu+ to display the Help for the first message. Continue to press Menu+ to display the other Help messages. When the desired Help message is displayed, press ITEM+ to scroll through the Help messages.

To exit the online Help system, press Go.

Message	Description	Recommended Action
******	Displayed during startup as the individual tasks begin initializing.	No action is required.
13.xx Paper Jam	A staple jam occurred.	Open the Stapler door, and
alternates with		clear the paper or staple jam.
STKR: DETACH AND CLEAR STAPLE JAM		
20 INSUFFICIENT MEMORY	More data has been received from the computer than fits in the printer's internal memory.	To continue printing, press Go. Only the amount of data that fits in the printer's internal memory is printed. Reduce the page complexity or add more memory, then print the page again.
22 EIO [n] BUFFER OVERFLOW	The EIO buffer has overflowed during a busy state.	The current data in the print buffer will be lost. No action is required.
22 PARALLEL IO BUFFER OVERFLOW	Indicates the parallel buffer has overflowed.	Printing can continue, but some data might be lost.
40 EIO N BAD TRANSMISSION	An EIO accessory connection has been abnormally broken. N = EIO Slot Number 1 = Bottom EIO Slot 2 = Top EIO Slot	Check that all cables are connected to the EIO ports and that the EIO board is seated properly. If possible, print to another network printer to verify the network is working properly. All data in the print buffer will be lost.
41.2 PRINTER ERROR	Indicates that a laser scanner error has occurred.	Open and close the front door of the printer to remove any remaining pages from the printer. Reprint the job. If the problem persists, turn the printer off and on to reset the printer.

Message	Description	Recommended Action
41.3 UNEXPECTED PAPER SIZE LOAD TRAY 1 <type> <size></size></type>	Tray 1 is configured for one media size, but the printer detects a different size being fed from the tray 1. The is the media type specified in the printer driver or application. Size is the media size specified in the printer driver or application.	Load the proper size media into tray 1. For more information on configuring input trays, see "Configuring Media Type and Size" in chapter 2.
41.3 UNEXPECTED PAPER SIZE LOAD TRAY 1 <width> <length></length></width>	Tray 1 is configured for a custom media size, but the printer detects a different size being fed from the tray 1. <pre> <width> is the media width selected in the application or printer driver. <len9th> is the media length selected in the application or printer driver.</len9th></width></pre>	Load the requested size media into tray 1. For more information on configuring input trays, see "Configuring Media Type and Size" in chapter 2.
41.5 UNEXPECTED PAPER TYPE LOAD TRAY X <type> (Size)</type>	The printer was expecting one type of media to be fed from an input tray and a different type was fed. For example, the printer was expecting transparencies and plain paper was fed. X is the input tray number. The is the media type specified in the printer driver or application. Size is the media size specified in the printer driver or application.	Open and close the front door to remove the page from the printer. Verify that the correct media is loaded in the input tray and the printer control panel is configured correctly. For more information on configuring input trays, see "Configuring Media Type and Size" in chapter 2.

Message	Description	Recommended Action
49.XXXX ERROR CYCLE POWER	Indicates that a firmware error has occurred, or corrupt data was sent to the printer.	Verify that all cables are connected. Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.
50.X FUSER ERROR CYCLE POWER	Indicates that a fusing assembly malfunction has occurred.	Turn the printer off and on to reset the printer.
	X = Description 1 = Low Temperature Error 2 = Warmup Error 3 = High Temperature Error	For a 50.3 error, turn the printer off for 30 minutes to allow the fuser to cool, and then turn the printer on.
	4 = Fuser Drive/Power Unit Error 6 = Heater Error	If the condition persists, contact a local authorized HP dealer or service representative for service.
51 LASER ERROR CYCLE POWER	Indicates that a laser malfunction has occurred.	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.
52 SCANNER ERROR CYCLE POWER	Indicates that the scanner motor is not turning properly.	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.

Message	Description	Recommended Action
53.XY.ZZ ERROR DIMM SLOT Y	Indicates that a memory error occurred during the configuration and validation of DIMM memory. X Hardware Type 0 ROM 1 RAM Y Hardware Device 0 Onboard ROM/RAM 1 DIMM slot 1 2 DIMM slot 2 3 DIMM slot 3 4 DIMM slot 4 5 DIMM slot 5 6 DIMM slot 6 7 DIMM slot 7 8 DIMM slot 8 ZZ Error 0 Unsupported memory 1 Unrecognized memory 2 Unsupported memory 2 Unsupported memory 3 Failed RAM test 4 Exceeded maximum RAM size 5 Exceeded maximum ROM size 6 Invalid DIMM speed, check DRAM 7 DIMM is reporting information incorrectly 10 DIMM address conflict 11 PDC XROM out of bounds 12 Could not make temporary mapping 13 Invalid RAM type 14 DIMM not paired properly	Verify that the DIMM board is installed correctly and the DIMMs are configured correctly. Turn the printer off and on to reset the printer. If necessary, remove and replace the DIMM that caused the error. For more information about installing and configuring DIMMs, see appendix A, "DIMM Installation." If the condition persists, contact a local authorized HP dealer or service representative for service.

Message	Description	Recommended Action
54.1 TEMPERATURE SENSOR ERROR CYCLE POWER	Indicates that the humidity and temperature sensor in the printer has malfunctioned.	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP service representative for service. Do not operate the printer in this condition or the printer can be damaged.
54.2 CAROUSEL ERROR CYCLE POWER	Indicates that the color toner carousel is not working correctly.	Open the color toner clear door and look for an obstruction. If the message does not clear after closing the doors, turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.
54.3 DENSITY SENSOR ERROR CYCLE POWER	Indicates a density sensor error, or the printer is not receiving data back from the density sensor.	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.
55 PRINTER ERROR CYCLE POWER	Indicates a printer command error. The commands cannot be exchanged between the printer and its controller.	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.
56.1 ERROR CYCLE POWER	Indicates an input feed error (such as requesting to feed transparencies through the duplexer), or the input tray is not installed.	If the input tray you are trying to print from is not installed, install the input tray. Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.

Message	Description	Recommended Action
56.2 ERROR CYCLE POWER	Indicates an illegal output error. For example, the multi-bin mailbox is not installed and it was selected as the output destination, or there are transparencies in the duplexer.	Open the printer and remove media from the paper path. Verify that the media type is set in the printer control panel. Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service. For more information on configuring input trays, see "Configuring Media Type and Size" in chapter 2.
57.X FAN FAILURE	One of the cooling fans has failed. X = Fan Type 1 = Rear Output Fan (Motor 1) 2 = Rear Input Fan (Motor 2) 3 = Left Output Fan (Motor 3)	Turn the printer off and then on to reset the printer. If the message reappears, contact a local authorized HP dealer or service representative for service. Do not operate the printer in this condition or the printer can be seriously damaged.
58.1 ERROR CYCLE POWER	Indicates that the paper diverter inside the upper right door is out of position, causing an error feeding media from tray 1.	Open the upper right door and check for a media jam or misfed media. Turn the printer off and on to reset the printer. If the message reappears, contact a local authorized HP dealer or service representative for service.
59.X MOTOR ERROR CYCLE POWER	Indicates that the main printer motor is not working properly. X = Description 0 = General Error 1 = Startup Error 2 = Rotation Error	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.

Message	Description	Recommended Action
62.X SERVICE CYCLE POWER	Indicates that a problem exists with the internal memory. X = Description 0 = Internal ROM or RAM 1-8 = DIMM slots 1-8	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.
63 SERVICE CYCLE POWER	Indicates that the internal RAM memory test failed.	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.
64 PRINTER ERROR CYCLE POWER	Indicates a scan buffer error.	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.
65 PRINTER ERROR CYCLE POWER	Indicates a dynamic RAM controller error.	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.
66.X0.YY C-LINK COMM ERROR CHECK CABLES AND CYCLE POWER	Indicates a communication error between tray 4 and the printer. X/YY Description X = Device number in the link YY = Error code from the optional device	Verify that the communication and power cables are connected. Press Go to continue printing. If the message persists, turn the printer off and on to reset the printer.
66.X1.YY INPUT DEVICE FAILURE CHECK CABLES AND CYCLE POWER	Indicates a tray 4 error. X/YY Description X = Device number in the link YY = Error code from the optional device	Verify that the communication and power cables are connected. Press Go to continue printing. If the message persists, turn the printer off and on to reset the printer.

Message	Description	Recommended Action
66.X2.YY OUTPUT DEVICE FAILURE CHECK CABLES AND CYCLE POWER	Indicates a multi-bin mailbox error. X/YY Description X = Device number in the link YY = Error code from the optional device	Verify that the communication and power cables are connected. Press Go to continue printing. If the message persists, turn the printer off and on to reset the printer.
67.X PRINTER ERROR POWER CYCLE	Indicates an electronic controller error. X = Description 1 = DC Controller Error 2 = DC Controller IC Malfunction 3 = Internal Communication Malfunction	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.
68 NURAM ERROR SETTINGS CHANGED	Indicates that a recoverable error has been detected in the NVRAM (nonvolatile random-access memory).	Verify the printer control panel settings. One or more fields might have been reset to their factory defaults during the error recovery. For more information on factory defaults, see "Factory Defaults" in chapter 2.
68 NVRAM FULL SETTINGS LOST	Indicates that the NVRAM is full, and the printer is unable to write new data to the NVRAM.	Verify the printer control panel settings. One or more fields might have been reset to their factory defaults during error recovery. The next time the printer is turned off and on, NVRAM will be cleared and all factory defaults will be restored. For more information on factory defaults, see "Factory Defaults" in chapter 2.

Message	Description	Recommended Action
79 SERVICE (XXXX) CYCLE POWER	The firmware has detected an unrecoverable error. X Description 01XX = IO ASIC Register Error 02XX = Video ASIC Register Error 03XX = IDE ASIC Register Error	Turn the printer off and on to reset the printer. If the condition persists, contact a local authorized HP dealer or service representative for service.
ACCESS DENIED	A user has attempted to select a menu value while the printer control panel locking is enabled.	See the system administrator for access to the printer control panel.
CALIBRATING	The printer is adjusting the density sensor.	No action is required.
CANCELING JOB	The printer is canceling the current print job.	No action is required.
CHECK STAPLER DEVICE	A staple jam occurred.	Clear the staple jam.
alternates with		
CLEAR JAMMED STAPLE		
CLEAN DENSITY SENSOR CYCLE POWER	The density sensor values are out of range or inconsistent. The density sensor might be dirty or the transfer drum might be damaged.	Clean the density sensor. Then turn the printer off and on to reset the printer. If the problem is not resolved, clean the transfer drum. If the condition persists, contact a local authorized HP dealer or service representative for service. For information on cleaning the printer, see "Cleaning the Density Sensor" and "Cleaning the Transfer Drum" in chapter 8.

Message	Description	Recommended Action
CLEAR DUPLEX JAM LOWER LEFT DOOR	The printer senses a media jam in the duplexer.	Open the lower left door. Remove the duplexer. Remove the jammed media. Replace the duplexer. Close the lower left door, and wait for the printer to warm up before resuming printing.
		WARNING! Do not touch the fuser; it might be very hot and could cause burns.
		For more information on clearing jams, see the quick reference guide.
CLEAR FUSER JAM LOWER LEFT DOOR	The printer senses a media jam in the fuser area.	Open the lower left door. Remove the duplexer if installed. Remove the jammed media. Replace the duplexer if necessary. Close the lower left door, and wait for the printer to warm up before resuming printing.
		WARNING! Do not touch the fuser; it might be very hot and could cause burns.
		For more information on clearing jams, see the quick reference guide.

Message	Description	Recommended Action
CLEAR INPUT JAM	The printer senses a media jam in the transfer and registration area or in an input tray.	Open the front door, press the white button on the lower (green) lever, and swing the lever to the right. Open the upper right door, remove the transfer drum, and remove the jammed media from under the metal paper guide. Swing the lower (green) lever to the left, and close the front door. If the message still appears on the control panel display, open the input tray, remove any jammed media, and close the input tray. Close the printer, and wait for the printer to warm up before resuming printing. For more information on clearing jams, see the quick reference guide.
CLEAR MAILBOX JAM	The printer senses a media jam in the multi-bin mailbox.	Detach the multi-bin mailbox from the printer, remove the jammed media, reattach the multi-bin mailbox, and wait for the printer to warm up before resuming printing. For more information on clearing jams, see the quick reference guide.
CLEAR OUTPUT JAM UPPER LEFT DOOR	The printer senses a media jam in the top output bin.	Open the upper left door, remove the jammed media, close the upper left door, and wait for the printer to warm up before resuming printing. For more information on clearing jams, see the quick reference guide.

Message	Description	Recommended Action
CLEAR PAPER JAM	The printer senses a media jam.	Open and shut the front door of the printer to clear any paper from the printer. If the message still appears on the printer, check all areas of the printer for jammed media since the printer is unable to determine the location of the media jam. For more information on clearing jams, see the quick reference guide.
CLEAR TRANSFER JAM	The printer senses a media jam in the transfer drum area.	Open the upper right door. Lift the metal strip with the green corner and remove all of the media. Remove the transfer drum, remove the jammed media, reinstall the transfer drum, close the upper right door, and wait for the printer to warm up before resuming printing. For more information on clearing jams, see the quick reference guide.
CLEAR TRAY 4 JAM	The printer senses a media jam in tray 4.	Open tray 4, remove the jammed media, close tray 4, and wait for the printer to warm up before resuming printing. For more information on clearing jams, see the quick reference guide.
CLEAR TRAY X JAM	The printer senses a media jam in one of the optional paper trays.	Open the indicated tray and remove the jammed media. Close the tray and wait for the printer to warm up before resuming printing. For more information on clearing jams, see the quick reference guide.

Message	Description	Recommended Action
CLEAR UNEXPECTED PAPER SIZE JAM THEN LOAD TRAY 1 <type> <size></size></type>	The printer senses a media jam in tray 1. <tupe> is the media type specified in the printer driver or application. <size> is the media size specified in the printer driver or application. The <tupe> and <size> can be the default media type and size if an automatic paper override has occurred.</size></tupe></size></tupe>	Open the upper right door, remove the jammed media, and close the door. Load the media type and size indicated on the printer control panel. For more information on loading media into tray 1, see "Printing from Tray 1" in chapter 3. For more information on clearing jams, see the quick reference guide.
CLEARING PAPER FROM PRINTER	The printer is attempting to remove unusable media (such as a misfed page or media damaged in a media jam).	No action is required.
CLOSE <location> DOOR</location>	The printer senses that one of the doors is not closed properly. <pre><location> is one of the printer doors.</location></pre>	Close the door indicated in the message.
COLD RESET	The printer has recognized the key sequence for performing a cold reset. The printer will reset to the factory default settings.	No action is required. For more information on factory default settings, see "Factory Defaults" in chapter 2.
CONFIG LANGUAGE	The printer has recognized the key sequence for selecting the display language.	Wait for the display language options to appear and select the appropriate language. For more information on selecting the display language, see "Selecting the Display Language" in chapter 2.

Message	Description	Recommended Action
CONTINUOUS TEST PRESS CANCEL JOB	A continuous configuration page is printing.	Press CANCEL JOB to exit the configuration page printout mode. If the printer is in the process of printing when CANCEL JOB is pressed, the printer finishes printing the buffered pages before returning online.
DATA RECEIVED PRESS GO KEY	The printer has received and processed data and is waiting for a form feed.	Press Go to form feed a page. The printer will feed the page from one of the input trays.
DISK DEVICE FAILURE	The printer detected a printer hard disk failure.	If access to the printer hard disk is not required, printer operation can continue. Contact a local authorized HP dealer or service representative to replace the printer hard disk.
DISK FILE OPERATION FAILED	The printer has received an illogical PJL command (such as download to non-existent directory).	No action is required.
DISK IS FULL	The printer hard disk is full.	From the host computer, delete data from the printer hard disk using the printer drivers or a disk management application. Or, to clear all data from the printer hard disk, reformat the printer hard disk from the printer control panel. To reformat the printer hard disk, press MENU until CONFIGURATION MENU appears on the printer control panel display. Press ITEM until INITIALIZE DISK appears on the display. Press SELECT and the printer hard disk will be reformatted.

Message	Description	Recommended Action
DISK IS WRITE PROTECTED	A user has attempted to save to the printer hard disk or send a proof and hold job to the printer while the printer hard disk is write-protected.	See the system administrator for access to the printer hard disk.
DRUM ERROR REPLACE KIT	The printer has detected an error in the imaging drum.	Open the front door. Raise the green and blue levers. Remove the imaging drum. Reinstall the drum, lower both of the levers, and close the front door. If the problem persists, contact a local authorized HP dealer or service representative for service.
DRUM LIFE LOW REPLACE KIT	The imaging drum is almost past its specified life.	Although printing can continue, the drum kit should be replaced for optimum printer operation. For more information on replacing the drum kit, see the installation guide included with the drum kit. For more information on configuring the printer response to this message, see "Selecting Toner Low Response" in chapter 2.
DRUM LIFE OUT REPLACE DRUM KIT	The imaging drum is past its specified life.	Printing cannot continue until the drum kit has been replaced. For more information on replacing the drum kit, see the installation guide included with the drum kit.

Message	Description	Recommended Action
DUPLEX ERROR CHECK DUPLEXER	The printer has detected an error in the duplexer.	Open the lower left door, press the green tab on the right side of the duplexer, and pull the duplexer out of the printer. Check for and remove any jammed media from the duplexer. Reinstall the duplexer. Turn the printer off and then on. If the problem persists, contact a local authorized HP dealer or service representative for service.
EIO N INITIALIZING	An EIO accessory is initializing.	No action is required.
	N = EIO Slot Number 1 = Bottom EIO Slot 2 = Top EIO Slot	
EIO N NOT FUNCTIONAL	Indicates an EIO card error. The error is logged to the event log with more detail.	Turn the printer off and on to reset the printer. If the condition persists, replace the offending EIO accessory.
	N = EIO Slot Number 1 = Bottom EIO Slot 2 = Top EIO Slot	oneriding Lie decessory.
ENGINE TEST	The printer is running an internal test to verify operation. When the printer is finished, the printer returns to the ready state but remains offline.	Press Go to bring the printer online.
FACE UP OUTPUT BIN FULL	The top output bin (face up) on the multi-bin mailbox is full.	Remove all media from the top output bin on the multi-bin mailbox to continue printing.

Message	Description	Recommended Action
FUSER LIFE LOW REPLACE KIT	The fuser and paper rollers are almost past their specified life.	Although printing can continue, the fuser should be replaced for optimum printer operation. For more information on replacing the fuser, see the installation guide included with the fuser kit.
FUSER LIFE OUT REPLACE KIT	The fuser and paper rollers are past their specified life.	Replace the fuser kit and reset the fuser counter before attempting to print. For more information on replacing the fuser kit and resetting the counter, see the installation guide included with the fuser kit. For more information on configuring the printer response to this message, see "Selecting Toner Low Response" in chapter 2.
INCORRECT FUSER LOWER LEFT DOOR	The printer has detected that an incompatible fuser (possibly the wrong voltage of fuser for the printer) has been installed.	Remove the fuser and install the fuser specified for use with this printer. Printing cannot continue until the correct fuser is installed in the printer. For information on ordering a fuser kit, see "Accessories, Options, and Related Products" in chapter 8.
INPUT DEVICE PAPER PATH OPEN	The media transfer door on tray 4 is open.	Close the media transfer door.

Message	Description	Recommended Action
INSTALL (Color) TONER	The toner cartridge is either not installed or not correctly installed in the printer.	Insert the cartridge or make sure the installed cartridge is correctly seated in the printer.
	<color> can be cyan, magenta, yellow, or black.</color>	Note: The color toner carousel will not rotate unless the clear door is closed, the imaging drum and black toner cartridge are installed completely (including removing the orange seal from the black toner cartridge and swinging the upper lever to the left), and the upper right door is closed.
		For more information on installing toner cartridges, see the installation guide included with the toner cartridge.
INSTALL FUSER LOWER LEFT DOOR	The printer has detected that the fuser is not installed.	Install the fuser and verify that it is correctly seated in the printer before attempting to print. For more information on installing the fuser, see the installation guide included with the fuser kit.

Message	Description	Recommended Action
INSTALL IMAGING DRUM OPEN FRONT DOOR	The printer has detected that the imaging drum is not installed.	Install the imaging drum before attempting to print. If the condition persists, take the imaging drum out and reinstall it.
		Note: The imaging drum must be installed and the upper lever must be to the left in order for the color toner carousel to rotate.
		For more information on installing the imaging drum, see the getting started guide or the installation guide included with the drum kit.
INSTALL TRANSFER DRUM OPEN RIGHT DOOR	The printer has detected that the transfer drum is not installed.	Install the transfer drum before attempting to print. If the condition persists, take the transfer drum out and reinstall it. For more information on installing the transfer drum, see the getting started guide or the installation guide included with the transfer kit.
LANGUAGE = <xxxx></xxxx>	Displayed during start up. xxxxxis the printer control panel display language.	No action is required. For more information on changing the printer control panel display language, see "Selecting the Display Language" in chapter 2.
LEFT OUTPUT BIN FULL	The left output bin on the printer is full.	Remove all media from the left output bin of the printer to continue printing.

Message	Description	Recommended Action
LOCK TONER LEVER	The blue lever inside the clear door is not locked.	Open the front door of the printer, open the clear door, and swing the blue toner lock lever to the right. Remove the toner cartridge, and then reinstall it, making sure the cartridge is all the way in the printer. Swing the blue toner lock lever to the left until it clicks, and then close the clear and front doors.
MAILBOX X OUTPUT BIN FULL	A mailbox on the multi-bin mailbox is full.	Remove all media from the mailbox to continue printing.
		
MAILBOX COMM ERROR CHECK CABLES AND CYCLE POWER	Indicates a communication error between the multi-bin mailbox and the printer.	Verify that the communication and power cables are connected. Press Go to continue printing. If the message persists, turn the printer off and on to reset the printer. If the condition still persists, contact a local authorized HP dealer or service representative for service.
MAILBOX NOT ATTACHED	The multi-bin mailbox is not correctly attached to the printer.	Push the mailbox up against printer. Verify that the wheels on the multi-bin mailbox are not hitting tray 4 and preventing the multi-bin mailbox (optional) from attaching to the printer.

Message	Description	Recommended Action
MANUALLY FEED (Type) (Size)	The printer is requesting a sheet of media or envelope to be manually fed. <type> is the media type specified in the printer driver or application. <size> is the media size specified in the printer driver or application.</size></type>	Load the requested media type and size into tray 1. If the proper media size is already loaded into tray 1, press Go to initiate printing. For more information on loading media in tray 1, see "Printing from Tray 1" in chapter 3.
MEMORY SHORTAGE PAGE SIMPLIFIED	The printer is compressing the print job so that all of the job will fit into the available printer memory. The print job's appearance might be altered by the compression of the data.	If possible, simplify the print job by lowering the resolution of graphics. Or, install more printer memory. For more information on printer memory options, see "Accessories, Options, and Related Products" in chapter 8.
NEW TONER CARTRIDGE? = NO	This message will appear if the printer senses that a TONER LOW OR TONER OUT message has appeared and then gone away, indicating that a new toner cartridge may have been installed.	Change to YES and press SELECT if you just installed a toner cartridge. Press ITEM+ until you see NEW TONER= BLACK. Press VALUE+ until the new cartridge appears, then press SELECT.
NO JOB TO CANCEL	CANCEL JOB was pressed and there is no job to cancel.	No action is required.
OFFLINE	The printer is offline. No error messages are pending.	Press Go to bring the printer online.
OUT OF MEMORY JOB CLEARED	The printer personality for the current job could not be run in the available memory. The job was canceled, and no pages were printed.	Reprint the job. If the message still appears, turn the printer off and on to reset the printer before sending the print job again.

Message	Description	Recommended Action
OUTPUT BIN FULL	The bin-full sensor in the left	Empty the Face-up Bin.
alternates with	Face-up Bin has been reached.	
CLEAR PAPER FROM FACE UP	Todos Todos	
OUTPUT BIN FULL	The Stacker Bin is full.	Empty the Stacker Bin.
alternates with		
CLEAR PAPER FROM OPTIONAL BIN 1		
PCL MEMORY FULL STORED DATA LOST	The resource save area for the printer personality is full. Fonts downloaded to the printer's RAM might have been deleted.	Turn the printer off and on to clear the printer's RAM.
PJL OPERATIONS FAILED	The requested PJL operation could not be completed because the option is unavailable or the PJL data was corrupt.	No action is required.
PLEASE WAIT	The printer is in the process of going offline or into the menus.	No action is required.
POWERSAVE ON	The printer is in Power Save mode.	Clear this message by pressing any key.
PRESS SELECT IF FUSER IS NEW	The printer has detected that a new fuser has been installed.	If the fuser has been replaced, press SELECT to reset the internal counter. If the fuser has not been replaced, press Go.
PRESS SELECT IF TRANSFER IS NEW	The printer has detected that a new transfer drum has been installed.	If the transfer drum has been replaced, press SELECT to reset the internal counter. If the transfer drum has not been replaced, press Go.

Message	Description	Recommended Action
PRESS SELECT TO INITIALIZE DISK	The printer hard disk is new or has been formatted for another file system.	Press SELECT to reformat the printer hard disk. All data currently on the printer hard disk will be lost. If you don't want to initialize the printer hard disk, turn the printer off and remove the printer hard disk.
PRESS SELECT TO LOSE DISK DATA PRESS GO KEY TO CANCEL	Request to confirm initialization of the printer hard disk.	If you want to proceed with initialization, press SELECT. If you do not want to initialize the printer hard disk, press Go.
PRINTER LANGUAGE NOT AVAILABLE JOB CANCELED	PJL encountered a request for a printer personality that does not exist in the printer. The job was canceled and no pages were printed.	Try reprinting the job using PCL or PS.
PRINTING CONFIGURATION	The printer is printing the configuration page. When the configuration page is printed, the printer returns to an online and ready state.	No action is required.
PRINTING DEMONSTRATION	The printer is printing a demonstration page. When the demonstration page is printed, the printer returns to an online and ready state.	No action is required.
PRINTING EVENT LOG	The printer is printing the event log page. When the event log page is printed, the printer returns to an online and ready state.	No action is required.
PRINTING FILE DIRECTORY	The printer is printing the file directory page. When the file directory page is printed, the printer returns to an online and ready state.	No action is required.

Message	Description	Recommended Action
PRINTING FONT LIST	The printer is printing the font list page. When the font list page is printed, the printer returns to an online and ready state.	No action is required.
PRINTING MENU MAP	The printer is printing the menu map page. When the menu map page is printed, the printer returns to an online and ready state.	No action is required.
PROCESSING COPY X OF Y	The printer is processing a proof and print or mopy print job.	No action is required.
PROCESSING JOB	The printer is actively processing a print job.	No action is required.
PROCESSING JOB FROM TRAY X	The printer is actively processing a print job. × is the input tray that the job will be printed from.	No action is required.
PS MEMORY FULL STORED DATA LOST	The resource save area for the printer personality is full. Fonts downloaded to the printer's RAM might have been deleted.	Turn the printer off and on to clear the printer's RAM.
READY	The printer is online and ready for data. No status or printer attention messages are pending.	No action is required.
RESETTING ACTIVE IO	The printer is resetting active I/O ports.	No action is required.
RESETTING ALL IO	The printer is resetting all I/O ports.	No action is required.

Message	Description	Recommended Action
RESTORING FACTORY SETTINGS	The printer is resetting the printer's factory defaults. The printer is in the process of completing a cold reset. When the reset is completed, the printer returns to the ready state but remains offline.	Reset the EIO type and configure the printer before bringing the printer online. For more information on factory defaults and configuring the printer control panel, see chapter 2, "Using the Printer Control Panel."
SEPARATOR OUTPUT BIN FULL	The multi-bin mailbox output bins are full.	Remove all media from the output bins on the multi-bin mailbox to continue printing.
STACKER OUTPUT BIN FULL	The multi-bin mailbox output bins are full.	Remove all media from the output bins on the multi-bin mailbox to continue printing.
STAPLER LOW ON STAPLES	The Stapler Cartridge has 20 to 50 staples remaining.	No action required.
STKR: ATTACH TO PRINTER	The device is not attached to the printer properly.	Make sure that there is a proper attachment between the device and the printer, and wait for a solid green status light on the user LED on the device.
STKR: CLOSE STAPLER DOOR	The Stapler door is open or it is not closed properly.	Close the Stapler door properly.
STKR: DETACH AND CLEAR JAM	A paper jam occurred in the device.	Clear the paper jam.
STKR: TRAY OVERLOAD	The weight capacity of the stacker bin has been reached.	Clear the paper from the Stacker Bin.
alternates with		
CLEAR PAPER FROM OPTIONAL BIN 1		

Message	Description	Recommended Action
TONER LOW REPLACE (Color)	The printer is almost out of the specified toner. The printer remains online. Color> can be cyan, magenta, yellow, or black.	Although printing can continue, the toner cartridge should be replaced for optimum printer operation. Do not shake the toner cartridge in attempts to extend the cartridge life. For more information on replacing the toner cartridge, see the installation guide included with the toner cartridge. For more information on configuring the printer response to this message, see "Selecting Toner Low Response" in chapter 2.
TONER OUT REPLACE (Color)	The printer is out of the specified toner and cannot continue. Color> can be cyan, magenta, yellow, or black.	Printing cannot continue until the specified toner cartridge has been replaced. For more information on replacing the toner cartridge, see the installation guide included with the toner cartridge.
TOO MANY FILE STORAGE DEVICES REMOVE EITHER DISK	The printer can only support one printer hard disk at a time.	Turn the printer off and remove either printer hard disk. Printing will not continue until one printer hard disk is removed.
TOO MANY PAGES IN JOB TO STAPLE	The job height is greater than the stapler capacity. The height of the job to be stapled should not exceed 5 mm.	See the stapling specifications on page 67 for more information.
TOP OUTPUT BIN FULL	The top (face-down) output bin of the printer is full.	Remove all media from the top (face-down) output bin on the printer to continue printing.

Message	Description	Recommended Action
TRANSFER KIT LOW REPLACE KIT	The transfer drum, transfer belt, cleaning roller, and charcoal filter are almost past their specified life.	Although printing can continue, the transfer kit should be replaced for optimum printer operation. For more information on replacing the transfer kit, see the installation guide included with the transfer kit.
TRANSFER KIT OUT REPLACE KIT	The transfer drum, transfer belt, cleaning roller, and charcoal filter are past their specified life.	Replace the transfer kit and reset the transfer counter before attempting to print. For more information on replacing the transfer kit and resetting the counter, see the installation guide included with the transfer kit. For more information on configuring the printer response to this message, see "Selecting Toner Low Response" in chapter 2.
TRAY 1 CONTAINS UNKNOWN MEDIA	Media was stacked in tray 1 for continuous manual feed printing, and the job has been completed. However, there is still media in the input tray. The printer considers the input tray not to be configured.	Configure the media type for tray 1 or remove the remaining media. For more information on configuring the media type, see "Printing from Tray 1" in chapter 3.
TRAY 1 LOAD (Type) (Size)	A user has requested a media size that is not currently installed in tray 1. <type> is the last media type configured for the input tray. <size> is the last media size configured for the input tray.</size></type>	Load the media type and size specified on the printer control panel display. After the tray 1 is loaded, the printer automatically brings itself online. For more information on configuring the printer control panel or checking printer control panel settings, see chapter 2, "Using the Printer Control Panel."

Message	Description	Recommended Action
TRAY 1 SIZE = (Size)	This message is displayed when media is placed in tray 1. (Size) is the last media size configured for the input tray.	Press -VALUE+ to view the choices. Press SELECT when the choice you want is displayed, and then press GO to bring the printer online. If no key is pressed for 30 seconds after the media is detected in the input tray, the displayed size will automatically be selected, the message will be cleared, and printing will begin.
TRAY 4 COMM ERROR CHECK CABLES AND CYCLE POWER	Indicates a communication error between tray 4 and the printer.	Verify that the communication and power cables are connected. Press Go to continue printing. If the message persists, turn the printer off and on to reset the printer. If the condition still persists, contact a local authorized HP dealer or service representative for service.
TRAY X EMPTY (Type) (Size)	An input tray not currently selected has run out of media. X is the input tray number. <type> is the last media type configured for the input tray. <size> is the last media size configured for the input tray.</size></type>	Load the media type and size specified on the printer control panel display. For more information on loading media, see chapter 3, "Common Printing Tasks."
TRAY X LIFTING	The specified input tray is lifting the media into position for printing.	No action is required.
	X is the input tray number.	

Message	Description	Recommended Action
TRAY X LOAD (Type) (Size) CHECK CONTROL PANEL SETTING	A user has requested a media size that is not currently installed or configured in the printer. This message is also generated when the current input tray runs out of media and no other auto-selectable input trays contain that size of media. X is the input tray number. There is the last media type configured for the input tray. Size is the last media size configured for the input tray.	Load the media type and size specified on the printer control panel display, and configure the media type in the printer control panel. After the requested input tray is loaded, the printer automatically goes online. Pressing Go will cause the printer to attempt to print the page on the default type and size media. If the condition persists, check the input tray type and size configuration in the printer control panel. The correct media type and size might be loaded in the input tray, but the printer will not recognize that the media is loaded if the printer control panel settings do not match the media type and size requested. For more information on configuring input trays, see "Configuring Media Type and Size" in chapter 2.
TRAY X OPEN	An input tray is open. X is the input tray number.	Close the input tray before resuming printing.

Message	Description	Recommended Action
TRAY X TYPE = <type></type>	This message is displayed when media is placed in an input tray. X is the input tray number. The is the last media type configured for the input tray.	Press -VALUE+ to view the choices. Press SELECT when the choice you want is displayed, and then press GO to bring the printer online. If no key is pressed for 30 seconds after the media is detected in the input tray, the displayed type will automatically be selected, the message will be cleared, and printing will begin.
WARMING UP	The fuser is warming up.	No action is required.

Solving Printer Problems

Performing Basic Troubleshooting Steps

This chapter suggests steps to solve common problems that you might encounter while using the printer. If the printer does not work properly, check the following items first:

- Is the printer connected to a live power source?
- Is the printer online?
- Are the communications cables from the printer to the network or the host computer connected?
- Are the parallel cables IEEE-1284 compliant?
- Are any messages displayed on the printer control panel?
- If you recently replaced a toner cartridge, did you remove the orange tab?
- Were the printer and its software installed correctly?

For more information on installation and set up, see the getting started guide. If you have questions that you do not find the answers to in this chapter, see the HP Customer Care information in the front of this manual.

Working with Toner


HP recommends that you use HP LaserJet toner cartridges. HP has designed the printer, toner cartridges, and toner formula to work together to give you optimal image quality from the printer.

If toner gets on clothing or carpet, wipe the toner off with a dry cloth and then wash with cold water. Warm water or the heat of a dryer will set the toner into the clothing or carpet.

Media Jam Locations


The following figure shows the locations of media jams in the printer paper path.

Figure 15

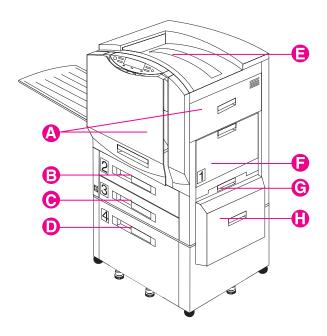

- A Registration and Transfer Area
- **B** Tray 2 (some printer models only)
- C Tray 3
- **D** Tray 4 (some printer models only)
- E Top Output Bin (face down)
- F Tray 1
- G Lower Right Door
- **H** Media Transfer Door (part of tray 4)

Figure 16

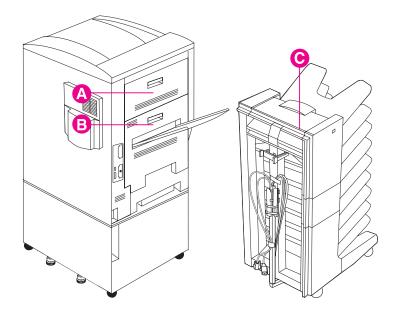

- A Upper Left Door
- B Fuser and Duplexer (optional) area
- C Multi-bin Mailbox (optional)

For information on clearing jams, see the quick reference guide.

CAUTION

Resetting the transfer life count without replacing the transfer kit can cause print quality problems and may damage the printer.

Media Handling Problems

Problem	Cause and Solution
Media jams	The media does not meet the specifications for this printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
	The paper or other media is in poor condition. Replace the media.
	The media was not stored correctly. Replace the media. Media should be stored in its original packaging in a dry area.
	The media type is set incorrectly. Select the correct media type in the printer control panel. For more information, see chapter 2, "Using the Printer Control Panel."
	You are using media that has already passed through the printer or a copier. Do not re-feed media.
	The input tray is loaded incorrectly. Remove any excess media from the input tray. Press the media down under the tabs in the input tray. For more information on loading media, see chapter 3, "Common Printing Tasks."
	The media guides are not adjusted correctly. Adjust the media guides so that they are firmly against the media but not bending the media.
	If you are printing on heavy media and the media is jamming repeatedly in the top output bin, switch to the left output bin.
	If you are printing from tray 1 and the size set in your application does not match the size of media fed into tray 1, the printer will sense the difference in size and stop printing to prevent damage to the printer. Remove any remaining media, ensure the size set in your application and the size of the media match, and reprint.
	Print media is binding or sticking together. Remove any remaining media, rotate it 180 degrees or flip it over, and then set it back in the input tray.

Problem Cause and Solution (Media jams, continued) If you are using the optional multi-bin mailbox, do not remove pages from the output bins until the printer is finished printing. Repeated jams in the fuser area might indicate that the fuser is not installed correctly. Press down on the large green lever on the left side to lock it into place. Also, rotate the blue levers on either side of the fuser up until they snap into place. Repeated jams in the transfer area might indicate that the transfer drum is not installed correctly. Remove the transfer drum and reinstall it, making sure the knobs on the sides of the transfer drum are in the guides inside the printer. Repeated jams in the multi-bin mailbox area might indicate that the printer and multi-bin mailbox are set up on an uneven floor. Remove the toner cartridges, and then move the printer to a level location. Reinstall the toner cartridges. Repeated paper jams between the printer and the optional 3000-sheet Stapler/Stacker or optional 3000-sheet Stacker might mean that the printer and the optional 3000-sheet Stapler/Stacker or 3000-sheet Stacker are set up on an uneven floor. Level the device. See the installation guide that came with the device for instructions. The printer consumables are wearing out. Check the printer control panel for messages prompting you to replace consumables, or print a configuration page to verify the current status of the consumables. For the consumable replacement schedule, see "Frequency for Replacing Printer Consumables" in chapter 6. CLEAR INPUT JAM displays on the front panel and will not clear even though there is no paper in the path. Or, tray 2, 3, or 4 misfeeds or continually jams when feeding. Inspect the feed rollers. Ensure that they are completely

installed on the shaft (they should click into place).

Problem	Cause and Solution
Printer feeds multiple sheets	The input tray is overfilled. Remove the excess media from the input tray. For more information on input tray capacity, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
	Verify that the media is under the tabs in the input tray. Pull out the input tray, press the media down under the tabs in the input tray, and then close the input tray.
	The media is sticking together. Remove any remaining media, rotate it 180 degrees or flip it over, and then set it back in the input tray.
	There is more than one type of media, such as paper and transparencies, in the input tray. Remove all media except the type you want to print on.
	The media does not meet the specifications for this printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
Printer feeds the incorrect media type or size	The correct media size is not selected in your application. Select the correct media size in your application.
	The media types for each input tray are not configured correctly in the printer control panel. Verify the requested media is installed in the printer, and reconfigure the media type for the input tray in the printer control panel. For information on configuring the media type in the input trays, see "Configuring Media Type and Size" in chapter 2.
	If the requested media type and size are not available, then the printer displays a message on the printer control panel requesting that the media type and size be loaded. If Auto Paper Override is enabled in the printer control panel, then after the set time, or if Go is pressed, the printer will print on the default type and size.

Problem	Cause and Solution
Media does not feed automatically	Manual Feed (Tray 1) is not selected in the printer driver. Select the correct media source.
	The input tray is empty. Load media into the input tray.
	Media is still in the paper path after removing the previous media jam. Open the printer doors and remove any media from the paper path. Check the fuser area carefully for any jams. For information on removing media jams, see the quick reference guide.
Media does not feed from tray 1	Manual Feed (Tray 1) is not selected in the printer driver. Select the correct media source.
	If the size set in your application does not match the size of media fed into tray 1, the printer will sense the difference in size and stop printing to prevent damage to the printer. Remove any remaining media, verify the size set in your application and the size of the media match, adjust the media width guides so they are firmly against the edges of the media, and reprint.
	Verify that the media is being inserted far enough into the tray 1. Insert the media into the tray 1 until the media is tight against the printer, and slide the media width guides until they touch both sides of the media without bending the media.
	Media is still in the paper path after removing the previous media jam. Open the printer doors and remove any media from the paper path. For information on removing media jams, see the quick reference guide.

Problem	Cause and Solution
Media does not feed from tray 2 or 3	The media type selected from the application has not been configured for the input tray. Configure the media type for the input tray in the printer control panel. For more information on configuring media types, see "Configuring Media Type and Size" in chapter 2.
	If trays 2 and 3 are configured for the same media type and size, the printer will only feed from a specific input tray if that input tray is selected in your application. For more information on selecting a input tray from your application, see the online help for the application.
	Media is still in the paper path after removing the previous media jam. Open the printer doors and remove any media from the paper path. For information on removing media jams, see the quick reference guide.
Media does not feed from tray 4	Remove the media and verify the media guides in the front, back, and left of the input tray are configured to the correct media size. For more information on configuring the media guides, see "Printing from Tray 4 (some printer models only)" in chapter 3.
	Verify the media type configured in the printer control panel for tray 4 matches the media loaded in tray 4. For more information on configuring the media type, see "Configuring Media Type and Size" in chapter 2.

Problem	Cause and Solution
(Media does not feed from tray 4, continued)	The input tray is overfilled. Remove excess media from the input tray. For more information on input tray capacity, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
	The power cord is not firmly plugged into the printer, tray 4, and the power receptacle. Remove and reconnect the power cord.
	Verify that the cables are firmly attached between tray 4 and the printer. Also, verify that the cables are connected to the correct connector. For more information on connecting the cables between tray 4 and the printer, see the getting started guide.
	The paper rollers might need to be cleaned. Open the lower right door, pinch together the release levers on the end of the rollers, and slide the rollers off their spindles. Clean the rollers with a hand wipe. Reinstall the rollers by holding the roller by the levers and sliding the rollers onto the spindle until the rollers click into place.
	The media does not meet the specifications for this printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
Transparencies or glossy paper will not feed from trays 1, 2, or 3	Verify the correct media type is selected in the printer driver or application. Or, if you are trying to print from a particular input tray, verify that the input tray from which you are trying to print is selected in the printer driver or application.
	Verify the media type configured in the printer control panel for the input tray matches the media loaded in the input tray. For more information on configuring the media type, see "Configuring Media Type and Size" in chapter 2.
	The input tray is overfilled. Remove the excess media from the input tray. For more information on input tray capacity, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.

Problem	Cause and Solution
(Transparencies or glossy paper will not feed from trays 1, 2, or 3, continued)	Verify that the media is being inserted far enough into the tray 1. Insert the media into the tray 1 until the media is tight against the printer, and slide the media width guides until they touch both sides of the media without bending the media.
	Only one sheet is loaded in the input tray. Load more than one sheet in the input tray.
	The media does not meet the specifications for this printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
Envelopes jam or will not feed in the printer	Envelopes can only be printed from tray 1. If the envelopes are in another input tray, remove the envelopes and place them in tray 1.
	Envelopes can only be printed on the front (smooth) side. If the envelopes are loaded upside-down in tray 1, remove the envelopes and place them flap down on tray 1 with the return address area (short edge of the envelope) toward the printer.
	Verify that the envelopes are being inserted far enough into the tray 1. Insert the envelopes into the tray 1 until the envelopes are tight against the printer, and slide the media width guides until they touch both sides of the envelopes without bending the envelopes.
	The envelope does not meet the specifications for this printer. For envelope specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
Media is not going to the correct output bin	Verify that the correct output bin is selected in the printer driver. For more information on changing printer driver settings, see the online help.
	The media does not meet the specifications for the output bin. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
	If you are trying to send print jobs to an optional multi-bin mailbox, optional 3000-sheet Stapler/Stacker, or optional 3000-sheet Stacker, verify that the specific device has been installed on the printer and in the printer driver. Also verify the multi-bin mailbox mode, which will affect the print job destination.

Problem	Cause and Solution
Curled or wrinkled output	The media does not meet the specifications for this printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
	The current media is damaged or in poor condition. Remove the damaged media from the input tray, and then replace with undamaged media.
	You are operating the printer in excessively humid conditions. Make sure the printer is operating within the environmental specifications listed in appendix <u>B</u> .
	If you are printing heavy, solid fill areas, the excessive toner can cause excessive curl. Try printing different halftone patterns (a lighter shade of the same color), a lighter color, or a lighter pattern.
	The paper path might be curling the page. Change the paper path by printing from a different input tray to a different output bin.
	You are using media that was not stored correctly and could have absorbed water. Remove and replace with media from a fresh, unopened package.
	The media has a poorly cut edge. Remove any remaining media, rotate the media 180 degrees or flip it over, and then set it back in the input tray.

Printer Response Problems

Problem	Cause and Solution
No display message	The printer might be in Power Save mode. Press Go to bring the printer online.
	The printer control panel display appears blank or is not lit, even when the fan is running. The printer is in standby mode (off). Turn the printer on (button in).
	The power cord is not firmly plugged into both the printer and the power receptacle. Remove and reconnect the power cord.
	The line voltage is incorrect for the printer power configuration. Connect the printer to the correct line voltage as specified on the Power Rating label on the back of the printer.
	The power cord is damaged or excessively worn. Replace the power cord.
	The power source receptacle is not working correctly. Connect the printer to a different power receptacle.
	If you recently installed DIMMs or a printer hard disk, verify the communications board was reinstalled correctly. For more information on installing DIMMs, see appendix A, "DIMM Installation;" for more information on installing a printer hard disk, see the installation guide included with the printer hard disk.
Tray 4 will not power on	The power cord is not firmly plugged into both the printer and the power receptacle. Remove and reconnect the power cord.
	Verify that the cables are firmly attached between tray 4 and the printer. Also, verify that the cables are connected to the correct connector. For more information on connecting the cables between tray 4 and the printer, see the getting started guide.

Problem	Cause and Solution
The multi-bin mailbox will not power on	Verify that the power cord is firmly plugged into both the multi-bin mailbox and the power receptacle. Remove and reconnect the power cord.
	Verify that the cables are firmly attached between the multi-bin mailbox and tray 4. Also, verify that the cables are connected to the correct connector. For more information on connecting the cables between the multi-bin mailbox and tray 4, see the getting started guide.
	Verify that the multi-bin mailbox is firmly attached to the printer.
The printer does not recognize the multi-bin mailbox	Verify that the power cord is firmly plugged into both the multi-bin mailbox and the power receptacle. Remove and reconnect the power cord.
	Verify that the multi-bin mailbox is firmly attached to the printer.
	Verify that the cables are firmly attached between the multi-bin mailbox and tray 4. Also, verify that the cables are connected to the correct connector. For more information on connecting the cables between the multi-bin mailbox and tray 4, see the getting started guide.
Printer does not	Check the power cords.
recognize the optional paper handling device or the user LED on the device is off.	Check the C-link cables.
	Make sure that the device has been configured in the printer driver.
	If the printer still does not recognize the device, contact a dealer or authorized HP service provider. See the user guide for your specific HP LaserJet printer for service and support information.

Problem	Cause and Solution
Color toner carousel will not rotate	The power cord is not firmly plugged into both the printer and the power receptacle. Remove and reconnect the power cord. The printer must be turned on.
	Verify the clear door is closed, the imaging drum and black toner cartridge are installed (including removing the orange seal from the black toner cartridge and swinging the upper lever to the left), and the upper right door is closed.
The printer is on, but not receiving data (Data light does not blink and nothing prints)	READY is not displayed on the printer control panel. Press Go to bring the printer online.
	The printer has lost communication with the network. Turn the printer off and then turn the printer on to re-establish the connection.
	The network cable is not correct for the network operating system. Select the correct network cable for the network operating system. For more information, see the getting started guide.

Problem

(The printer is on, but not receiving data (Data light does not blink and nothing prints), continued)

Cause and Solution

The interface cable is not securely connected to both the printer and the computer. Remove and reconnect the interface cable.

The network cable might be old or not working correctly. Replace the network cable with a new cable.

The parallel cable might not be working correctly. Verify that the cable is IEEE-1284 compliant and no longer than 10 feet (approximately 3 meters), and that the parallel advanced function in the printer control panel is on. If necessary, turn the parallel advanced function off through the printer control panel and replace the cable.

The network configurations on the configuration page do not match the configurations on the host computer. Configure the printer to match the computer configuration, or configure the host computer to match the printer. For network configuration information, see the getting started guide.

If you have more than one LAN (local area network), the computer might be on a different LAN than the printer is on. Change LANs and reprint the job.

If you are using Windows 9x, Windows NT or Windows 2000, the host computer or the printer might not be shared correctly. For more information on sharing, see the Windows documentation.

If you are using Novell NetWare, you might not have configured the queues properly. Use the HP Web JetAdmin software to configure the queues. For more information on configuring queues, see the HP Web JetAdmin online help.

The computer port is not configured or working correctly. Connect another peripheral to this port to check the port operation.

If you are using AppleTalk, the printer is not selected in the Chooser menu. Go to the Chooser menu. Select the printer type. In the list box, select the printer name. Select the printer port icon. When you close the Chooser menu, the settings will be saved.

Problem	Cause and Solution
(The printer is on, but not receiving data (Data light does not blink and nothing prints), continued)	If you are using AppleTalk, verify that the AppleTalk name matches the name on the configuration page. Print the configuration page. Go to the Chooser menu. Select the printer type. In the list box, select the printer name that matches the printer name on the configuration page. Select the printer port icon. When you close the Chooser menu, the settings will be saved.
The printer is on and receiving data (Data light blinks), but nothing prints	READY is not displayed on the printer control panel. Press Go to bring the printer online.
	The levers inside the front door of the printer might not be latched. Verify all levers inside the front door are properly latched and close the front door.
	The Data indicator is flashing. Wait for the Data indicator to stop flashing. The printer is still receiving data.
	The printer might be out of toner. Check the printer control panel display for TONER OUT REPLACE <color>. For more information on replacing the toner cartridge, see the installation guide included with the toner cartridge.</color>
	The imaging drum life might be exceeded. Check the printer control panel display for DRUM LIFE OUT REPLACE DRUM KIT. For more information on replacing the drum kit, see the installation guide included with the drum kit.
	Check the printer control panel for messages. For more information on resolving printer control panel messages, see chapter 7, "Printer Control Panel Messages."
	The parallel port might have an MS-DOS timeout error. Add a MODE command to the autoexec.bat file. For example, in MS-DOS 4.0 or later, use MODE LPT1: B. For earlier versions of MS-DOS, use MODE LPT1: P. Both examples are for a printer connected to LPT1. See the MS-DOS documentation for more information.

Problem	Cause and Solution
The printer is on, but cannot print a PostScript file	You are using the MS-DOS copy command with the /B option (COPY /B <filename> PRN: or COPY <filename> PRN: /B). Try the same command without the /B option.</filename></filename>
	The PostScript printer driver is not selected in your application. Select the PostScript printer driver for this printer in your application.
	The PostScript file might contain an error. Turn the PRINT PS ERRORS option on in the printer control panel to determine the error. Try printing the PostScript file from another application. If necessary, update the PostScript printer driver. For more help, see the Adobe documentation.
Cannot select the printer from the computer	READY is not displayed on the printer control panel. Press Go to bring the printer online.
	The correct printer driver is not loaded in the computer. Load the correct printer driver.
	The correct printer and port are not selected on the computer. See the getting started guide to verify that the printer is connected to the network correctly, and then select the correct printer and port.
	Print a configuration page to verify that the TCP/IP address in the EIO settings and the printer name matches the information in the network settings on the host computer. Change the settings as necessary.
	Verify that the network permissions have been set correctly. For more information on network permissions, see the network operating system documentation.
	If you are on an AppleTalk network or using a Mac OS computer, the printer is not selected correctly. Go to the Chooser menu. Select the printer type. In the list box, select the printer name. Select the printer port icon. When you close the Chooser menu, the settings will be saved.

Printer Control Panel and Configuration Problems

Problem	Cause and Solution
Printer control panel settings work incorrectly	The printer control panel display appears blank or is not lit even when the fan is running. The printer is in standby mode (off). Turn the printer on (button in).
	The printer settings in the application are different from the printer control panel settings. The settings in your application override the settings in the printer control panel.
	The settings were not correctly saved after changing them. Re-select the setting, then press SELECT. An asterisk (*) should appear to the right of the setting.
	The data indicator was lit and the settings were not activated after changing them. Re-select the printer control panel settings. Then, if the data indicator is lit, press Select to activate the settings and clear the print buffer.
	The Data indicator is lit. Buffered data exist in the printer. Pressing Select activates the printer control panel settings, but erases the buffered data. Pressing Go prints the buffered data in the current printer control panel settings, then activates the new printer control panel settings.
	If you are on a network, another user might have changed the printer control panel settings. See the system administrator to coordinate changes to printer control panel settings.
Cannot select the information menu	The Ready indicator is lit. Press Go to take the printer offline.
	The Data indicator is lit. Press Go to reset the printer.

Problem	Cause and Solution
Cannot print a configuration page	You did not press Select after selecting the configuration page. Re-select the configuration page. Then press Select to print the configuration page.
	You pressed Go before pressing SELECT or before the printer self-test was completed. Re-select the configuration page, and then press SELECT once to print the configuration page. Pressing Go after the printer self-test is started, or before pressing SELECT, stops the printer self-test and brings the printer online.
	The selected input tray is empty. Load the correct media size in the input tray.

Application Problems

Problem	Cause and Solution
Cannot change system selections through software	The correct printer driver is not loaded. Load the correct printer driver.
Cannot select a font in the application	The correct printer driver is not selected. Select the correct printer driver.
	The font is not available in your application. Use a font manager utility to add the font.
	If you have downloaded a font on the printer hard disk and you do not see the font in the application, see the download program (such as EuroForm or other font management utilities) help for more information.
	Print a disk directory page to see if the font has been downloaded to the printer hard disk. If the font is on the printer hard disk, install the font in Windows using a font management utility or through the Windows control panel. For more information on installing a font using the Windows control panel, see the appropriate online help.
	The font might have been downloaded to the printer RAM rather than to the printer hard disk. When the printer is turned off and on, all data in the printer's RAM is lost. Download the font to RAM again. For more information on downloading fonts, see the online help.
	If you selected one font and another font prints out, the font is not available and the application has substituted the font. Make sure the selected font has been downloaded to the printer hard disk or printer RAM. For more information on downloading fonts, see the online help.

Problem	Cause and Solution
Cannot select colors in the application	Your application does not support color. See the documentation for your application for help.
	The color mode is not selected in your application. Select the color mode instead of the grayscale or black and white output mode.
	The correct printer driver is not loaded. Load the correct printer driver.

Incorrect Printer Output

Problem	Cause and Solution
Incorrect fonts on the printout	The font has not been correctly selected in your application. Re-select the font in your application. For more information on selecting fonts, see the online help for your application.
	The font is not available to the printer. Use a different font or download the font you want. For more information on downloading fonts, see the online help for the printer driver.
	The correct printer driver is not selected. Select the correct printer driver. For more information on selecting printer drivers, see the online help for the printer driver for your application.
Cannot print all characters in a symbol set	The correct font is not selected. Select the correct font. For more information on selecting fonts, see the online help for your application.
	The correct symbol set is not selected. Select the correct symbol set. For more information on selecting symbol sets, see the online help for your application.
	The selected character is not supported by your application. For more information, see the online help for your application.
	The selected symbol set is not supported by the printer. Use a font that supports the symbol set or download fonts that support the symbol set. For more information on downloading fonts, see the online help.
Erratic or interrupted printout	The interface cable is loose. Remove and reconnect the interface cable.
	The interface cable is damaged or bad. Connect a new IEEE-1284 compliant interface cable.
	The power cable is loose. Remove the cables, and then firmly plug the power cord into both the printer and the power receptacle.

Problem	Cause and Solution
Partial printout	The media was loaded in tray 1 incorrectly. Load letter- or A4-sized media with the long edge toward the printer. Load media sizes larger than letter or A4 with the short edge toward the printer.
	Verify that the media size set in the printer driver and the actual size of the media match. For information on configuring the printer driver, see the online help.
	A memory error message appears on the printer control panel display. Delete from the printer memory any unwanted downloaded fonts, style sheets, macros, and forms, or add more memory to the printer.
	If there are missing random characters, the parallel cable might be old or bad. Replace the cable with an IEEE-1284 compliant parallel cable.
	The printer files contain errors. Check your application to make sure the print files are error free by 1) trying to print another file that you know is error free from within the same application or 2) printing the file in question from another application.
Drifting text between consecutive pages	Your application is not resetting the printer to the top of the page. See the software application notes or the <i>PCL Technical Reference Manual</i> for specific information.
PostScript job prints as text	If you are using a non-Windows or custom-built application, it is possible that the PostScript job header is not being sent down to the printer with the file. For more information about sending a PostScript job header with your file, see the application's documentation.
	Your file might have an error in the PostScript code. Try reprinting the document. For more information on printing PostScript files, see the application's documentation.

Color Printing Problems

Problem	Cause and Solution
Printed colors do not match the screen colors	The computer and printer use different color processing methods. Other factors, such as print media and lighting, also influence and limit your ability to match colors from the screen to your output. For more information on printer driver color controls, see chapter 5, "Using Color."
	Turn the printer off and on to reset the printer's color calibration. If the problem persists, clean the density sensor as described in "Cleaning the Density Sensor" later in this chapter.
	Extremely light screen colors are not being printed. Avoid extremely light colors. Your application is interpreting extremely light colors as white. For more information, see the online help for your application.
	Extremely dark screen colors are being printed as black. Avoid extremely dark colors. Your application is interpreting extremely dark colors as black. For more information, see the online help for your application.
	The screen colors differ from the printer output. Select ColorSmart II in the Color tab of the printer driver. For information on using the Color Swatch utility to help match colors or another color matching system, see "Selecting Colors" in chapter <u>5</u> or see the online help.
	Each application processes colors differently. Change applications. For more information on how a particular application handles color, see the documentation for the application.
	The color density and balance are not set properly. For information on changing the color density and balance, see "Adjusting the Color Balance" in chapter 5.
Missing colors	Turn the printer off and on to reset the printer's color calibration.
	The media does not meet the specifications for this printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.

Problem	Cause and Solution
(Missing colors, continued)	You might be operating the printer in excessively humid conditions. Make sure the printer is operating within the environmental specifications listed in appendix <u>B</u> .
	A new toner cartridge was installed without removing all of the toner packaging. Remove the toner cartridge. Remove all packaging, verify that the orange tab has been pulled and the seal has been removed. Reinstall the toner cartridge.
	The printer might not be recognizing that the toner levels are low. Open the front door, and remove and reinstall each toner cartridge. Close the front door. Replace the toner cartridges if TONER LOW REPLACE <color> or TONER OUT REPLACE <color> appears on the printer control panel display.</color></color>
Print is black instead of color	The color mode is not selected in your application or printer driver. Select the color mode instead of the grayscale or black and white mode in your application or printer driver. For more information, see the online help for the application or printer driver.
	The correct printer driver is not selected in your application. Select the printer driver for this printer. For more information, see the online help for the printer driver.
	The printer is not working correctly. Verify the printer operation by printing a configuration page from the printer control panel. If no color appears on the configuration page, contact a local authorized HP dealer for service.
Inconsistent colors after replacing the toner cartridges	You are not using the correct toner cartridges. Use only the HP toner cartridges that were designed for this printer. HP has designed the printer, toner cartridges, and toner formula to work together to give you optimal image quality from the printer. For part number information, see "Accessories, Options, and Related Products" later in this chapter.
	A new toner cartridge was installed without removing all of the toner packaging. Remove the toner cartridge. Remove all packaging, verify that the orange tab has been pulled and the seal has been removed. Reinstall the toner cartridge.


Print Quality Problems

Unless otherwise specified, all references in this section to horizontal or vertical directions of print quality problems refer to problems found on letter- and A4-sized media. These media sizes are fed into the printer long edge first.

Because media sizes other than letter or A4 are fed into the printer short edge first, the orientations of print quality problems are the opposite of those on letter or A4-sized media. Print quality problems that appear horizontally on a letter- or A4-sized page when it is held with the short edge up will run vertically on other media sizes when the page is held with the short edge up. The same is true for a vertical defect on a letter- or A4- sized page: it will appear as a horizontal defect on other sizes of media.

The following figure shows a print quality problem printed on both a letter- or A4-sized page and the same defect on an 11-by-17 inch or A3-sized page (or any other size of media).

Figure 17

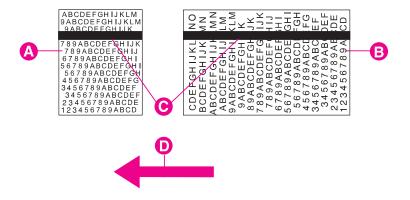

- A Letter- or A4-sized media
- **B** 11-by-17 inch or A3-sized media (or any other size of media)
- **C** Print quality problem
- D Direction media moves through printer

Problem	Cause and Solution
ABCDEFGHIJKLM BABCDEFGHIJKLM BABCDEFGHIJKLM BABCDEFGHIJK T 89ABCDEFGHIJK T 99ABCDEFGHIJK T 99A	Toner smears appear on the back of the page. The transfer belt is dirty or the transfer belt assembly may not be seated properly. Open and close the front door to complete a printer self-cleaning cycle.
	There might be an undetected jam in the printer. Open and close the front door to allow the printer to clear the jam. If the problem persists, remove the transfer drum. Look between the drum surface and the drum handles for the piece of media. Remove any media, and then reinstall the transfer drum.
	You recently had a media jam or the printer fed multiple sheets of media. Open and close the front door to complete a printer self-cleaning cycle.
	If you are printing on media heavier than 28 lb (105 g/m²) bond, you must select Heavy Paper as the paper type on the Paper tab in the printer driver to ensure the correct finish on the media. For more information on changing the printer driver settings, see the online help.

Problem Cause and Solution Horizontal lines or A toner cartridge might be running out of toner. Check the printer control panel display for a TONER LOW streaks REPLACE (Color) or TONER OUT REPLACE (Color) message. Replace the toner cartridge indicated on the printer control panel display. Do not shake the toner cartridge in attempts to extend the cartridge life. For more information on replacing the toner cartridge, see the installation guide included with the toner cartridge. Dark or light lines or streaks appear in colors, except black. A toner cartridge might be defective. If the problem persists, contact a local authorized HP dealer or service representative for service. 3456789ABCDEF White lines or streaks only appear in the black areas of print, but not in color areas. Print the configuration page five times. The defect should clear with continued printing. Then reprint the print job. If the problem persists, replace the black toner cartridge. If the problem persists, contact a local authorized HP dealer or service representative for service. Dark or white lines or streaks in all colors, including black. Print the configuration page five times. The defect should clear with continued printing. If the defect does not clear, turn the printer off and on to reset the printer's density calibration. Make sure that the transfer belt is seated properly (rest the ends of the belt into the notches inside the printer). If the problem persists, replace the imaging drum. For more information on replacing the imaging drum, see the installation guide included with the drum kit. Light streaks in dark solid fill areas might indicate that the post charger on the transfer drum needs to be cleaned. Open and close the front door to complete a printer self-cleaning cycle. If the defect does not clear, clean the post charger. For information on cleaning the post charger, see "Cleaning the Post Charger" later in

this chapter.

Problem	Cause and Solution
Vertical bands or very dark background	Vertical colored bands or dark black or brown backgrounds appear on the page. If the problem persists after printing 10 pages, contact a local authorized HP dealer or service representative for service.
7 4 9 Å KODE 5 60 MJ 6 78 9 9 BCODE FGH1 5 6 7 9 8 BCODE FGH1 5 7 8 A B C C E FGH 4 6 6 7 4 9 A B C D E FGH 3 6 6 8 9 A G C D E F 2 3 4 5 7 8 9 A B C D E 2 3 4 5 7 8 9 A B C D E	The new imaging drum might have a temporary charging problem. Print several configuration pages to clear the drum.
Faded print, or random faded areas	A toner cartridge is running out of toner. Check for a TONER LOW REPLACE <color> or TONER OUT REPLACE <color> message on the printer control panel. Replace the toner cartridge indicated on the display.</color></color>
9A*CDLFGH!.X 89ABCDEFGH!UK 788.3C)EFGHUK 788.4C)DEFGHU 5678.8BABCDEFGHU 5678.*BCDEFGH 45678.*BCDEFGH 45678.*BCDEFGH 345678.8BCDEFG 345678.8BCDEF 5486788ABCDEF	The media does not meet the specifications for this printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
[120400100000]	The moisture content of the media is uneven or too high. Try media from a different source or from an unopened ream of media.
	If you are trying to duplex on paper heavier than 28 lb (105 g/m²) bond, at your computer select Heavy or Cardstock as the media type in the printer driver. Print side one of your document from tray 1. To print side two, at your computer select Manually Print on 2nd Side in the printer driver. Then, using tray 1 again, turn the page over and print.
	Note: If you use the Manually Print on 2nd Side setting when you are not printing on the second side of heavy media, you might see sharp, inconsistent patches of color on your output.
	Some areas of some media might reject toner. Try media from a different source or from an unopened ream of media.
	Your media is excessively rough. Change to a smooth xerographic paper. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.

Problem	Cause and Solution
(Faded print, or random faded areas, continued)	The letterhead you are using is printed on rough paper. Try a smooth xerographic paper. If this solves the problem, make sure the letterhead vendor is using paper that meets the specifications for this printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
	You are operating the printer in excessively humid or dry conditions. Make sure the printer is operating within the environmental specifications listed appendix <u>B</u> .
	The media was creased or wrinkled when it was loaded in the input tray. Try media from a different source or from an unopened ream of media.
	The print on the entire page is light or faded. Remove the transfer assembly. Reinstall the transfer assembly. Be sure to align the arrows and then reseat the assembly.
	If you recently removed the imaging drum from the printer, it might have been damaged by light. Turn the printer off and on to reset the printer's density calibration. If the problem persists, replace the imaging drum or contact a local authorized HP dealer or service representative for service. For more information on replacing the imaging drum, see the installation guide included with the drum kit.
	If the print or the background is too dark, turn the printer off and on to allow the printer to adjust its color settings. If the problem persists, clean the density sensor as described in "Cleaning the Density Sensor" later in this chapter.

Problem	Cause and Solution
Irregular, raised spots or stray toner	If you are printing on heavy media (28 to 58 lb, or 105 to 216 g/m² bond), you must select Heavy Paper as the paper type in the Paper tab in the printer driver to ensure the correct finish on the media. For more information on changing printer driver settings, see the online help.
	Toner is smudged on the back of the page. Toner collected on the transfer belt will cause smudging on the back of a page. The belt is self-cleaning and the smudging will normally clear within a few pages. Or, open and close the front door to complete a printer self-cleaning cycle.
	You recently had a media jam or the printer fed multiple sheets of media. Open and close the front door to complete a printer self-cleaning cycle.
	You are refeeding media that has already passed through the printer or through a copier. Do not refeed media. Refeeding media contaminates the fuser, causing stray toner defects.
	The fuser roller is contaminated. Print 5 to 10 pages to clean the fuser roller.
Banding	Consumables might be past their rated life. Check the printer control panel display for any messages. If no messages appear, print a configuration page to check the life of the consumables. Replace any consumables that are past their rated life.
	Certain halftone patterns (lighter shades of a solid color) exaggerate banding. Try a different halftone pattern.

Problem Dull or dark colors on transparencies ACCEPCHIKE ASSESSED ASSESSE

Cause and Solution

The printer is not correctly fusing the toner to the transparency. Check **Transparency** in Paper tab in the printer driver. For more information on changing the printer driver settings, see the online help.

The media input tray is not correctly configured for transparencies. For more information on configuring the input tray, see "Configuring Media Type and Size" in chapter 2.

Transparency is not selected as the media type on the Paper tab in the printer driver. When **Transparency** is selected as the media type and **ColorSmart II** is selected on the Color tab, the printer will use a color treatment optimized for projection. To choose different color treatments for transparencies, use the **Manual** setting on the Color tab. For more information on using color, see chapter 5, "Using Color."

Turn the printer off and on to reset the printer's density calibration.

Reflective overhead projectors reflect light through the transparency twice, causing excessive light scattering and producing colors that appear dark or dull on the screen. If you are using a reflective overhead projector (usually a portable overhead projector), use a standard overhead projector, if available.

You are using a transparency that is outside the specifications for this printer. Use HP brand transparencies to produce the best image quality for the printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.


The selected colors give an undesirable appearance when printed. Select different colors in your application.


Spots and smudges appear in the background areas of transparencies when they are projected on the screen. Reprint the transparencies, being careful not to touch the surface of transparencies. Oil from your fingers and hands can contaminate transparencies, leaving oil spots or smudges on the transparencies.


Problem	Cause and Solution
(Dull or dark colors on transparencies, continued)	Verify that the printer is operating in an environment consistent with the specifications listed appendix B.
Rippled or wavy transparencies ABCDEFGHIJIKLN PASCOEFGHIJK NA	You are using a transparency that is outside the specifications for this printer. Use HP brand transparencies to produce the best image quality for the printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
	There is a wave or ripple in the background when printing a solid color. Choose a background pattern that uses less toner.
	The paper path you are using might be rippling or waving the page. Change the paper path by printing from a different input tray to a different output bin.
Horizontal streaks on transparencies ABCDEFOHIJKLM PARCOEFOHIJKLM PARCOEFOHIJKLM PARCOEFOHIJK PARCOEFOHIJK SOTARABODEFOHIJ SOTARABODEFOHIJ SOTARABODEFOHIJ SOTARABODEFOHIJ SOTARABODEFOHIJ SOTARABODEFOHIJ SOTARABODEFOHIJ	You are using a transparency that is outside the specifications for this printer. Use HP brand transparencies to produce the best image quality for the printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
	Reflective overhead projectors reflect light through the transparency twice, causing excessive light scattering and producing colors that appear dark or dull on the screen. If you are using a reflective overhead projector (usually a portable overhead projector), use a standard overhead projector, if available.

Problem	Cause and Solution
Smudges	The printer recently had a media jam. Open and close the front door to complete a printer self-cleaning cycle.
Addition and the second	You recently changed to a different media size. Open and close the front door to complete a printer self-cleaning cycle.
	If the previous page printed was a prepunched media and there was an image in the location of the prepunched holes, then this toner is deposited on the back of the next page printed. Open and close the front door to complete a printer self-cleaning cycle.
	There might be an undetected jam in the printer. Open and close the front door to allow the printer to clear the jam. If the problem persists, remove the transfer drum. Look between the drum surface and the drum handles for a piece of media. Remove any media, and then reinstall the transfer drum.
Uneven dark areas or lines in solid fill areas on transparencies ABCDEFGHIJKLM PARCDEFGHIJKLM PARCDEFGHIJK P	You are using a transparency that is outside the specifications for this printer. Use HP brand transparencies to produce the best image quality for the printer. For media specifications, see "Supported Media Weights and Sizes for Input Trays" in chapter 3.
Repetitive defects ABCDEFGHUKUN 9-16 CDEFGHUKUN 9-16 CDEFGHUKUN 8-18 CDEFGHUKUN 1-8 SABCDEFGHUK 1-8 SABCDEFGHUKUN 1-8 SABCD	The printer should be cleaned. Open and shut the front door of the printer to complete a printer self-cleaning cycle. If the problem persists, see "Cleaning the Transfer Drum" later in this chapter.
	If the previous page printed was a prepunched media and there was an image in the location of the prepunched holes, then toner will be deposited on the back of the next page printed. Open and close the front door to complete a printer self-cleaning cycle.

Problem	Cause and Solution
(Repetitive defects, continued)	Repeating spots or specks of the same size and shape appear on almost all pages in the same area of the page. The repeating defects will generally be dark gray or black. If the defect is not acceptable, cleaning or replacing the imaging drum or the transfer drum might be necessary. If the defect occurs one or more times on each letter- or A4-sized page, the imaging drum should be replaced. If the defect occurs on every other letter- or A4-sized page, then the transfer drum should be cleaned. For information on cleaning the transfer drum, see "Cleaning the Transfer Drum" later in this chapter. If cleaning the transfer drum does not correct the problem, replace the transfer drum or contact a local authorized HP dealer or service representative for service. For more information on replacing the imaging drum or the transfer drum, see the installation guide included with the drum kit or transfer kit.
	Unwanted marks of the same size and shape appear more than once in the same vertical area on transparencies only. The fuser roller is damaged. Replace the fuser. For more information on replacing the fuser, see the installation guide included with the fuser kit.
ABCDEFGHIJKLM 8ABCDEFGHIJKLM 8ABCDEFGHIJK 789ABCDEFGHIJ 78	Irregular wavy patterns in solid fill backgrounds might indicate that the transfer charger needs to be cleaned. For more information on cleaning the transfer charger, see "Cleaning the Transfer Charger" later in this chapter.

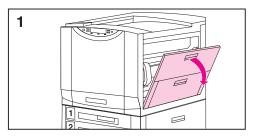

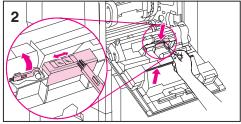

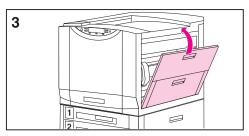

Cleaning the Density Sensor

Clean the density sensor after replacing the imaging drum and when printed colors are inaccurate.

To clean the density sensor and erase lamp

- 1 Open the upper door on the right side of the printer.
- 2 On the inside of the door, locate the density sensor and the density sensor brush. Use the brush to brush off toner particles from the density sensor and the erase lamp. Then replace the brush.

Note

You can also use a hand wipe to clean the density sensor. To prevent scratches on the sensor, do not use any paper products, such as tissue or paper towels, to clean the sensor.

3 Close the upper right door.

Cleaning the Transfer Drum

Perform these procedures only when there is an unacceptable repetitive defect and the only other solution is replacing the transfer drum. Many, but not all, repetitive defects can be removed using the following procedures. Defects that appear as light spots in dark areas of print are more likely to be corrected by this procedure than dark spots in unprinted areas. If the procedures are performed incorrectly or without proper care, the transfer drum can be permanently damaged.


These procedures require the following items:


- A print sample showing the repetitive defect
- A clean, flat surface to work on
- Isopropyl alcohol
- A hand wipe


CAUTION


You can also use a dry, clean, soft, lint-free cloth, such as cheesecloth, to clean the transfer drum. To prevent scratches on the drum, do not use any paper products, such as tissue or paper towels, to clean the drum.

Make sure you have a clean work area free of sharp or rough objects that might damage the drum. To avoid damaging the drum, remove all jewelry and watches before continuing. Contact with any of these items can cause permanent damage.

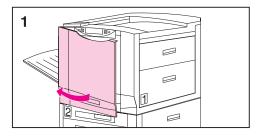

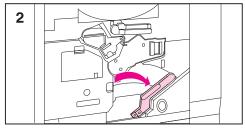


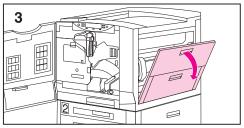


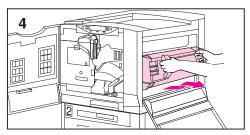



To clean the transfer drum

- 1 Leave the printer powered on and open the printer's front door.
- 2 Push the white button on the lower (green) lever and swing the lever to the right.
- 3 Open the upper door on the right side of the printer.
- **4** Using the handles, gently pull out the transfer drum until it stops.

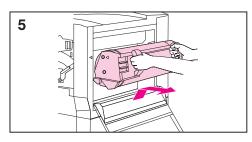

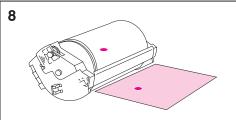

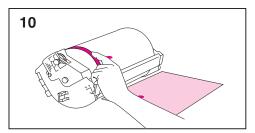

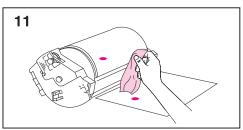



- 5 Lift the drum out of the printer.
- 6 Place the drum on a clean, smooth surface that is free of sharp or rough objects.
- 7 Face the drum surface towards you (the handles will be away from you).
- 8 Center the print sample beside the transfer drum with the top of the page toward the transfer drum.
- 9 Using the print sample as a reference, inspect the transfer drum for a small spot or speck that might be causing the repetitive defects.
- 10 To locate the spot or speck, you might have to rotate the transfer drum by turning the shiny metal area on either side of the transfer drum surface with your fingers.


CAUTION


Use extreme care when removing a defect from the transfer drum. Using a sharp object to remove the defect or allowing fingernails or jewelry to touch the transfer drum can scratch the drum, causing permanent damage. Do not clean the transfer drum using force. Do not use any water-based cleaners or excessive alcohol. These actions can permanently damage the transfer drum.

11 Gently rub the spot or speck with a hand wipe.

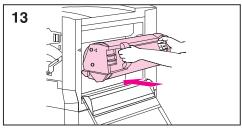

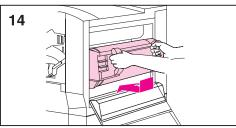

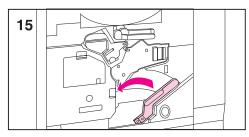

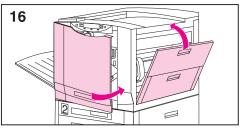


12 If the speck does not come off, dampen the hand wipe with isopropyl alcohol. Use the hand wipe to remove the spot or speck from the transfer drum.


Note

If you used isopropyl alcohol to clean the transfer drum, you might need to print 50 to 100 pages to clean any residual isopropyl alcohol from the transfer drum.

- 13 To reinstall the transfer drum, align the arrows on the ends of the drum with the matching arrows on the tracks inside the printer.
- 14 Push the drum into the printer. Be sure both sides are inserted completely.
- **15** Swing the lower (green) lever to the left, making sure it clicks into place.
- 16 Close the right and front doors.
- 17 When the printer control panel displays READY, reprint the print job to verify the repetitive defect has been eliminated.

If cleaning does not eliminate the repetitive defect, contact a local authorized HP dealer or service representative for service.

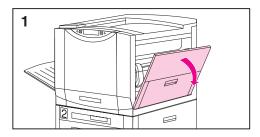

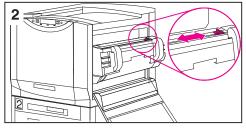



Cleaning the Post Charger


Clean the post charger on the transfer drum if there are light streaks in halftone areas.


To clean the post charger

- 1 Open the right upper door.
- **2** Locate the post charger unit cleaner by the transfer drum handle.
- 3 Slide the post charger unit cleaner across the bar several times.
- 4 Push the cleaner back into place.
- **5** Close the right upper door.

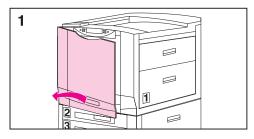

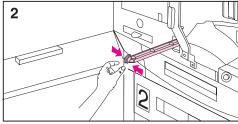

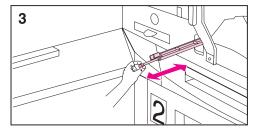

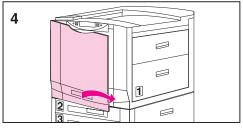

Cleaning the Transfer Charger

Clean the transfer charger when irregular wavy patterns appear in solid backgrounds.

To clean the transfer charger

- 1 Open the front door.
- **2** Find the knob below the transfer charger.
- 3 Pull the knob out and push it back in.
- 4 Close the front door.

Accessories, Options, and Related Products

As your printing and networking needs grow, you can increase the printer's capabilities by adding accessories and options. To order accessories or options for the printer, call HP's Direct Marketing Division (see the front of this guide for ordering information).

Part	Part Number	Type / Size
Memory	C2985A	Printer Hard Disk
	C7842A	Synchronous 8 MB DIMM ^a (SDRAM)
	C7843A	Synchronous 16 MB DIMM ^a (SDRAM)
	C7845A	Synchronous 32 MB DIMM ^a (SDRAM)
	C7846A	Synchronous 64 MB DIMM ^a (SDRAM)
EIO Accessories	J3110A	Ethernet 10 Base-T
	J3111A	Ethernet Combo (10 Base-T, BNC, and LocalTalk)
	J3112A	Token Ring
	J3113A	10/100 Base-TX
Paper Handling Accessories	C4782A	Duplexer
	C4785A	Multi-bin Mailbox ^b
	C4788A	Optional 3000-sheet Stapler/Stacker
	C4779A	Optional 3000-sheet Stacker

Part	Part Number	Type / Size
Printer Supplies	C4149A	Black Toner Cartridge
	C4150A	Cyan Toner Cartridge
	C4151A	Magenta Toner Cartridge
	C4152A	Yellow Toner Cartridge
	C4153A	Drum Kit Imaging Drum 2 Air Filters Hand Wipe
	C4154A	Transfer Kit Transfer Drum Transfer Belt Cleaning Roller Charcoal Filter Hand Wipe
	C4155A	110-Volt Fuser Kit Fuser Paper Rollers Hand Wipe
	C4156A	220-Volt Fuser Kit Fuser Paper Rollers Hand Wipe
Cables	C2946A	IEEE-1284 compliant parallel cable of 3 m (approximately 10 ft.) with 25-pin male/micro 36-pin male ("C" size) connector
	92215S	Macintosh DIN-8 printer cable
	92215N	HP LocalTalk Cable Kit
Media	C2934A	HP Color LaserJet Transparency (letter), 50 sheets
	C2936A	HP Color LaserJet Transparency (A4), 50 sheets
	C4179A	HP SoftGloss paper (letter), 200 sheets
	C4179B	HP SoftGloss paper (A4), 200 sheets

Part	Part Number	Type / Size
Reference Materials	5010-6394	HP LaserJet Printer Family Paper Specifications Guide
	5021-0337	PCL/PJL Technical Reference Package ^c

- a. You must install DRAM DIMMs in synchronized pairs, for example two 8 MB DIMMs.
- b. You must have a 2,000 sheet input tray (tray 4) installed in the printer in order to install a multi-bin mailbox.
- c. This package contains information on PCL and PJL.

A

DIMM Installation

Supported DIMMs


The printer supports the following types of DIMMs (dual inline memory modules):


- ROM
- Synchronous DRAM


EDO (extended data out) or Fast Page Mode DIMMs are not supported.


Installing DIMMs

The printer supports ROM (font) and synchronous DRAM (memory) DIMMs. ROM (font) DIMMs need not be installed in a specific configuration. DRAM (memory) DIMMs must be installed in synchronized pairs: two DIMMs with the same amount of DRAM (memory) are installed in slots such as 1 and 2 (see task 5 on page 209). A ROM (font) DIMM can be installed in slots 1 and 3, and slot 2 should be empty. However, ROM (font) DIMMs cannot be installed as pairs (in corresponding left and right slots).

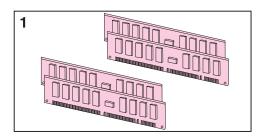

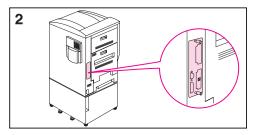


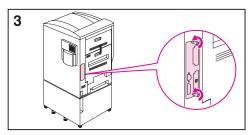


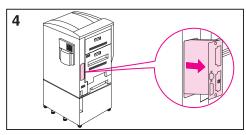


To install a DIMM


- 1 Synchronous DRAM (memory) DIMMs must be installed in pairs.
- 2 Print a configuration page. Next turn the printer off and disconnect it from its power source. Locate the formatter board on the left rear of the printer.
- 3 Loosen the two thumb screws by hand or with a #2 Phillips screwdriver.
- 4 Slide the formatter board out and lay it on a flat, grounded surface.

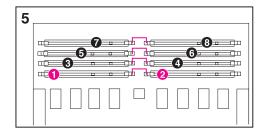


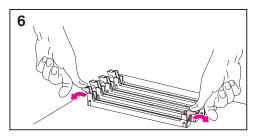


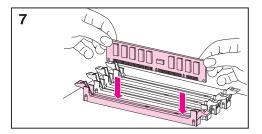

- 5 The DIMM slots are paired: 1-2, 3-4, 5-6, and 7-8. The ROM (font) DIMMs are placed in odd numbered slots. Place DIMMs in the next available slots.
- 6 Push the levers down as shown.
- 7 Match the notches on the DIMMs with the tabs on the connectors. Firmly push the DIMM into the slot until the levers lock. Repeat for each DIMM.

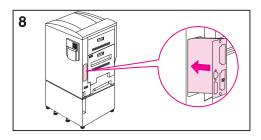

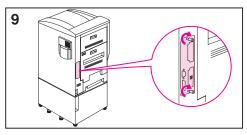

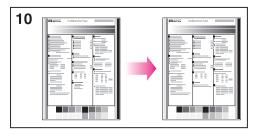

- 8 Insert the formatter board into the printer, ensuring that the edges of the board line up with the guides in the printer.
- **9** Tighten the thumb screws, reconnect the power, and turn on the printer.
- **10** Confirm installation: print a configuration page and compare it with the previous configuration page.

B Specifications

Electrical Specifications

	110-Volt Models	220-Volt Models
Power Requirements	100-127 V (+/- 10%)	220-240 V (+/- 10%)
	50/60 Hz (+/- 2 Hz)	50/60 Hz (+/- 2 Hz)
Power Consumption (typical)		
 During printing (black & white) 	750 W (average)	750 W (average)
 During printing (color) 	375 W (average)	375 W (average)
 During idle^a 	190 W (average)	190 W (average)
During Power Save mode	< 45 W	< 45 W
Minimum recommended circuit capacity for typical product	12.0 A at 120 V	6.0 A at 220 V

a. When the printer is in standby (off) mode, a minimal amount of energy is still consumed. Energy consumption can be eliminated by disconnecting the printer power cord from the power source.

Operating Environmental Specifications

Temperature Recommended Allowed	68 to 79° F (20 to 26° C) 59 to 86° F (15 to 30° C)
HumidityRecommendedAllowed	20 to 50% RH 10 to 80% RH
Altitude Allowed	0 to 10,000 ft (0 to 3,048 m)

Environmental Product Stewardship Program

Protecting the Environment

Hewlett-Packard Company is committed to providing quality products in an environmentally sound manner. This HP LaserJet printer has been designed with several attributes to minimize impacts on our environment.

This HP LaserJet printer design eliminates:

Ozone Production

This HP LaserJet printer contains an ozone filter to protect office air quality. See the maintenance section of this user guide for suggested replacement intervals.

This HP LaserJet printer design reduces:

Energy Consumption

Energy usage drops to less than 45 W while in low-power (Power Save) mode. Not only does this save natural resources, but it also saves money without affecting the high performance of this printer. This product qualifies for the ENERGY STAR program. ENERGY STAR is a voluntary program established to encourage the development of energy-efficient office products. ENERGY STAR is a U.S. registered service mark of the U.S. EPA.

As an ENERGY STAR partner, Hewlett-Packard Company has determined that this product meets ENERGY STAR Guidelines for energy efficiency.



Toner Consumption

EconoMode/Toner Miser uses significantly less toner, which may extend the life of the toner cartridge.

Paper Usage

This printer either has an optional duplexing accessory or one already built in. The printer's duplexing feature, which provides for two-sided printing, reduces paper usage and the resulting demands on natural resources. Depending on the type of software program in use, you can request for a number of pages of your document to be printed on one page of paper. This N-up printing practice and the printer's automatic/manual duplexing feature, which provides two-sided printing, can reduce paper usage and the resulting demands on natural resources.

The design of this HP LaserJet printer facilitates the recycling of:

Plastics

Plastic parts have markings according to international standards that enhance the ability to identify plastics for recycling purposes at the end of the printer's life.

HP Toner Cartridges/Photoconductive Drum

In many countries, this product's toner cartridge, photoconductive drum, transfer assembly, and fuser can be returned to HP at the end of each item's useful life. A prepaid shipping label and instructions on how to return the toner cartridge/drum are included with the replacement toner cartridge/drum. If your country is not listed in the replacement's brochure, see the HP Customer Care information in the front of this guide.

HP LaserJet Printing Supplies

In many countries, this product's printing supplies (e.g., toner cartridge, drum, fuser) can be returned to HP through the HP Planet Partners Printing Supplies Environmental Program. An easy to use and free takeback program is available in over 20 countries. Multi-lingual program information and instructions are included in every new HP LaserJet toner cartridge and consumables package.

HP Planet Partners Printing Supplies Environmental Program Information

Since 1990, the HP LaserJet Toner Cartridge Recycling Program has collected more than 25 million used LaserJet toner cartridges that otherwise may have been discarded in the world's landfills. The HP LaserJet toner cartridges and consumables are collected and bulk shipped to our resource and recovery partners who disassemble the cartridge. After a thorough quality inspection, selected parts such as nuts, screws, and clips are reclaimed for use in new cartridges. Remaining materials are separated and converted into raw materials for use by other industries to make a variety of useful products.

US Returns

For a more environmentally responsible return of used cartridges and consumables, HP encourages the use of bulk returns. Simply bundle two or more cartridges together and use the single, pre-paid, pre-addressed UPS label that is supplied in the package. For more information in the U.S., call (1) (800) (340-2445) or visit the HP LaserJet Supplies website at

http://www.ljsupplies.com/planetpartners/. For more information in Mexico, call 258-40-44 (Mexico City) or (1) (800) 900-7200 (outside Mexico City). Or, visit the website at http://www.hp.com/latinamerica. Non-US customers should call the local HP Sales and Service Office or visit the following websites for further information regarding availability of the HP Planet Partners LaserJet Toner Cartridge and Consumables Recycling Program.

Latin America: http://www.hp.com/latinamerica

Asia/Pacific Region: http://www.asiapac.hp.com/planp1.htm

Europe:

http://www.hp.com/pays/eur_supplies/english/planetpartners/

Paper

- This printer is suited for the use of recycled papers when the paper meets the guidelines outlined in the HP LaserJet Printer Family Paper Specifications Guide, HP part number 5010-6394. This printer is suited for the use of recycled paper according to DIN 19 309.
- The user guide is provided on CD-ROM, which allows the same high-quality information to be provided without consuming the large quantities of energy and natural resources required to produce traditional paper manuals.

Material safety data sheet

Material Safety Data Sheets (MSDS) can be obtained by contacting the HP LaserJet Supplies website at http://www.hp.com/go/msds. If you do not have access to the internet, call the U.S. HP FIRST (fax-on-demand service) at (1) (800) 231-9300. Use Index number 7 for a listing of the material safety data sheets. Non-US customers should refer to the front of this manual for appropriate HP FIRST phone numbers and information.

Regulatory Statements

FCC Regulations

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase separation between equipment and receiver.
- Connect equipment to an outlet on a circuit different from that to which the receiver is located.
- Consult your dealer or an experienced radio/TV technician.

Note

Any changes or modifications to the printer not expressly approved by HP could void the user's authority to operate this equipment.

Use of a shielded interface cable is required to comply with the FCC rules.

Canadian DOC Regulations

Complies with Canadian EMC Class A requirements.

<<Conforme á la classe A des normes canadiennes de compatibilité électromagnétiques. << CEM>>.>>

Declaration of Conformity

DECLARATION OF CONFORMITY

according to ISO/IEC Guide 22 and EN 45014

Manufacturer's Name: Hewlett-Packard Company
Manufacturer's Address: 11311 Chinden Boulevard

Boise, Idaho 83714-1021, USA

declares, that the product

Product Name: HP Color LaserJet 8550, 8550N, 8550GN, 8550GN, 8550MFP Model Number: C7096A, C7097A, C7098A, C7099A, C7835A, C7836A

Product Options: ALL

conforms to the following Product Specifications:

Safety: IEC 950:1991+A1+A2+A3+A4 / EN

60950:1992+A1+A2+A3+A4+A11

IEC 825-1:1993+A1 / EN 60825-1:1994+A11 Class 1 (Laser/LED)

CISPR 22:1997 / EN 55022:1998 Class A

EMC: EN 61000-3-2:1995

EN61000-3-3:1995

EN55024:1998

FCC Title 47 CFR, Part 15 Class A/ ICES-002, Issue 2

AS / NZS 3548:1995

Supplementary Information:

The product herewith complies with the requirements of the EMC Directive 89/336/EEC and the Low Voltage Directive 73/23/EEC, and carries the CE-Marking accordingly.

WARNING!

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Boise, Idaho USA May 1999

For regulatory topics only:

Australia Contact: Product Regulations Manager, Hewlett-Packard Australia Ltd., 31-41 Joseph

Street, Blackburn, Victoria 3130, Australia

European Contact: Your Local Hewlett-Packard Sales and Service Office or Hewlett-Packard

GmbH, Department HQ-TRE / Standards Europe, Herrenberger Strasse

110-140, D-71034 Böblingen (FAX: +49-7031-14-3143)

USA Contact: Product Regulations Manager, Hewlett-Packard Company, P.O. Box 15 Mail

Stop 160, Boise, ID 83707-0015 (Phone: 208-396-6000)

¹ The product was tested in a typical configuration with Hewlett-Packard Personal Computer Systems.

² This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two Conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

DECLARATION OF CONFORMITY

according to ISO/IEC Guide 22 and EN 45014

Manufacturer's Name: Hewlett-Packard Company

Manufacturer's Address: Montemorelos #299

Guadalajara Jalisco, 45060

México

declares, that the

product

Product Name: Duplexer Model Number: C4782A Product Options: ALL

conforms to the following Product Specifications:

Safety: IEC 950:1991+A1+A2+A3+A4 / EN

60950:1992+A1+A2+A3+A4+A11

IEC 825-1:1993+A1 / EN 60825-1:1994+A11 Class 1

(Laser/LED)

EMC:

CISPR 22:1997 / EN 55022:1998 Class B1

EN 61000-3-2:1995 EN 61000-3-3:1995 EN 55024:1998

FCC Title 47 CFR, Part 15 Class B² / ICES-002, Issue 2

AS / NZS 3548:1995

Supplementary Information:

The product herewith complies with the requirements of the EMC Directive 89/336/EEC and the Low Voltage Directive 73/23/EEC, and carries the CE-Marking accordingly.

¹ The product was tested in a typical configuration with Hewlett-Packard Personal Computer Systems.

² This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two Conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Guadalajara, Jalisco México May 1999

For regulatory topics only:

Australia Contact: Product Regulations Manager, Hewlett-Packard

Australia Ltd., 31-41 Joseph Street, Blackburn, Victoria

3130, Australia

European Contact: Your Local Hewlett-Packard Sales and Service Office or

Hewlett-Packard GmbH, Department HQ-TRE / Standards Europe, Herrenberger Strasse 110-140, D-71034 Böblingen (FAX: +49-7031-14-3143)

USA Contact: Product Regulations Manager, Hewlett-Packard

Company, P.O. Box 15 Mail Stop 160, Boise, ID

83707-0015 (Phone: 208-396-6000)

DECLARATION OF CONFORMITY

according to ISO/IEC Guide 22 and EN 45014

Manufacturer's Name: Hewlett-Packard Company Manufacturer's Address: Montemorelos #299

Guadalajara Jalisco, 45060

México

declares, that the

product

Product Name: 2000-Sheet Input Tray

Model Number: C4781A Product Options: All

conforms to the following Product Specifications:

Safety: IEC 950:1991+A1+A2+A3+A4 / EN

60950:1992+A1+A2+A3+A4+A11

IEC 825-1:1993+A1 / EN 60825-1:1994+A11 Class 1

(Laser/LED)

EMC: CISPR 22:1997 / EN 55022:1998 Class B¹

EN 61000-3-2:1995 EN 61000-3-3:1995 EN 55024:1998

FCC Title 47 CFR, Part 15 Class B2 / ICES-002, Issue 2

AS / NZS 3548:1995

Supplementary Information:

The product herewith complies with the requirements of the EMC Directive 89/336/EEC and the Low Voltage Directive 73/23/EEC, and carries the CE-Marking accordingly.

¹ The product was tested in a typical configuration with Hewlett-Packard Personal Computer Systems.

² This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Guadalajara, Jalisco México May 1999

For regulatory topics only:

Australia Contact: Product Regulations Manager, Hewlett-Packard

Australia Ltd., 31-41 Joseph Street, Blackburn, Victoria

3130, Australia

European Contact: Your Local Hewlett-Packard Sales and Service Office or

Hewlett-Packard GmbH, Department HQ-TRE / Standards Europe, Herrenberger Strasse 110-140, D-71034 Böblingen (FAX: +49-7031-14-3143)

USA Contact: Product Regulations Manager, Hewlett-Packard

Company, P.O. Box 15 Mail Stop 160, Boise, ID

83707-0015 (Phone: 208-396-6000)

VCCI Statement (Japan)

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

Korean EMI Statement

사용자 안내문 (A급 기기)

이 기기는 업무용으로 전자파장해 검정을 받은 기기 이오니, 만약 잘못 구입하셨 을 때에는구입한 곳에 세 비업무용으로 교환하시기 바랍니다.

Safety Information

Laser Safety

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration has implemented regulations for laser products manufactured since August 1, 1976. Compliance is mandatory for products marketed in the United States. This printer is certified as a "Class 1" laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. Since radiation emitted inside this printer is completely confined within protective housings and external covers, the laser beam cannot escape during any phase of normal user operation.

WARNING!

Using controls, making adjustments, or performing procedures other than those specified in this manual may result in exposure to hazardous radiation.

Product Information Sheet

The Toner Product Information Sheet can be obtained by calling the U.S. HP FIRST (Fax Information Retrieval Support Technology) at (1) (800) 333-1917. International customers should see the front of this manual for appropriate phone numbers and information.

Laser Statement for Finland

Luokan 1 laserlaite

Klass 1 Laser Apparat

HP Color LaserJet 8550, 8550N, 8550DN, 8550GN, 8550MFP laserkirjoitin on käyttäjän kannalta turvallinen luokan 1 laserlaite. Normaalissa käytössä kirjoittimen suojakotelointi estää lasersäteen pääsyn laitteen ulkopuolelle. Laitteen turvallisuusluokka on määritetty standardin EN 60825-1 (1994) mukaisesti.

Varoitus!

Laitteen käyttäminen muulla kuin käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

Varning!

Om apparaten används på annat sätt än i bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

HUOLTO

HP Color LaserJet 8550, 8550N, 8550DN, 8550GN, 8550MFP -kirjoittimen sisällä ei ole käyttäjän huollettavissa olevia kohteita. Laitteen saa avata ja huoltaa ainoastaan sen huoltamiseen koulutettu henkilö. Tällaiseksi huoltotoimenpiteeksi ei katsota väriainekasetin vaihtamista, paperiradan puhdistusta tai muita käyttäjän käsikirjassa lueteltuja, käyttäjän tehtäväksi tarkoitettuja ylläpitotoimia, jotka voidaan suorittaa ilman erikoistyökaluja.

Varo!

Mikäli kirjoittimen suojakotelo avataan, olet alttiina näkymättömälle lasersäteilylle laitteen ollessa toiminnassa. Älä katso säteeseen.

Varning!

Om laserprinterns skyddshölje öppnas då apparaten är i funktion, utsättas användaren för osynlig laserstrålning. Betrakta ej strålen.

Tiedot laitteessa käytettävän laserdiodin säteilyominaisuuksista:

Aallonpituus 775-795 nm Teho 5 mW Luokan 3B laser



Hewlett-Packard Limited Warranty Statement

HP PRODUCT

DURATION OF WARRANTY

HP Color LaserJet 8500, 8550N, 8550DN, 8550GN

1-year, on-site

Note

This section does not cover warranty specifications for the 8550MFP product. Please refer to the *HP Color LaserJet 8550MFP Copy Module User Guide*.

- HP warrants HP hardware, accessories and supplies against defects in materials and workmanship for the period specified above. If HP receives notice of such defects during the warranty period, HP will, at its option, either repair or replace products which prove to be defective. Replacement products may be either new or like-new.
- HP warrants that HP software will not fail to execute its
 programming instructions, for the period specified above,
 due to defects in material and workmanship when properly
 installed and used. If HP receives notice of such defects
 during the warranty period, HP will replace software media
 which does not execute its programming instructions due to
 such defects.
- HP does not warrant that the operation of HP products will be uninterrupted or error free. If HP is unable, within a reasonable time, to repair or replace any product to a condition as warranted, customer will be entitled to a refund of the purchase price upon prompt return of the product.
- HP products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.

- The warranty period begins on the date of delivery or on the date
 of installation if installed by HP. If customer schedules or delays
 HP installation more than 30 days after delivery, warranty begins
 on the 31st day from delivery.
- 6. Warranty does not apply to defects resulting from (a) improper or inadequate maintenance or calibration, (b) software, interfacing, parts or supplies not supplied by HP, (c) unauthorized modification or misuse, (d) operation outside of the published environmental specifications for the product, or (e) improper site preparation or maintenance.
- 7. TO THE EXTENT ALLOWED BY LOCAL LAW, THE ABOVE WARRANTIES ARE EXCLUSIVE AND NO OTHER WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED AND HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE.
- 8. HP will be liable for damage to tangible property per incident up to the greater of \$300,000 or the actual amount paid for the product that is the subject of the claim, and for damages for bodily injury or death, to the extent that all such damages are determined by a court of competent jurisdiction to have been directly caused by a defective HP product.
- 9. TO THE EXTENT ALLOWED BY LOCAL LAW, THE REMEDIES IN THIS WARRANTY STATEMENT ARE THE CUSTOMER'S SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL HP OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT. TORT, OR OTHERWISE.

FOR CONSUMER TRANSACTIONS IN AUSTRALIA AND NEW ZEALAND: THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

Index

- Value + key, illustration_28	background, dark 190
	beam error_132
Numerics	belt, illustration 124
	belt, replace frequency 126
11-by-17 inch size, print speeds 17	bidirectional, turn off communication_46
11-by-17 inch size, weights/types_61	bins, configuring output 42
12-by-18.5 inch size, weights/types_62	bins, face-down output 42
2,000 sheet input tray, default type 33	bins, face-up output 42
2,000 sheet input tray, features 18	bins, face-up output, illustration_22
2,000 sheet input tray, letterhead 86	bins, left output 42
2,000 sheet input tray, lights 24	bins, left output, illustration 22
2,000 sheet input tray, loading media_84	bins, selecting output 42
2,000 sheet input tray, media capacity 63	bins, top output_42
2,000 sheet input tray, media weights/sizes_63	black and white, print color as 112
2,000 sheet input tray, orienting media 79	black and white, print speeds 17
2,000 sheet input tray, printing from 85	black toner cartridges, illustration 124
2,000 sheet input tray, printing tips 86	black toner cartridges, ordering 204
2,000 sheet input tray, verifying installation_52	black toner cartridges, replace frequency 126
3000-sheet stacker, lights 24	bond paper, weights/sizes 61
3000-sheet stacker, media types 66, 67	booklet printing 103
3000-sheet stapler/stacker, lights_24	buttons, control panel 28
3000-sheet stapler/stacker, media types <u>67</u>	buttons, power, illustration 22
312-by-440 mm size, weights/types_61	battorio, powor, indutation <u></u>
A	C
A	C5 size, weights 62
A3 size, weights/types_61	cables, connection, illustration 23
A4 size, overriding with letter 44	Canada, DOC regulations 217
A4 size, print speeds 17	Cancel Job key, illustration 28
A4 size, weights/types_61	canceling print job, key 28
A5 size, types/sizes_61	canceling print job, message 138
abort, print job <u>28</u>	card stock, duplexing 190
access, denied 138	card stock, printing from tray 1_77
accessories, features 19	card stock, weights/sizes 61
accessories, ordering 204	carousel, will not rotate 175
adjusting color balance 118	cartridges, error 147
adjusting paper guides in tray 4 <u>84</u>	
adjusting paper guides in trays 2 or 3_80	cartridges, ordering <u>204</u> cartridges, recycling <u>214</u>
air filters, illustration_124	cartridges, replace 155
air filters, ordering 204	<u> </u>
air filters, replace frequency_126	changing control panel settings 29
Attention light, illustration_29	changing orientation 73
auto continue, setting 39	charcoal filter, illustration 124
automatic PANTONE matching 113	charcoal filter, ordering 204
automatic paper override setting 33	charcoal filter, replacement frequency 126
automatic switching of personalities 47	cleaning roller, illustration_124
	cleaning roller, ordering 204
В	cleaning roller, replace frequency_126
B4 size, weights/types_61	cleaning, density sensor_197
B5 size, weights/types 61	cleaning, post charger 202
WOIGHTO/ LYPOU VI	CIRCUIDA TODRI TOTO ISOTIC 167

cleaning, transfer charger 203	compatibility mode, switching to 46
cleaning, transfer drum 198	configuration page, cannot print 180
clearable warnings defaults 33	configuration page, consumables percent remaining
C-Link connector, illustration 23	<u>52</u>
CMS <u>112</u>	configuration page, interpreting <u>52</u>
CMYK ink set emulation 113	configuration page, printing 51
cold reset, message 142	configuration page, printing continuous 51
cold reset, performing 49	configuration, verifying color adjustments 53
color adjustments, verifying <u>53</u>	configuration, verifying control panel lock 52
color balance test page, printing 118	configuration, verifying control panel password 52
color calibration 53	configuration, verifying DIMMs_52
color carousel, will not rotate 175	configuration, verifying duplexer <u>52</u>
Color Management Systems 112	configuration, verifying hard disk 52
Color Swatch, printing 115	configuration, verifying hard disk lock 52
Color Test Page, printing 118	configuration, verifying input trays 52
color toner carousel, will not rotate 175	configuration, verifying memory <u>52</u>
color toner cartridges, illustration 124	configuration, verifying multi-bin mailbox_52
color toner cartridges, replace frequency 126	configuration, verifying tray 1_52
colors, adjusting balance 118	configuration, verifying tray 4_52
colors, adjusting settings_111	configuration, verifying trays 2 and 3_52
colors, adjustment_111	configurations, printer_20
colors, cannot select in application 182	configuring the printer, network_57
colors, ColorSmart II settings 110	configuring, consumable out response 45
colors, ColorSync_112	configuring, control panel 38
colors, controlling output with drivers 109	configuring, control panel display language 50
colors, dark transparencies 193	configuring, display language 50
colors, Detail settings 111	configuring, input trays 40
colors, do not match screen colors 185	configuring, media trays_40
colors, dull transparencies 193	configuring, media type/size_40
colors, Halftone settings 111	configuring, menus 38
colors, ICC_112	configuring, multi-bin mailbox 42
colors, management systems 112	configuring, output bin 42
colors, Manual settings 111	configuring, paper type/size_40
colors, media 61	configuring, parallel advanced functions 46
colors, media specifications 72	configuring, Power Save 46
colors, missing 185	configuring, RAM_57
colors, PANTONE settings 115	configuring, toner low response 45
colors, print as black 186	connector, C-Link, illustration 23
colors, print speeds 17	connector, parallel, illustration 23
colors, printing problems 185	connector, tray 4, illustration 23
colors, ramps 119	connectors, communication cable, illustration 23
colors, Screen Match settings 111	connectors, EIO_23
colors, selecting 115	connectors, network 23
colors, settings 114	connectors, power, illustration 23
colors, Smooth settings 111	consumables, continue if low 45
colors, sRGB 111	consumables, illustration_124
colors, transparency settings 111	consumables, ordering 204
colors, using colors 110	consumables, recycling 127
colors, verifying color adjustment settings <u>53</u>	consumables, replace frequency_125
colors, Vivid settings 111	consumables, selecting out response 45
ColorSmart II, settings_110	consumables, stop if low_45
ColorSync, settings 112	continue, consumables if low 45
commands, printer error 134	control panel, buttons 28
Commercial 10 size, weights/sizes_62	control panel, changing values <u>28</u>
communication cables, illustration 23	control panel, display language 50
communication, turn off bidirectional 46	control panel, display language 30 control panel, features 28
communication, turn on bidirectional 40	control pariel, leatures <u>20</u>

control panel, forgotten password 49	defaults, PCL settings 34
control panel, illustration 28	defaults, PCL symbol set 34
control panel, keys <u>28</u>	defaults, personality 33
control panel, lights 28	defaults, pitch 34
control panel, locking 49	defaults, point size 34
control panel, menus 28	defaults, PostScript as personality 47
control panel, message display 28	defaults, Power Save_33
control panel, messages 129	defaults, print errors_33
control panel, messages not showing 173	defaults, printer personality 33
control panel, moving through items 29	defaults, Printing Menu 34
control panel, setting password 49	defaults, Private/Stored Jobs Menu_32
control panel, settings work incorrectly 179	defaults, Quick Copy Jobs Menu 32
control panel, using menus 30	defaults, Registration Duplex Menu_35
control panel, verifying lock <u>52</u>	defaults, Resets Menu 35
control panel, verifying password <u>52</u>	defaults, resolution 32
copies, default setting 33	defaults, selecting printer personality 47
curled output, causes 171, 172	defaults, settings 34
customer support 3	defaults, symbol set 34
custom-sized media, printing from tray 1_77	defaults, toner low response_33
custom-sized media, weights/types_61	defects, repeated printed 195
cyan toner cartridges, ordering 204	deleting a held job 97
cyan toner cartridges, replace frequency 126	demonstration page, printing 51
	density sensor, cleaning 197
D	density settings, verifying 53
Data light, illustration 29	depth, printer_123
data, printer not receiving 175	Detail Halftone Adjust page, printing 118
declaration of conformity 218	Detail settings 111
defaults, binding 33	digital cameras, using images 116
defaults, clearable warnings 33	DIMMs, EDO 207
defaults, Color Adjust Menu 36	DIMMs, errors 133
defaults, Configuration Menu_33	DIMMs, Fast Page Mode 207
defaults, control panel messages <u>33</u>	DIMMs, features 18
defaults, copies <u>34</u>	DIMMs, increasing printer memory <u>56</u>
defaults, Courier 34	DIMMs, installation 208
defaults, duplex 33	DIMMs, supported 207
defaults, factory 32	DIMMs, types supported 207
defaults, font number 34	DIMMs, verifying configuration <u>52</u>
defaults, font source 34	DL size, weights 62
defaults, I/O Menu 35	DOC regulations, Canadian 217
defaults, I/O timeout <u>35</u>	doors, front, illustration_22
defaults, Information Menu_32	doors, lower left, illustration 23
defaults, manual feed 33	doors, lower right, illustration_22
defaults, media types/sizes 33	doors, media transfer, illustration 24
defaults, orientation 34	doors, upper left, illustration_23
defaults, override A4 with letter 33	doors, upper right, illustration_22
defaults, override letter with A4_33	dots per inch, digital cameras 116
defaults, paper destination 33	dots per inch, graphics_116
defaults, Paper Handling Menu_33	dots per inch, printer default 32
defaults, paper override 33	dots per inch, scanners_117
defaults, paper types/sizes_34	Double Post Card size, weights 62
defaults, parallel advanced functions 35	double-sided printing, default 33
defaults, PCL as personality <u>47</u>	double-sided printing, error_145
defaults, PCL as personality <u>47</u> defaults, PCL font number <u>34</u>	double-sided printing, orienting in tray 178
defaults, PCL font source 34	double-sided printing, orienting in tray 479
defaults, PCL pitch 34	double-sided printing, orienting in trays 2 and 379
defaults, PCL pitch 34 defaults, PCL point size 34	dpi, digital cameras 116
ueiauns, FOL puin size <u>s4</u>	

dpi, graphics 116	enhanced input/output, connection_23
dpi, printer default 32	enhanced input/output, features_18
dpi, scanners 117	enhanced input/output, numbered errors 130
DRAM, DIMMs <u>207</u>	enhanced input/output, unnumbered errors 145
DRAM, error 136	envelopes, jam <u>171</u>
drum kit, errors 144	envelopes, loading in tray 1.75
drum kit, ordering 204	envelopes, printing on 76
drum kit, replace frequency 126	envelopes, specifications 69
drums, imaging, illustration 124	envelopes, weights/sizes_62
drums, transfer, illustration 124	envelopes, will not feed 171
dual inline memory modules, EDO 207	Environmental Product Stewardship Program 213
dual inline memory modules, errors 133	environments, saving printer <u>57</u>
dual inline memory modules, Fast Page Mode 207	error log, printing 51
dual inline memory modules, features 18	error messages 129
dual inline memory modules, increasing printer	error messages, not showing 173
memory <u>56</u>	error, internal memory 136
dual inline memory modules, slot configuration 207	error, memory 150
dual inline memory modules, supported 207	errors, print PostScript 33
dual inline memory modules, types supported 207	event log, printing 51
dual inline memory modules, verify configuration 52	executive size, print speeds_17
duplex registration 52, 54	executive size, weights/types_61
duplexer, error_145	expanding, memory <u>56</u>
duplexer, features 18	extended data out, DIMMs_207
duplexer, illustration_24	
duplexer, media types_65	F
duplexer, media weights/sizes_65	face-up output bin, illustration 22
duplexer, ordering 204	factory defaults 32
duplexer, verify installation <u>52</u>	fan, failure 135
duplexing, card stock 190	Fast Page Mode, DIMMs 207
duplexing, default 33	FCC, regulations 217
duplexing, error 145	features, accessories 19
duplexing, heavy paper_190	features, control panel 28
duplexing, manual 190	features, DIMMs_18
duplexing, orienting in tray 1.78	features, duplexer_18
duplexing, orienting in tray 4 <u>79</u>	features, EIO 18
duplexing, orienting in trays 2 and 379	features, hard disk 19
dynamic random-access memory, DIMMs 207	features, memory 18
dynamic random-access memory, error 136	features, multi-bin mailbox 19
	features, print speeds_17
E	features, printer <u>17</u>
ECP port, transmitting data across 46	features, printer personalities 18
EDO, DIMMs 207	features, tray 4 <u>18</u>
EIO slot 1, illustration_23	features, user interface_18
EIO slot 2, illustration_23	file directory page, printing 51
EIO, connection 23	filters, air, illustration_124
EIO, features_18	filters, charcoal, illustration_124
EIO, numbered errors 130	filters, replace frequency 126
EIO, unnumbered errors <u>145</u>	Finland, laser statement 226
electrical specifications 211	fonts, cannot select in application 181
EMI statement, Korean regulations 224	fonts, incorrect on printout 183
emulation, CMYK ink set emulation 113	fonts, numbers, PCL defaults 34
energy consumption 213	fonts, printer features 18
Energy Star program 213	fonts, saving downloaded 57
engine test 145	fonts, sources, PCL defaults 34
enhanced input/output slot 1, illustration 23	frequency, air filter replacement 125
enhanced input/output slot 2, illustration_23	frequency, charcoal filter replacement 125

frequency, cleaning roller replacement 125	1
frequency, drum kit replacement 125	I/O, default timeout 35
frequency, fuser kit replacement 126	I/O, resetting 153
frequency, fuser replacement 126	I/O, setting timeout 48
frequency, imaging drum replacement 125	ICC, settings 112
frequency, paper rollers replacement 126	images, using digital camera_116
frequency, toner cartridges replacement 126	imaging drum, error 148
frequency, transfer belt replacement 125	imaging drum, illustration_124
frequency, transfer drum replacement 125	imaging drum, industration 124
frequency, transfer kit replacement 125	
front door, illustration 22	imaging drum, recycling 214
fuser kit, ordering 204	imaging drum, replace frequency 126 Information Menu, cannot select 179
fuser kit, replace frequency 126	
fuser, error_132	input trays, illustration_22
fuser, illustration 124	input trays, lights 24
fuser, indication 124 fuser, ordering 204	input trays, paper sizes supported 18
	input trays, verifying configuration 52
fuser, replacement frequency 126	input/output, default timeout 35
	input/output, resetting 153
G	input/output, setting timeout_48
gauge, HP TonerGauge 88	ISO B5 size, weights/types_61
glossy media, printing from tray 1_77	
glossy media, weights/sizes_61	J
glossy media, will not feed 170	Japan, VCCI statement_224
Go key, illustration 28	JetSend, installing 105
graphics, resolution 116	JIS B4 size, weights/types 61
graphics, using scanners 117	JIS B5 size, weights/types_61
<u> </u>	JPOSTD size, weights 62
	or Corb size, weights oz
H .	•
H	-
halftone, settings_111	K
halftone, settings <u>111</u> hand wipe, ordering <u>204</u>	K keys, control panel 28
halftone, settings <u>111</u> hand wipe, ordering <u>204</u> hard disk, failure <u>143</u>	K
halftone, settings <u>111</u> hand wipe, ordering <u>204</u> hard disk, failure <u>143</u> hard disk, features <u>19</u>	K keys, control panel 28
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56	K keys, control panel 28
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152	K keys, control panel 28 Korea, EMI statement 224 L
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 heavy media, printing on backside 104	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225
halftone, settings_111 hand wipe, ordering_204 hard disk, failure_143 hard disk, features_19 hard disk, increasing printer memory_56 hard disk, initializing_152 hard disk, ordering_204 hard disk, storing data on_56 hard disk, verifying installation_52 hard disk, verifying lock_52 heavy media, printing on backside_104 heavy paper, duplexing_190	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, printing from tray 1,77	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, specifications 70	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, printing from tray 1,77	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, specifications 70	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, specifications 70 heavy paper, weights/sizes 61	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23 left doors, upper, illustration 23
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, specifications 70 heavy paper, weights/sizes 61 height, printer 123	keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23 left doors, upper, illustration 23 left output bin, illustration 22
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, printing from tray 1,77 heavy paper, specifications 70 heavy paper, weights/sizes 61 height, printer 123 help, using online 129	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23 left doors, upper, illustration 23 left output bin, illustration 22 legal size, print speeds 17
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, printing from tray 1,77 heavy paper, specifications 70 heavy paper, weights/sizes 61 height, printer 123 help, using online 129 HP ColorSmart II, settings 110	keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23 left doors, upper, illustration 23 left output bin, illustration 22 legal size, print speeds 17 legal size, weights/types 61
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, printing from tray 1,77 heavy paper, specifications 70 heavy paper, weights/sizes 61 height, printer 123 help, using online 129 HP ColorSmart II, settings 110 HP Customer Care Centers 10	K keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23 left doors, upper, illustration 23 left output bin, illustration 22 legal size, print speeds 17 legal size, weights/types 61 letter size, override with A4 44
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, printing from tray 1,77 heavy paper, specifications 70 heavy paper, weights/sizes 61 height, printer 123 help, using online 129 HP ColorSmart II, settings 110 HP Customer Care Centers 10 HP LaserJet Resource Manager 106 HP LaserJet Utility 107	k keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23 left doors, upper, illustration 23 left output bin, illustration 22 legal size, print speeds 17 legal size, weights/types 61 letter size, override with A4 44 letter size, print speeds 17
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, printing from tray 1_77 heavy paper, specifications 70 heavy paper, weights/sizes 61 height, printer 123 help, using online 129 HP ColorSmart II, settings 110 HP Customer Care Centers 10 HP LaserJet Resource Manager 106 HP LaserJet Utility 107 HP support services 3	keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23 left doors, upper, illustration 23 left output bin, illustration 22 legal size, print speeds 17 legal size, weights/types 61 letter size, override with A4 44 letter size, print speeds 17 letter size, weights/types 61
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, printing from tray 1_77 heavy paper, specifications 70 heavy paper, weights/sizes 61 height, printer 123 help, using online 129 HP ColorSmart II, settings 110 HP Customer Care Centers 10 HP LaserJet Resource Manager 106 HP LaserJet Utility 107 HP support services 3 HP TonerGauge 88	keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23 left doors, upper, illustration 23 left output bin, illustration 22 legal size, print speeds 17 legal size, weights/types 61 letter size, override with A4 44 letter size, print speeds 17 letter size, weights/types 61 letterhead, printing from tray 4 86
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, printing from tray 1,77 heavy paper, specifications 70 heavy paper, weights/sizes 61 height, printer 123 help, using online 129 HP ColorSmart II, settings 110 HP Customer Care Centers 10 HP LaserJet Resource Manager 106 HP LaserJet Utility 107 HP support services 3 HP TonerGauge 88 HP TonerGauge, resetting 127	keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23 left doors, upper, illustration 23 left output bin, illustration 22 legal size, print speeds 17 legal size, weights/types 61 letter size, override with A4 44 letter size, print speeds 17 letter size, weights/types 61 letterhead, printing from tray 4 86 letterhead, printing from trays 2 and 3 83
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, printing from tray 1_77 heavy paper, specifications 70 heavy paper, weights/sizes 61 height, printer 123 help, using online 129 HP ColorSmart II, settings 110 HP Customer Care Centers 10 HP LaserJet Resource Manager 106 HP LaserJet Utility 107 HP support services 3 HP TonerGauge 88	keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23 left doors, upper, illustration 23 left output bin, illustration 22 legal size, print speeds 17 legal size, weights/types 61 letter size, override with A4 44 letter size, print speeds 17 letter size, weights/types 61 letterhead, printing from tray 4 86 letterhead, printing from trays 2 and 3 83 letterhead, specifications 68
halftone, settings 111 hand wipe, ordering 204 hard disk, failure 143 hard disk, features 19 hard disk, increasing printer memory 56 hard disk, initializing 152 hard disk, ordering 204 hard disk, storing data on 56 hard disk, verifying installation 52 hard disk, verifying lock 52 hard disk, verifying lock 52 heavy media, printing on backside 104 heavy paper, duplexing 190 heavy paper, printing from tray 1,77 heavy paper, specifications 70 heavy paper, weights/sizes 61 height, printer 123 help, using online 129 HP ColorSmart II, settings 110 HP Customer Care Centers 10 HP LaserJet Resource Manager 106 HP LaserJet Utility 107 HP support services 3 HP TonerGauge 88 HP TonerGauge, resetting 127	keys, control panel 28 Korea, EMI statement 224 L labels, print speeds 17 labels, specifications 71 labels, weights/sizes 62 languages, control panel display 50 laser, safety 225 laser, statement for Finland 226 LaserJet Resource Manager 106 ledger size, print speeds 17 ledger size, weights/types 61 left doors, lower, illustration 23 left doors, upper, illustration 23 left output bin, illustration 22 legal size, print speeds 17 legal size, weights/types 61 letter size, override with A4 44 letter size, print speeds 17 letter size, weights/types 61 letterhead, printing from tray 4 86 letterhead, printing from trays 2 and 3 83

lights, 3000-sheet Stapler/Stacker 24 lights, Attention 29 lights, Data 29 lights, multi-bin mailbox 24 lights, Ready 29 lights, tray 4 24 loading, envelopes in tray 1 75	media, maximum size 18 media, ordering 204 media, orienting in tray 1 78 media, orienting in tray 4 79 media, orienting in trays 2 and 3 79 media, printing from tray 1 74 media, printing from trays 2 and 3 82
loading, media in tray 1 <u>74</u>	media, request types/sizes_157
loading, media in tray 4 <u>84</u>	media, specifications <u>59</u>
loading, media in trays 2 and 3_80	media, to avoid 72
locating, consumables 124 locking, control panel 49	media, type/size override 43 media, types supported 60
locking, verifying control panel <u>52</u>	media, unexpected size 131
log, printing error 51	media, using recycled 215
log, printing event 51	media, weights/sizes 60
lower left door, illustration 23	media, will not feed 168
lower right door, illustration_22	memory, error 150
	memory, expanding <u>56</u>
M	memory, features 18
Mac OS, color settings 112	memory, insufficient_130
Mac OS, Color Settings 112	memory, internal error_136
Macintosh, color settings 112	memory, optional hard disk 56
Macintosh, ColorSync_112	memory, standard printer <u>56</u>
magenta toner cartridges, ordering 204	memory, verifying installation_52
magenta toner cartridges, replace frequency 126	Menu key, illustration_28
maintenance, density sensor 197	menu maps, printing 51
maintenance, making room for 123	menus, control panel 28
manual feed, default 33	menus, printing maps 37
maps, printing menu <u>37</u>	menus, restoring settings 154
Material safety data sheet, obtaining 216	menus, using control panel 30
measurements, printer <u>123</u>	messages, control panel 129 messages, display 28
measurements, space for printer 123	messages, not showing 173
media guides, adjusting in tray 4 <u>84</u>	missing colors 185
media guides, adjusting in trays 2 or 3_80	Monarch size, weights 62
media jams, causes 165	multi-bin mailbox, configuring 42
media jams, duplexer 139	multi-bin mailbox, features 19
media jams, fuser 139	multi-bin mailbox, lights 24
media jams, locations_163 media jams, transfer_141	multi-bin mailbox, media capacity 63
media jams, troubleshooting 165	multi-bin mailbox, media types 63
media transfer door, illustration 24	multi-bin mailbox, media weights/sizes_63
media trays, illustration 22	multi-bin mailbox, ordering 204
media trays, lights_24	multi-bin mailbox, verifying installation <u>52</u>
media trays, paper sizes supported 18	multiple pages on one sheet 92
media trays, verifying configuration 52	multiple sheets, causes of feeding 167
media trays, verifying installation <u>52</u>	
media, capacity of trays 60	N
media, clearing from printer_142	network, configuring the printer_57
media, configuring types/sizes_40	networking, connections_23
media, default destination <u>33</u>	neutral axis_119
media, default override 33	nonvolatile random-access memory, full 137
media, default size 34	n-up printing 92
media, incorrect size fed 167	NVRAM, full <u>137</u>
media, loading in tray 1 <u>74</u>	
media, loading in tray 2.2 and 3.80	0
media, loading in trays 2 and 3_80	on/off switch, illustration_22

online help, using 129	paper, orienting in trays 2 and 3 79
online, bringing printer <u>28</u>	paper, printing from tray 1 <u>74</u>
operating environmental specifications 212	paper, printing from trays 2 and 382
ordering, accessories and options 204	paper, request types/sizes_157
ordering, consumables 204	paper, selecting by size and type 89
ordering, supplies_204	paper, specifications 59
orientation, changing 73	paper, to avoid 72
orientation, default 34	paper, type/size override 43
orienting, media in tray 1_78	paper, types supported 60
orienting, media in tray 4.79	paper, unexpected size 131
orienting, media in trays 2 and 3_79	paper, using recycled 215
output bins, face-down 42	paper, weights/sizes_60
output bins, face-up_42	paper, will not feed 168
output bins, left_42	parallel connector, illustration 23
output bins, selecting 42	parallel, default advanced functions 35
output bins, top 42	parallel, ordering cable 204
output, curled or wrinkled 171, 172	parallel, setting advanced functions 46
overriding, A4 with letter 44	parts, consumables, illustration 124
overriding, A4 with letter default_33	passwords, forgotten 49
overriding, letter with A4_44	passwords, setting control panel 49
overriding, letter with A4 default_33	passwords, verifying configuration_52
overriding, media type/size_43	PCL, default settings 34
overhaling, media type/size_45	PCL, firmware date code <u>52</u>
_	PCL, font list, printing 51
P	PCL, font number 34
pages per minute, for media types/sizes_17	PCL, font source 34
pages, number printed <u>52</u>	PCL, pitch 34
pages, printed since color adjustment <u>53</u>	PCL, point size 34
PANTONE settings 115	PCL, selecting <u>47</u>
PANTONE, automatic matching 113	PCL, symbol sets <u>34</u>
paper guides, adjusting in tray 4 <u>84</u>	personality, defaults 33
paper guides, adjusting in trays 2 or 380	photoconductive drum, error 148
paper jams, causes <u>165</u>	photoconductive drum, error 124
paper jams, duplexer <u>139</u>	photoconductive drum, ordering 204
paper jams, fuser <u>139</u>	photoconductive drum, recycling 214
paper jams, locations <u>163</u>	photoconductive drum, replace frequency 126
paper jams, transfer 141	photographs, using digital cameras 116
paper jams, troubleshooting 165	pitch, PCL default settings 34
paper rollers, replacement frequency 126	PJL, error 151
paper trays, illustration_22	plain paper, weights/sizes 60
paper trays, lights <u>24</u>	plastics, recycling 214
paper trays, paper sizes supported 18	point sizes, PCL default settings 34
paper trays, verifying configuration_52	post charger, cleaning 202
paper, capacity of trays 60	PostScript, file will not print 178
paper, clearing from printer 142	PostScript, selecting 47
paper, configuring types/sizes_40	
paper, default destination 33	power button, illustration_22 power connector, illustration_23
paper, default override 33	Power Save, defaults_33
paper, default size 34	•
paper, incorrect size fed_167	Power Save, setting time 46 power switch, illustration 22
paper, loading in tray 1 <u>74</u>	
paper, loading in tray 4 <u>84</u>	power, consumption_213
paper, loading in trays 2 and 3_80	PPM, for media types/sizes_17
paper, multiple pages on one sheet 92	preprinted forms, specifications 68
paper, ordering 204	preprinted forms, weights/sizes_61
paper, orienting in tray 1.78	prepunched paper, weights/sizes 61
paper, orienting in tray 4 <u>79</u>	print jobs, canceling 28

print jobs, delayed_48	punched paper, weights/sizes_61
print jobs, incomplete 48	
print quality, problems_187	Q
print speeds, factors affecting 19	quick copying, print job 95
print speeds, for media types/sizes_17	quick sets, creating and using 93
printer driver, different first page 91	quient const, er canning anna acunig <u>a c</u>
printer driver, multiple pages on one sheet 91, 92	R
printer driver, selecting paper by size and type 89, 91	
printer messages 129	RAM, configuring <u>57</u>
printer messages, not showing 173	RAM, internal error_136
printer personalities, features 18	ramp, color 119
printer personalities, selecting default 47	random-access memory, configuring <u>57</u>
printer stand, illustration 22	random-access memory, internal error 136
printer, configurations 20	read-only memory, DIMMs_207 Ready light, illustration_29
printing, backside of heavy media 104	recycled media, specifications 69
printing, booklet 103	recycled media, weights/sizes 61
printing, cannot print symbol set 183	recycled, paper using 215
printing, color balance test page 119	recycling, parts and supplies 214
printing, color problems_185	recycling, used consumables 127
printing, Color Swatch 115	regulations, Canadian DOC 217
printing, configuration page 51	regulations, declaration of conformity 218
printing, continuous configuration pages <u>51</u> printing, demonstration page <u>51</u>	regulations, FCC 217
printing, demonstration page <u>51</u> printing, Detail Halftone Adjust page <u>119</u>	regulations, Korean EMI statement 224
printing, drifting text_184	regulations, VCCI statement (Japan) 224
printing, envelopes <u>76</u>	replacing air filters, frequency 126
printing, erratic 183	replacing charcoal filter, frequency 126
printing, error log <u>51</u>	replacing cleaning roller, frequency 126
printing, event log 51	replacing consumables, frequency 125
printing, file directory page 51	replacing drum kit, frequency 126
printing, fonts incorrect 183	replacing fuser kit, frequency 126
printing, from tray 1_74	replacing fuser, frequency 126
printing, from tray 4_85	replacing imaging drum, frequency 126
printing, from trays 2 or 3_82	replacing paper rollers, frequency 126
printing, interrupted 183	replacing toner cartridge, frequency_126
printing, menu maps 37	replacing transfer belt, frequency 126
printing, partial pages 184	replacing transfer drum, frequency 126
printing, PCL font list 51	replacing transfer kit, frequency 126
printing, PostScript font list 51	reset, cold, message 142
printing, private job 99	reset, cold, performing 49
printing, PS font list 51	resolution, digital cameras 116
printing, quick copying 95	resolution, graphics 116
printing, repeated defects on page 195	resolution, printer default_32
printing, Smooth Halftone Adjust page 119	resolution, scanners 117
printing, storing print job_101	Resource Manager, HP LaserJet 106
printing, tips for tray 1_77	resource saving, configuring RAM <u>57</u>
printing, tips for tray 4 <u>86</u>	resource saving, setting 57
printing, tips for trays 2 and 3_83	resource saving, using <u>47</u>
printing, variable data_102	returning parts 215
private job, printing_99	right doors, lower, illustration 22
product information sheets, obtaining 225	right doors, upper, illustration 22
product numbers, verifying 52	rollers, cleaning, illustration 124
proof and hold, continuing jobs_97	rollers, cleaning, ordering 204
PS, file will not print 178	rollers, cleaning, replace frequency 126
PS, printing font list <u>51</u>	rollers, paper, replace frequency 126 rollers, paper, replacement frequency 126
PS, selecting <u>47</u>	ROM DIMMs_207

rotate, color toner carousel 175	sizes, printer <u>123</u>
	sizes, selecting media <u>40</u>
S	sizes, supported media 60
safety, laser_225	smears, toner 188
saving, downloaded fonts <u>57</u>	Smooth Halftone Adjust page, printing 118
saving, printer environments <u>57</u>	Smooth settings 111
scan buffer error 136	smudges toner 195
scanner error 132	software, JetSend_105
scanners, using images from 117	software, LaserJet Resource Manager 105, 106
Screen Match settings 1111	space, required for printer 123
	specifications, colored media_72
Select key, illustration 29	specifications, electrical 211
selecting Color Swatch_115	specifications, envelopes 69
selecting colors_115	specifications, heavy paper_70
selecting consumable out response 45	specifications, labels 71
selecting control panel display language 50	specifications, letterhead 68
selecting default printer personality <u>47</u>	specifications, media 59
selecting output bin_42	specifications, operating environmental 212
selecting PANTONE_115	specifications, preprinted forms 68
selecting PCL personality 47	specifications, recycled media 69
selecting PostScript personality <u>47</u> selecting Power Save <u>46</u>	specifications, transparencies_70
<u> </u>	speeds, print 17
sensor, cleaning density 197	speeds, print, factors affecting 19
serial numbers, verifying 52	spots, toner 192
service code, verifying 52	sRGB, colors_111
settings, adjusting color 114	stand, printer, illustration_22
settings, auto continue 39 settings, black and white printing 112	stop, consumables low 45
settings, changing control panel 29	stopping print job_28
	storing print job_101
settings, color adjustment 111	streaks, toner 189
settings, ColorSync_112 settings, consumable out response_45	streaks, transparencies 194
settings, control panel display language 50	supplies, ordering 204
settings, default printer personality <u>47</u>	support services <u>3</u>
settings, Detail 111	switch, power, illustration_22
settings, Betail 111 settings, Halftone 111	switching, compatibility mode 46
settings, HP ColorSmart II 110	switching, printer personalities 47
settings, I/O timeout 48	symbol sets, cannot print 183
settings, I/O timeout 40 settings, ICC_112	symbol sets, PCL default settings 34
settings, Manual color_111	
settings, manual color 1711 settings, parallel advanced functions 46	T
settings, Power Save_46	tabloid size, print speeds_17
settings, resource saving <u>57</u>	tabloid size, weights/types 61
settings, Screen Match_111	takeback program_214
settings, Smooth 111	time, setting Power Save 46
settings, onlocking in settings, toner low response 45	timeout, I/O default_35
settings, toner low response 111	toner cartridge, resetting HP TonerGauge_127
settings, transparencies 193	toner cartridges, error 147
settings, verifying memory 52	toner cartridges, ordering 204
settings, Vivid_111	toner cartridges, recycling 214
simplexing, orienting in tray 1.78	toner cartridges, replace 155
simplexing, orienting in tray 4.79	toner wipe, ordering 204
simplexing, orienting in trays 4 79 simplexing, orienting in trays 2 and 3 79	toner, banding 192
single-sided printing, orienting in tray 1.78	toner, carousel will not rotate 175
single-sided printing, orienting in tray 4 <u>79</u>	toner, cleaning from fabric 162
single-sided printing, orienting in tray 4 73 single-sided printing, orienting in trays 2 and 3 79	toner, dark background 190
sizes, configuring media 40	toner, irregular spots 192
ooo, oomigamig modic <u>ro</u>	133., 1110guiui opoto <u>102</u>

toner, lines 189	tray 2, default type 33
toner, low response default 33	tray 2, letterhead 83
toner, raised spots 192	tray 2, loading media_80
toner, setting low response 45	tray 2, media capacity 62
toner, smears 188	tray 2, media weights/sizes_62
toner, smudges <u>195</u>	tray 2, orienting media 79
toner, stray spots 192	tray 2, printing from 82
toner, streaks 189	tray 2, tips for printing 83
transfer belt, illustration 124	tray 2, transparencies 83
transfer belt, ordering 204	tray 3, adjusting media guides 80
transfer belt, replace frequency 126	tray 3, default type 33
transfer charger, cleaning 203	tray 3, illustration 22
transfer drum, cleaning 198	tray 3, letterhead 83
transfer drum, error 148	tray 3, loading media_80
transfer drum, illustration 124	tray 3, media capacity 62
transfer drum, ordering 204	tray 3, orienting media 79
transfer drum, replace frequency 126	tray 3, printing from_82
transfer kit, ordering 204	tray 3, tips for printing 83
transfer kit, replace frequency 126	tray 3, transparencies 83
transfer kit, replacing 156	tray 4 connector, illustration_23
transmitting data across ECP port_46	tray 4, default type_33
transparencies, dark areas 195	tray 4, features_18
transparencies, dark colors <u>193</u>	tray 4, letterhead 86
transparencies, dull colors <u>193</u>	tray 4, lights_24
transparencies, lines <u>195</u>	tray 4, loading media <u>84</u>
transparencies, ordering 204	tray 4, media capacity <u>63</u>
transparencies, print speeds_17	tray 4, media weights/sizes_63
transparencies, printing from tray 1_77	tray 4, orienting media 79
transparencies, printing from trays 2 and 3 <u>83</u>	tray 4, printing from 85
transparencies, rippled 194	tray 4, tips for printing 86
transparencies, settings 111	tray 4, verifying installation <u>52</u>
transparencies, specifications_70	trays, illustration 22
transparencies, streaks 194	trays, lights 24
transparencies, supported 60	trays, paper sizes supported 18
transparencies, using color 193	trays, verifying configuration <u>52</u>
transparencies, wavy 194	troubleshooting, basic steps 161
transparencies, weights/sizes 60, 62	TrueType fonts, supported 18
transparencies, will not feed 170	typefaces, cannot select in application 181
Tray 1 Auto 39	typefaces, incorrect on printout 183
tray 1, card stock <u>77</u> tray 1, custom-sized media <u>77</u>	typefaces, numbers, PCL defaults 34
tray 1, default type <u>33</u>	typefaces, printer features 18 typefaces, saving downloaded 57
tray 1, glossy paper <u>77</u>	typefaces, saving downloaded <u>37</u> typefaces, sources, PCL defaults <u>34</u>
tray 1, heavy paper 77	types, configuring media 40
tray 1, illustration_22	types, media_60
tray 1, loading envelopes <u>75</u>	types, media_ 00 types, selecting media_ <u>40</u>
tray 1, loading envelopes 15 tray 1, loading media 74	types, selecting media_40
tray 1, media capacity 61	11
tray 1, media weights/sizes_61	U
tray 1, orienting media 78	upper left door, illustration_23
tray 1, printing envelopes from 76	user interface, features 18
tray 1, printing from 74	using control panel menus 30
tray 1, printing tips 77	
tray 1, request type/size_157	V
tray 1, transparencies_77	Value key, illustration 28
tray 2, adjusting media guides 80	variable data printing 102
	VCCI statement (Japan) 224

```
verifying, color adjustments 53
verifying, consumable percent remaining 52
verifying, control panel lock 52
verifying, control panel password_52
verifying, DIMM configuration 52
verifying, duplexer installation 52
verifying, hard disk installation 52
verifying, hard disk lock 52
verifying, input tray configuration 52
verifying, input tray installation_52
verifying, memory installed 52
verifying, memory settings 52
verifying, multi-bin mailbox installation 52
verifying, number of pages printed_52
verifying, PCL firmware date code 52
verifying, product number 52
verifying, serial number 52
verifying, service code_52
verifying, tray 4 installation_52
Vivid, settings 111
W
warnings, control panel 129
warnings, not showing 173
warranties, printer_229
Web JetAdmin, locking control panel from 49
weights, media 60
width, printer 123
World Wide Web support 3
wrinkled output, causes 171, 172
yellow toner cartridges, ordering 204
```

yellow toner cartridges, replace frequency 126